



# Susol

## Smart Molded Case Circuit Breakers

Susol Smart MCCB, developed by combining digital technology with LS ELECTRIC's power equipment technology accumulated for more than 40 years, has functions for energy consumption and power management. Its relay and metering functions for line protection have been upgraded and it is possible to diagnose and maintain the device by collecting and analyzing data using an accessory device for connectivity.

The move towards energy digitalization is taking place in various fields. By applying Susol Smart MCCB to areas such as renewable energy, building, industry, EV charging infrastructure linked to low voltage, the LSIG relay function can safely protect the line.

### Special features of Susol Smart MCCB

- Relay setting with Fine-tuning available: LSIG (long-time, short-time, instantaneous, ground fault)
- High accuracy meter precision: current +1.0%, voltage +0.5%, power and wattage +2.0%
- Diagnosis and maintenance of equipment
- Reinforced communication function (mobile, RS485, etc.)



# C O N T E N T S

## Introduction to the product

Characteristics of Smart MCCB	04
Smart solution	16
Accessories	18

## Selection and ratings of circuit breaker

Ordering	20
Marking and configuration	22
Internal structure	24
Rating	26
Smart trip units	30

## Accessories

Electrical auxiliaries	56
External accessories	63
Wiring diagram	102
Standard accessories	103

## Characteristics curves, Dimensions and Mounting & Connection

Characteristics curves	106
Dimensions	116
Mounting & Connection	123



# Smart MCCB

Incorporating the cutting-edge digital technology ...

More powerful **Susol MCCB** line-up!

Icu 150kA, Ui 1000V, Uimp 8kV, Ics=100%Icu

## Susol Smart MCCB



Rated current : 40~250A  
Icu : 50kA(Ni), 85kA(Hi), 150kA(Li)

### TS100/160/250

105(W) x 160(H) x 86mm(D)

Rated current : 40~250A  
Icu : 50kA(N), 85kA(H), 150kA(L)



### TD100/160

90(W) x 140(H) x 86mm(D)

Rated current : 16~160A  
Icu : 50kA(N), 85kA(H), 150kA(L)



## Susol MCCB



Our Smart MCCBs are designed in the same sizes as the existing MCCBs.



Rated current : 250-630A  
Icu : 65kA(Ni), 85kA(Hi), 150kA(Li)

### TS400/630

140(W) x 260(H) x 110mm(D)

Rated current : 300~630A  
Icu : 65kA(N), 85kA(H), 150kA(L)



Rated current : 630, 800A  
Icu : 65kA(Ni), 100kA(Hi), 150kA(Li)

### TS800

210(W) x 320(H) x 135mm(D)

Rated current : 700, 800A  
Icu : 65kA(N), 100kA(H), 150kA(L)



### TS1600


210(W) x 327(H) x 152.5mm(D)

Rated current : 1000, 1250, 1600A  
Icu : 50kA(N), 70kA(H), 150kA(L)





**$U_{imp} 8kV, I_{cs} = 100\%I_{cu}$**

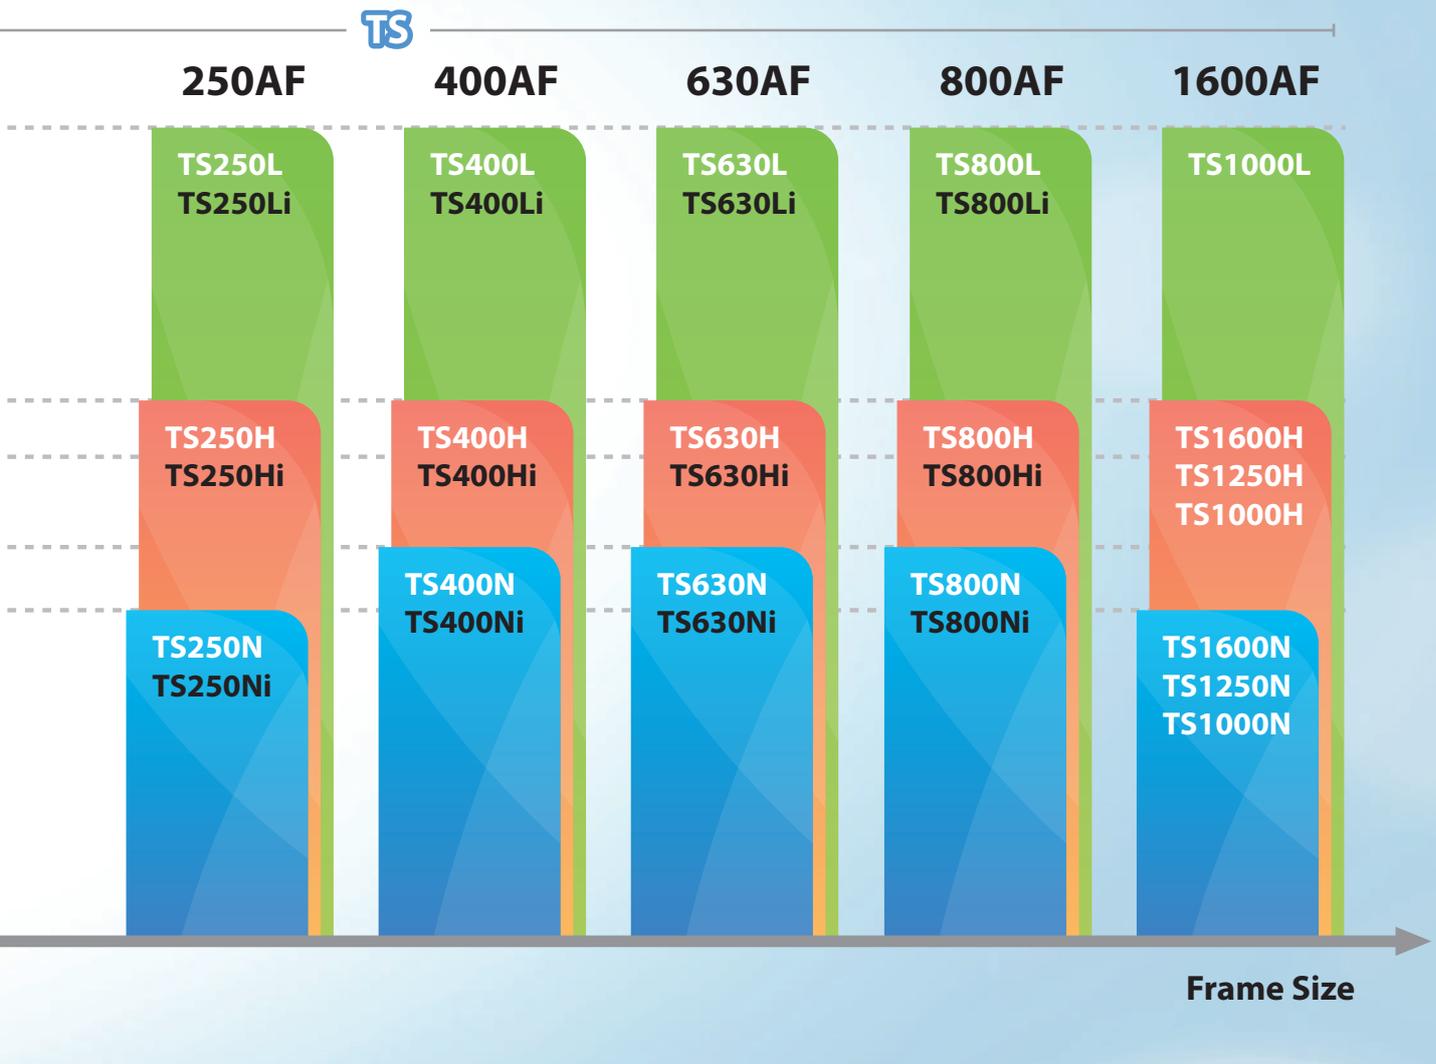

## Smart MCCB

# TS - Li / Hi / Ni series

Line-up 100 to 800AF

The same electrical performance and dimension as Susol MCCB

- Rated breaking capacity: 150kA@415V,  $I_{cu}=100\%I_{cs}$
- Rated insulation voltage: 1000V

### Smart trip units

- Relay setting with Fine-tuning available: LSIG (long-time, short-time, instantaneous, ground fault)
- High accuracy meter precision: current +1.0%, voltage +0.5%, power and wattage +2.0%
- Diagnosis and maintenance of equipment
- Reinforced communication function (mobile, RS485, etc.)





## Smart MCCB

### Electronic Smart



- **ETSi**  
Standard/LSIG relay, current measurement
- **ETMi**  
Multi-function/LSIG relay, current measurement, communication function
- **ETHi**  
High performance/LSIG relay, current/voltage/power measurement, communication function
- **ETLi**  
Limited performance/LSIG relay, power measurement, communication function, mobile communication

## MCCB

### Electronic



- **ETS**  
Standard(LSI)
- **ETM**  
Multi-function(LSIG)

**Susol** series

## Optimal solution

- Simplified product range 160/250/630/800/1600AF (5Frame)
- High performance 150kA ( $I_{cs} = I_{cu}$ )
- Various trip units
- Variable Accessories available
- Communication functions

•  **$I_{cu}$  150kA** •  **$U_i$  1000V** •  **$U_{imp}$  8kV** •  **$I_{cs}=100\%I_{cu}$**

### MCCB



#### Thermal magnetic

- **FTU**  
Fixed thermal,  
Fixed magnetic
- **FMU**  
Adjustable thermal,  
Fixed magnetic
- **ATU**  
Adjustable thermal,  
Adjustable magnetic

### MCCB



#### Magnetic only

### MCCB



#### Switch-Disconnectors

# Characteristics of Smart MCCB

## Smart MCCB

Incorporating the cutting-edge digital technology ...  
More powerful Susol MCCB line-up!

Icu 150kA, Ui 1000V, Uimp 8kV, Ics=100%Icu

Tripping device



Trip unit

- **ETSi**

Standard/LSIG relay, current measurement

- **ETHi**

High performance/LSIG relay, current/voltage/  
power measurement, communication function

- **ETMi**

Multi-function/LSIG relay, current measurement,  
communication function

- **ETLi**

Limited performance/LSIG relay, power measurement,  
communication function, mobile communication

### Characteristics of Susol Smart MCCB

- Relay setting with Fine-tuning available: LSIG (long-time, short-time, instantaneous, ground fault)
- High accuracy meter precision: current +1.0%, voltage +0.5%, power and wattage +2.0%
- Diagnosis and maintenance of equipment
- Reinforced communication function (mobile, RS485, etc.)

### Electronic trip device specification comparison

Type		Susol Smart MCCB				Susol MCCB	
		ETSi	ETMi	ETHi	ETLi	ETS	ETM
Frame size		250/ 630/ 800AF				250/ 630/ 800AF	630/ 800AF
Line protection	Long time, short circuit, instantaneous	■	■	■	■	■	■
	Ground fault	■	■	■	■	-	Option
Measurement information	Current	■	■	■	■	-	Option
	Voltage, frequency, power factor, energy, power quality, etc.	-	-	■	■	-	-
Device operation	System event, fault event (Up to 50)	-	■	■	■	-	Fault Trip
	Operating time, mechanical frequency, electrical frequency, trip frequency, load usage rate	-	■	■	■	-	-
	Contact wear rate	-	-	■	■	-	-
Communication	RS485	-	■	■	■	-	Option
	Mobile communication	-	-	-	■	-	-

• ETS/ ETSi : Standard    • ETM/ ETMi : Multi-Function    • ETHi : High-Performance    • ETLi : Limited-Performance



Rated current : 40~250A  
Icu : 50kA(Ni), 85kA(Hi), 150kA(Li)

### TS100/160/250

105(W) × 160(H) × 86mm(D)



Rated current : 250~630A  
Icu : 65kA(Ni), 85kA(Hi), 150kA(Li)

### TS400/630

140(W) × 260(H) × 110mm(D)



Rated current : 630, 800A  
Icu : 65kA(Ni), 100kA(Hi), 150kA(Li)

### TS800

210(W) × 320(H) × 135mm(D)

# Characteristics of Smart MCCB

## Susol Smart MCCB

Susol Smart MCCB was developed by incorporating digital technology based on the power equipment technology accumulated for over 40 years. The relay and meter functions for line protection have been upgraded, and data can be collected and analyzed using an accessory device for connectivity between low-voltage devices, enabling diagnosis and maintenance of devices.

LS ELECTRIC takes the lead for a smart future with energy digitalization.

### ETU of Susol Smart MCCB has

a variety of electronic trip units like basic type(ETSi) that measures current for each AF and rated current, an advanced type(ETMi) with communication function, and a high-end type(ETHi) that performs communication function and voltage measurement and ETLi type with mobile (BLE) communication.




Susol Smart MCCB

### Application field

The move towards energy digitalization is taking place in various fields. By applying Susol Smart MCCB to areas such as renewable energy, building, industry, EV charging infrastructure linked to low voltage, the LSIG relay function can safely protect the line.



Renewable energy

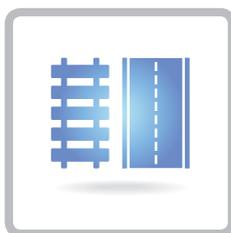

Infrastructure



Residential/commercial



Industrial



EV charging infrastructure

### Susol Breakers + Digital Technology



**Digitalization**

- Lower energy cost
- Higher efficiency in operation and maintenance
- Asset management
- Safe use of energy

**LS Smart Distribution Panel Solutions**

Energy Digitalization

### Smart solution

We provide unique smart solutions by applying digital technology to our reliable LS ELECTRIC systems/devices.



# Characteristics of Smart MCCB

## Provide Small and medium-sized smart device-based acceptable energy saving solution

- **Real-time monitoring/control**
  - Energy saving, maintenance cost reduction



Smart MCCB provides a function to safely monitor the electric/energy meter and relay elements of power facilities, and provides real-time remote control and monitoring functions for efficient operation through peripheral devices.

## Provides convenience of ICT-based operation



- **Simplicity**
  - Easy access to user information
  - Convenient installation



- **Connectivity**
  - Ethernet-based standard communication
  - Web monitoring and control



- **Visibility**
  - Provides status information and pre-alarm function




## Smart Mobile Controls

Smart Switchgear offers a short-range wireless Mobile App service to provide on-site monitoring and on-site maintenance convenience.

### Mobile App. Services

- Real-time system and device operation status monitoring
- Provides energy use and failure analysis service measure

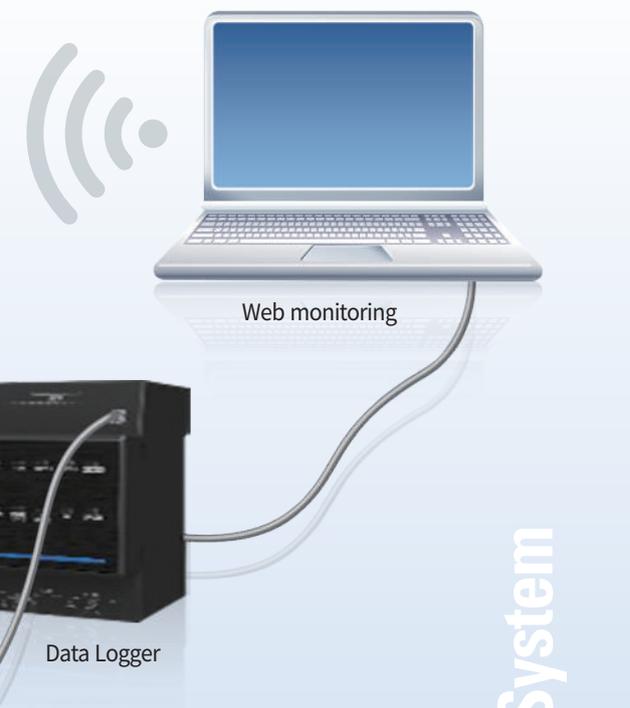

Web monitoring

Data Logger

Web Monitoring System



Bluetooth™

Smart Viewer

Smart MCCB

### Provide application for Mobile

- Provides device search and automatic recognition
- Device status and operation information inquiry
- Graphic chart by element



Gridsol CARE is a brand that refers to LS ELECTRIC's integrated digital power facility management service and proposes a new measure for energy management.


Gridsol CARE consists of upper level system, communication device, accessory device, Smart MCCB, ACB, and MCB. Through Gridsol CARE S/W, we provide a more efficient and stable system operation solution than before by performing power monitoring and control functions remotely.


## Upper-level system

- ① **GridSol CARE Monitoring S/W(cloud)**
  - Provides the monitoring function of LV panels by managing the data through a Cloud server (Any Time, Anywhere).
  - Issues alerts when there is a device malfunction through SMS or E-mail.
  - Access energy history and device history information.
- ② **GridSol CARE Operation S/W**
  - Proves the monitoring and control function of LV panels by managing the data through a local server.
- ③ **GridSol CARE Maintenance S/W**
  - Capable of device configuration and control, as well as project engineering.
  - Automatically generates test reports.
- ④ **Panel HMI(3.5inch)**
  - Provides 3.5 inch TFT Color LCD
  - Real-time monitoring and I/O control of connected devices
  - Can connect to up to eight ACBs, MCCBs, or M-Links.
- ⑤ **Panel HMI(7.0inch)**
  - Provides 7 inch TFT Color LCD
  - Provides a Quick View of the device status, communication status, and hierarchy information.
  - Details regarding device monitoring, control, and events.
- ⑥ **Mobile APP(Smart Viewer)**
  - Smart MCCB (ETLi) data monitoring using BLE

## Accessories

- ⑨ **T Connection Module**
  - Making RS-485 Multi-Drop connectivity more convenient
  - Terminal processing available
- ⑩ **M-LINK**
  - Communication module to monitor and control the ON/OFF/Trip of MCCB
    - On/Off Monitoring: Connect an AX/AL add-on.
    - On/Off control: Connect a MOP add-on.
- ⑪ **MOP**
  - An electrically driven opening/closing device that allows remote opening/closing of a breaker.
  - Operation mode: automatic/manual
- ⑫ **DC Power Module**
  - DC 24V output
- ⑬ **Tester**
  - Functions: Calibration, device H/W settings, relay settings, relay tests, device control, system info. access, saving, and accessing test history
  - Test items: the overload long time, short-circuit short-time, instantaneous, ground fault, and PTA of breakers
- ⑭ **Portable Battery & Trip Module**
  - Supplies a Smart MCCB with DC power
  - Verifies the trip operation of Smart MCCBs

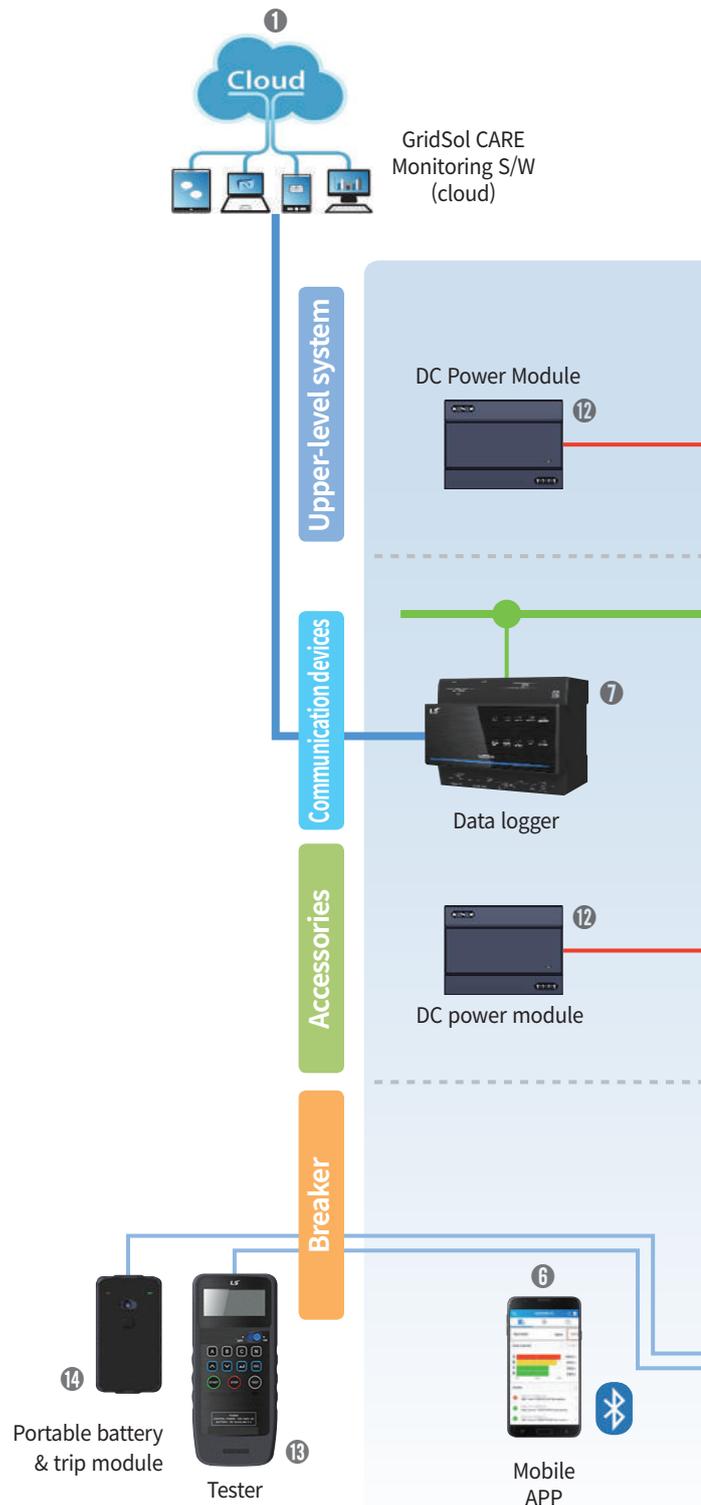

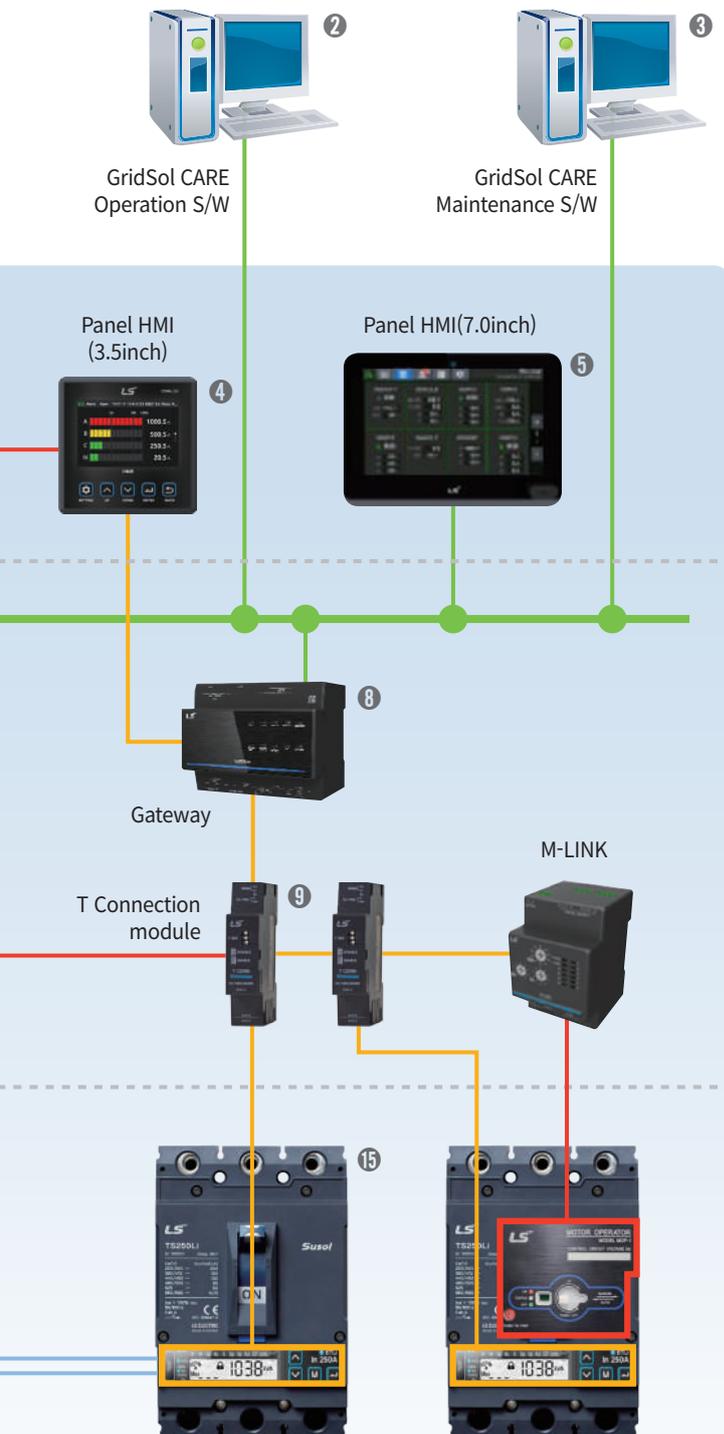

**Smart MCCB**

### Communication devices

⑦ **Data Logger**

- Accesses the GridSol CARE LV cloud and transmits the data.
- Includes gateway functions.

⑧ **Gateway**

- Auto discovery, auto time sync
- Periodic data gathering and high-speed response processing
- Non-periodic data bypass
- Webs service support

### Breaker


⑮ **Smart MCCB**


- A Susol MCCB with an ETU (Electronic trip unit)
- Equipped with IoT functions and upgraded measurement precision, measurement items, and relay functions

# Accessories

Use our accessories to upgrade the functions of breakers.  
Our Smart Susol MCCBs are the breakers for systems that provide more diverse and smart accessories compared to existing models.

- ① AX
- ② AL
- ③ FAL
- ④ UVT
- ⑤ SHT
- ⑥ TAL
- ⑦ Plug-in kit
- ⑧ Insulation barrier
- ⑨ Terminal cover (Short, Long)
- ⑩ Connection terminals
- ⑪ Direct rotary handle
- ⑫ Extended rotary handle
- ⑬ Aux. handle
- ⑭ Motor operator (MOP)
- ⑮ Locking devices (Removable, Fixed)
- ⑯ Mechanical interlock device
- ⑰ Trip units
- ⑱ DC power module
- ⑲ T connection module
- ⑳ Panel display(3.5inch)
- ㉑ Panel display(7.0inch)
- ㉒ Portable Battery & Trip Module
- ㉓ Tester

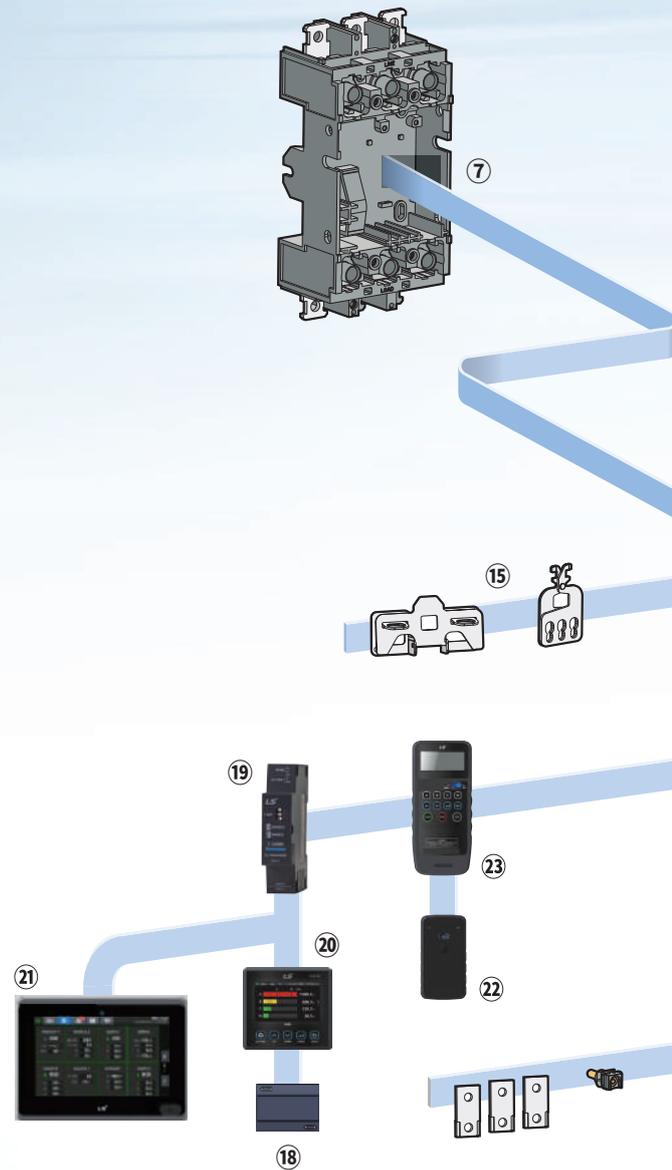

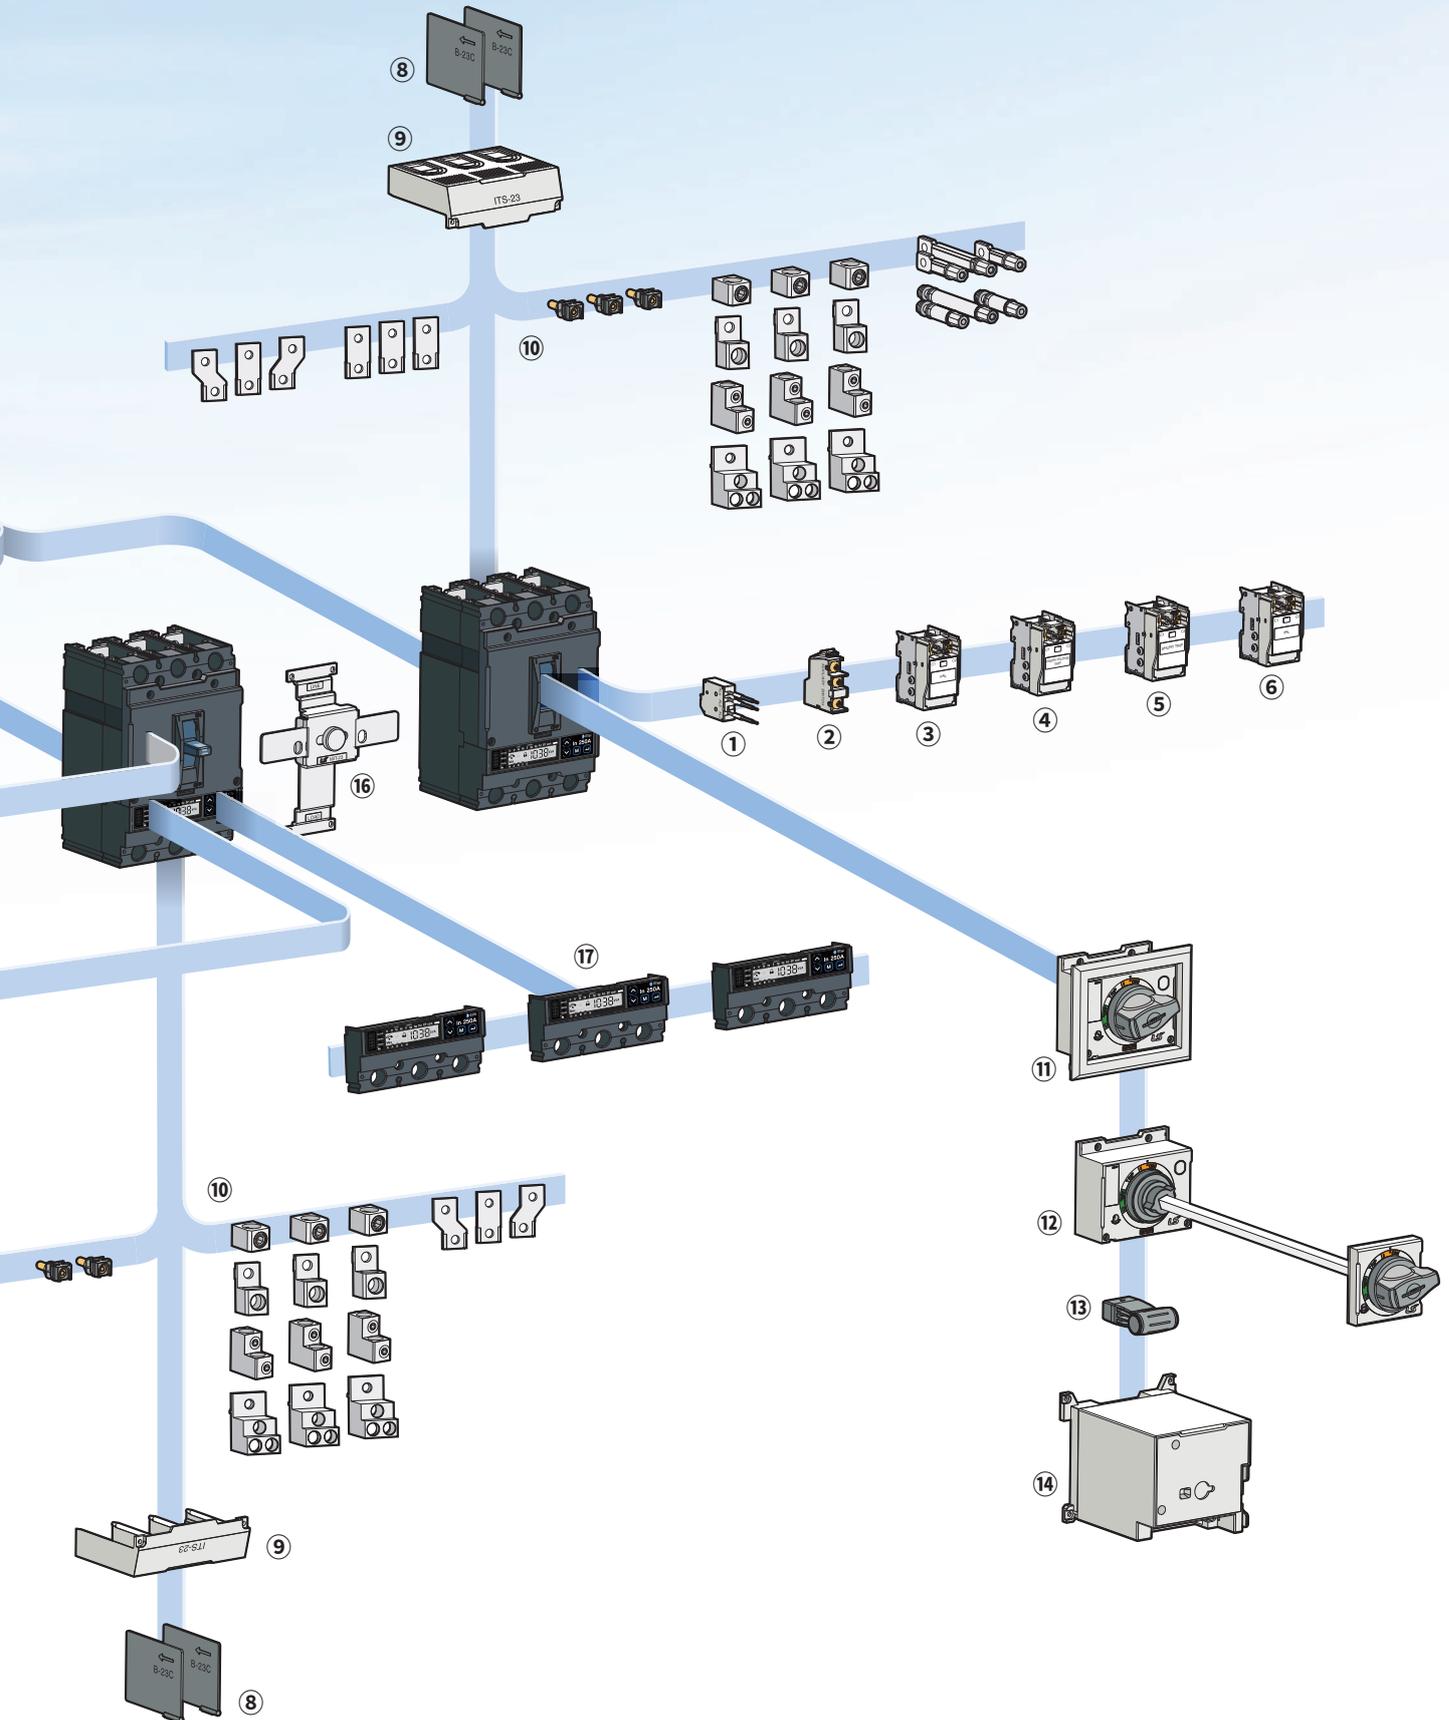

# Ordering



## **TS 250 Ni ETHi 160A 4P R**

Base format	Frame size (AF)	Breaking capacity (kA)	Trip units	Rated current (A)	No. of poles (P)	N-pole arrangement
TS	100	Ni	ETSi	40	3P	--: 3P
	160	Hi	ETMi	100	4P	L: N-A-B-C
	250	Li	ETHi	160		R: A-B-C-N
	400		ETLi	250		
	630			400		
	800			630		
				800		

## Selection and ratings of circuit breaker

---

▪ Ordering	20
▪ Marking and configuration	22
▪ Internal structure	24
▪ Rating	26
▪ Smart trip units	30

---

# Marking and configuration



Rated frequency

Standard

Certification mark

Category

Symbol indicating suitability for isolation as defined by IEC 947-2



Alarm Indication LED

Test terminal

Overcurrent indication LED

Unlock Key

**Model (Rating and breaking capacity)**

- TS : TS Series
- 250 : Max. Ampere rating
- Ni : Normal (Standard)
- Hi : High
- Li : Limited

**Standardized characteristics**

- Ui : Rated insulation voltage
- Uimp : Impulse withstand voltage
- Ue : Rated operational voltage
- Icu : Ultimate breaking capacity
- Ics : Service breaking capacity

	250AF	630AF	800AF
Ni	TS100Ni TS160Ni TS250Ni	TS400Ni TS630Ni -	TS800Ni - -
Hi	TS100Hi TS160Hi TS250Hi	TS400Hi TS630Hi -	TS800Hi - -
Li	TS100Li TS160Li TS250Li	TS400Li TS630Li -	TS800Li - -

Ni	50kA	65kA	65kA
Hi	85kA	85kA	100kA
Li	150kA	150kA	150kA

- Upstream connections
- Fixing hole
- Company logo
- Indication of closed (I/ON) position

Brand name

Operating handle

Indication of open (O/OFF) position

"push to trip" button

Trip device type

Rating of trip unit

Trip unit

Operation button

Fixing hole

Downstream connections

**CB Test certificate by UL**

- Ref. Certificate No.: DK-85164-UL
- Standard No. IEC60947-2

**IECEE CB TEST CERTIFICATE**

Ref. Certif. No. **DK-85164-UL**

IEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE) CB SCHEME

**CB TEST CERTIFICATE**

Product: Moulded-Case Circuit Breaker

Name and address of the applicant: LSIS CO LTD, 127 LS-ro Dongan-gu, Anyang-si, 14119 Gyeonggi-do Korea

Name and address of the manufacturer: LSIS CO LTD, 127 LS-ro Dongan-gu, Anyang-si, 14119 Gyeonggi-do Korea

Name and address of the factory: LSIS CO LTD, 95 Saekbong-ro Haungbuk-gu, Chongju-si, 3811720 Chungcheongbuk-do Korea

Rating and principal characteristics: See Page 2

Trademark (if any): LSIS LS LS

Type of Customer's Testing Facility (CTF) Stage used: CTF Stage 2

Model / Type Ref.: TS100E, TS100E1, TS100H, TS100H1, TS100L, TS100L1

Additional information (if necessary may also be reported on page 2): Additional information on page 3

A sample of the product was tested and found to be in conformity with: IEC 60947-1:2007/AMD1:2010, IEC 60947-1:2007/AMC2:2014, IEC 60947-1:2007, IEC 60947-2:2018

As shown in the Test Report Ref. No. which forms part of this Certificate: 478876561 issued on 2019-06-21


This CB Test Certificate is issued by the National Certification Body


UL (USA), 333 Westchester Road, Northbrook, IL 60062, USA  
UL (Canada), 333 Westchester Road, Northbrook, IL 60062, USA  
UL (Japan), Marunouchi Trust Tower Shinjuku Building 9F, 1-9-3 Marunouchi, Chiyoda-ku, Tokyo 100-0005, JAPAN  
UL (UK), 7, Underwood Road, Toronto, M9S 1W9, Ontario, CANADA

Date: 2019-06-28  
Signature: Jan-Erik Storgaard  
Jan-Erik Storgaard

# Internal structure

A Susol breaker is composed of opening/closing control devices, trip units, contacts, arc extinguishing parts, terminals, and supporting frames.

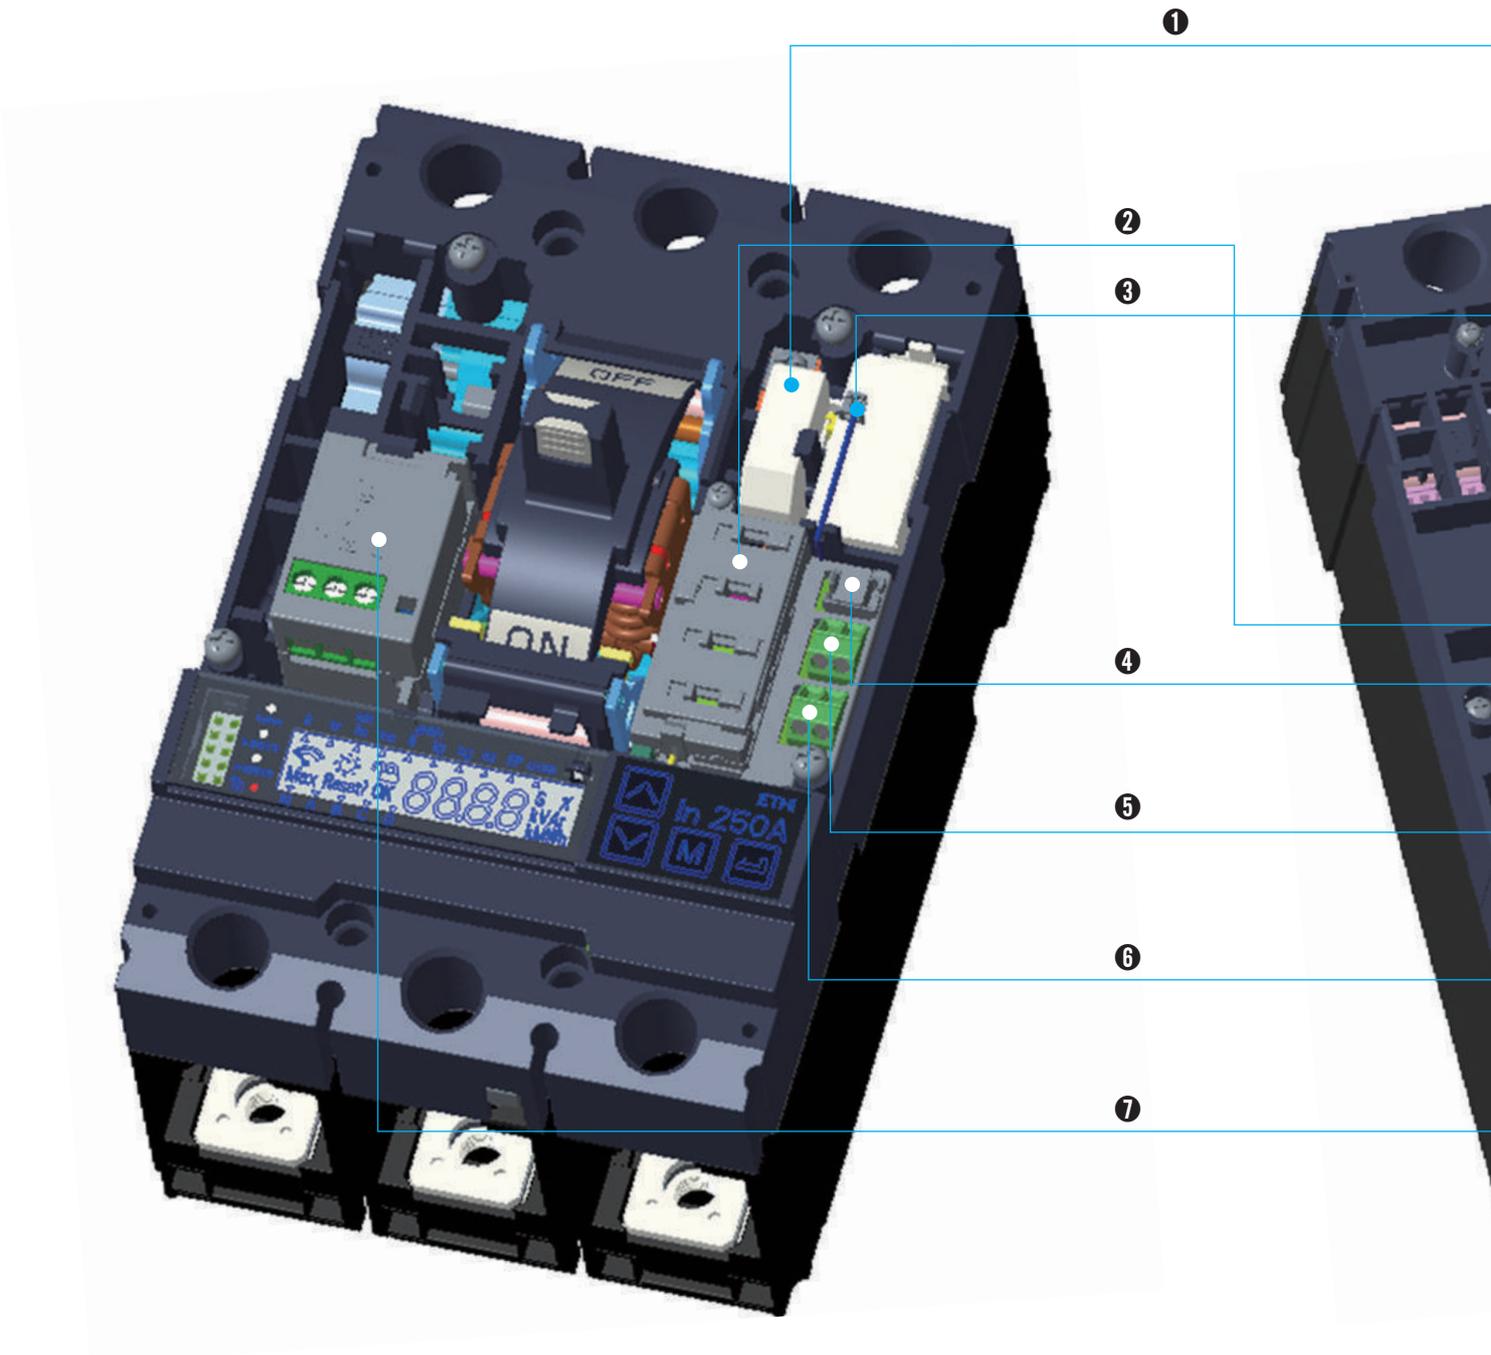

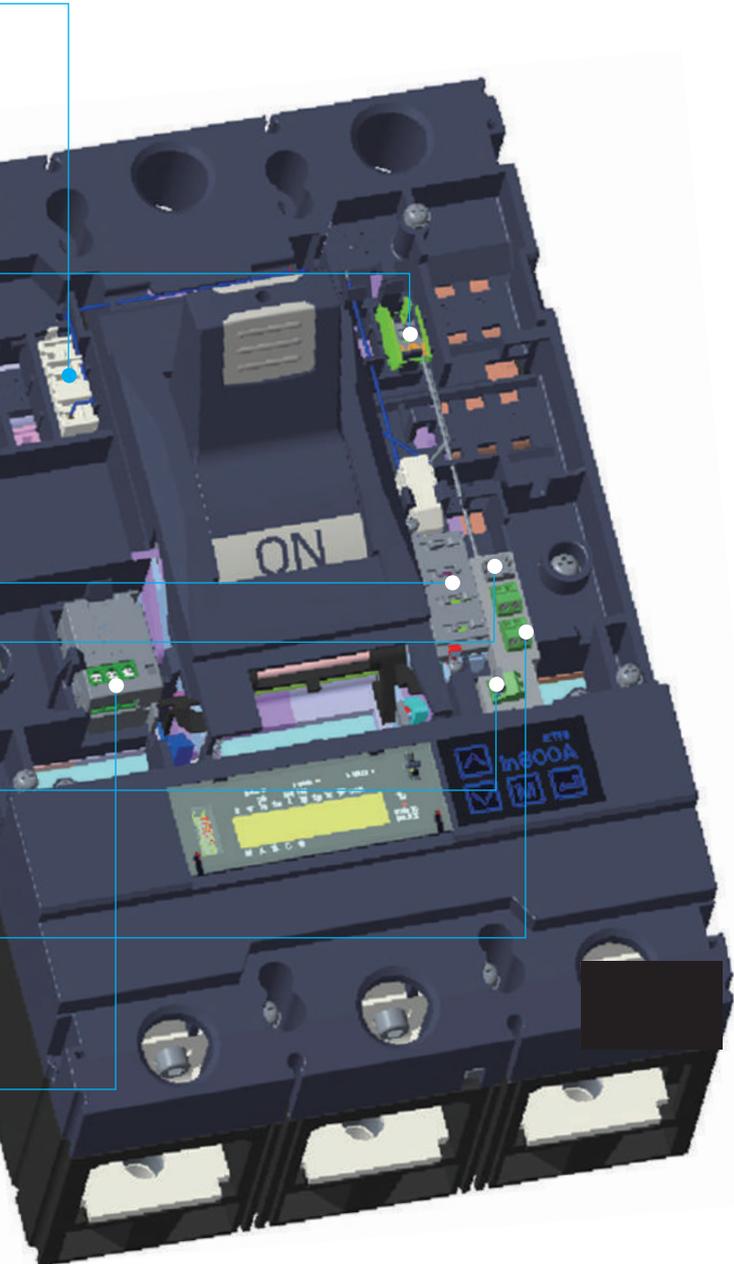

### ❶ AXL Device

- It is a mechanical S/W that transmits the ON, OFF, and TRIP status of the breaker to the ETU. This device is installed in Smart MCCB with the communication function(ETMi/ETHi/ETLi)

### ❷ Trip Coil

- A device that trips a circuit breaker by receiving the signal from the electronic trip unit.

### ❸ NVT (Neutral voltage tap)

- Device used for voltage and power measurement (ETHi/ETLi) in the Smart MCCB 3-pole trip unit
- N-phase voltage terminal (3 Pole only)

### ❹ EXIO (external power and communication connection)

- Provides convenience when connecting multiple devices to the RS485 multi-drop communication line
- DC 24V/communication

### ❺ ZSI output terminal

- Connecting cables: Awg24~28
- Input terminal Z1, Z2 / Output terminal Z3, Z4

### ❻ NCT input terminal

- Connecting cables: Awg24~28
- Input terminals N1, N2

### ❼ TAL (Trip Alarm)

- External transmission of DC 12V output and breaker status signal according to the relay setting when performing overcurrent relay operation

# Rating



**MCCB (Frame)**

- Optional**
- Model numbering (Example: TS100)
  - mber of poles (Example: 3poles)
  - Breaking capacity (Example: Ni 50kA/460V)

Electronic trip unit

**Trip unit**

- Optional**
- Trip Unit type (Exempl : ETSi)
  - Rated current (Example: 100A)

**ETSi (basic type)**  
LSiG relay, current measurement



**ETMi (Multi-function)**  
LSiG relay, current measurement, communication function



**ETHi (High-Performance)**  
LSiG relay, current/voltage/power measurement, communication function



**ETLi (Limited)**  
power measurement, communication function, mobile communication



## MCCB



Basic type		TS100			TS160			
Frame size	[AF]	100			160			
No. of poles		3, 4			3, 4			
Rated ultimate short-circuit breaking capacity, Icu	Type	Ni	Hi	Li	Ni	Hi	Li	
	220/240V [kA]	100	120	200	100	120	200	
	380/415V [kA]	50	85	150	50	85	150	
	440/460V [kA]	50	70	130	50	70	130	
	480/500V [kA]	42	65	85	42	65	85	
	525V [kA]	22	35	50	22	35	50	
660/690V [kA]	10	10	10	10	10	10		

## Trip unit (LSiG)

Rated current, In	40, 100	40, 100, 160	
Overload protection setting current(Long time), Ir			
Tripping time(Long time), tr			
Short circuit protection, Isd			
Tripping time(Short circuit), tsd			
Instantaneous protection setting current, Ii			
Ground fault protection setting current, Ig			
Tripping time(Ground fault), tg			
Additional functions			



TS250			TS400			TS630			TS800		
250			400			630			800		
3, 4			3, 4			3, 4			3, 4		
Ni	Hi	Li									
100	120	200	100	120	200	100	120	200	100	120	200
50	85	150	65	85	150	65	85	150	65	100	150
50	70	130	65	85	130	65	85	130	65	100	130
42	65	85	42	65	85	42	65	85	42	85	100
22	35	50	22	35	50	22	35	50	22	35	50
10	10	10	10	20	35	10	20	35	10	20	35

40, 100, 160, 250	250, 400	250, 400, 630	630, 800
0.4~1.0 x In (1A unit)			
0.5, 1, 2, 4, 8, 16 (second)			
1.5 ~ 10 x Ir (0.5 unit)			
I <sup>2</sup> t Off : 0, 0.1, 0.2, 0.3, 0.4 (second) I <sup>2</sup> t On : 0.1, 0.2, 0.3, 0.4 (second)			
40~160A : 1.5 ~ 15 x In (0.5 unit) 250~400A : 1.5 ~ 12 x In (0.5 unit) 630~800A : 1.5 ~ 11 x In (0.5 unit)			
40A : 0.45 ~ 1.0 x In (0.05 unit) 100A : 0.35 ~ 1.0 x In (0.05 unit) 160A : 0.25 ~ 1.0 x In (0.05 unit) In > 160A : 0.2 ~ 1.0xIn (0.05 unit)			
I <sup>2</sup> t Off : 0, 0.1, 0.2, 0.3, 0.4 (second) I <sup>2</sup> t On : 0.1, 0.2, 0.3, 0.4 (second)			
Selective protection (ZSI)			

# Rating



Basic type			TS100			TS160			
Frame size	[AF]		100			160			
Rated current, I <sub>n</sub>	[A]		40, 100			40, 100, 160			
No. of poles			3, 4			3, 4			
Rated operational voltage, U <sub>e</sub>	AC	[V]	690			690			
Rated impulse withstand voltage, U <sub>imp</sub>		[kV]	8			8			
Rated insulation voltage, U <sub>i</sub>		[V]	1000			1000			
Rated ultimate short-circuit breaking capacity, I <sub>cu</sub>	AC 50/60Hz	220/240V	[kA]	Ni	Hi	Li	Ni	Hi	Li
		380/415V	[kA]	100	120	200	100	120	200
		440/460V	[kA]	50	85	150	50	85	150
		480/500V	[kA]	50	70	130	50	70	130
		525V	[kA]	42	65	85	42	65	85
		660/690V	[kA]	22	35	50	22	35	50
Rated service breaking capacity, I <sub>cs</sub>	AC 50/60Hz	220/240V	[kA]	100	120	200	100	120	200
		380/415V	[kA]	50	85	150	50	85	150
		440/460V	[kA]	50	70	130	50	70	130
		480/500V	[kA]	42	65	85	42	65	85
		525V	[kA]	22	35	50	22	35	50
		660/690V	[kA]	5	5	5	5	5	5
Rated short-circuit making capacity, I <sub>cm</sub>	AC 50/60Hz	220/240V	[kA]	220	264	440	220	264	440
		380/415V	[kA]	105	187	330	105	187	330
		440/460V	[kA]	105	154	286	105	154	286
		480/500V	[kA]	88	143	187	88	143	187
		525V	[kA]	46	74	105	46	74	105
		660/690V	[kA]	17	17	17	17	17	17
Category of utilization			A			A			
Isolation behavior			●			●			
Trip unit, Electronic	ETSi		●			●			
		ETMi	●			●			
		ETHi	●			●			
		ETLi	●			●			
Connection	fixed	front-connection	●			●			
		rear-connection	●			●			
	plug-in	front-connection	●			●			
		rear-connection	●			●			
Life cycle	Mechanical	[operations]	20,000			20,000			
	Electrical @ 415 V AC	[operations]	10,000			10,000			
Dimensions (front connection), W×H×D	3-pole	[mm]	105×160×86			105×160×86			
	4-pole	[mm]	140×160×86			140×160×86			



TS250			TS400			TS630			TS800		
250			400			630			800		
40, 100, 160, 250			250, 400			250, 400, 630			630, 800		
3, 4			3, 4			3, 4			3, 4		
690			690			690			690		
8			8			8			8		
1000			1000			1000			1000		
Ni	Hi	Li	Ni	Hi	Li	Ni	Hi	Li	Ni	Hi	Li
100	120	200	100	120	200	100	120	200	100	120	200
50	85	150	65	85	150	65	85	150	65	100	150
50	70	130	65	85	130	65	85	130	65	100	130
42	65	85	42	65	85	42	65	85	42	85	100
22	35	50	22	35	50	22	35	50	22	35	50
10	10	10	10	20	35	10	20	35	10	20	35
100	120	200	100	120	200	100	120	200	100	120	200
50	85	150	65	85	150	65	85	150	65	100	150
50	70	130	65	85	130	65	85	130	65	100	130
42	65	85	42	65	85	42	65	85	42	85	100
22	35	50	22	35	50	22	35	50	22	35	50
5	5	5	10	12	12	10	12	12	10	20	20
220	264	440	220	264	440	220	264	440	220	264	440
105	187	330	143	187	330	143	187	330	143	220	330
105	154	286	143	187	286	143	187	286	143	220	286
88	143	187	88	143	187	88	143	187	88	187	220
46	74	105	46	74	105	46	74	105	46	74	105
17	17	17	17	40	74	17	40	74	17	40	74
A			A			A			A		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
●			●			●			●		
20,000			15,000			15,000			8,000		
10,000			6,000			6,000			3,000		
105×160×86			140×260×110			140×260×110			210×320×135		
140×160×86			186.5×260×110			186.5×260×110			280×320×135		

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Trip unit exterior



## Trip unit type

ETU of Susol Smart MCCB has a variety of electronic trip units like basic type(ETSi) that measures current for each AF and rated current, an advanced type(ETMi) with communication function, and a high-end type(ETHi) that performs communication function and voltage measurement and ETLi type with mobile (BLE) communication.

### ETSi (Standard)



### ETMi (Multi-Function)



### ETHi (High-Performance)



### ETLi (Limited)



- **ETSi**  
Standard/LSIG relay, current measurement
- **ETMi**  
Multi-function/LSIG relay, current measurement, communication function
- **ETHi**  
High performance/LSIG relay, current/voltage/power measurement, communication function
- **ETLi**  
Limited performance/LSIG relay, power measurement, communication function, mobile communication

**Trip unit rated current**

AF	Rated current
100AF	40A, 100A
160AF	40A, 100A, 160A
250AF	40A, 100A, 160A, 250A
400AF	250A, 400A
630AF	250A, 400A, 630A
800AF	630A, 800A

**Trip unit features**

ETU		ETSi	ETMi	ETHi	ETLi
Relay (setting)					
		<p>Long time Short-time Instantaneous Ground fault</p>			
Button		●	●	●	●
LCD		●	●	●	●
Status LED		●	●	●	●
Test port		●	●	●	●
Measurement	Current	●	●	●	●
	Power	-	-	●	●
Communication	RS485	-	●	●	●
	BLE	-	-	-	●


# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Overcurrent protection relay

Smart MCCB's ETU basically performs relay operation function for long time, short-time, instantaneous and ground fault, and provides an alarm indicating LED related to overcurrent display. Relay item setting for relay operation can be set by using the button on the front of ETU. To change the relay action setting, press the 'unlock' button, change the setting in the 'unlock' state (🔓) and after completing the setting, press the 'unlock' button to switch to the 'lock' state (🔒). During the setting change, if there is no button input for more than 1 minute, the device automatically switches to the 'lock' state (🔒).

Type		ETSi	ETMi	ETHi	ETLi
Relay setting	$I_r, t_r, I_{sd}, t_{sd}, I_i, I_g, t_g$	●	●	●	●

## Characteristic curve

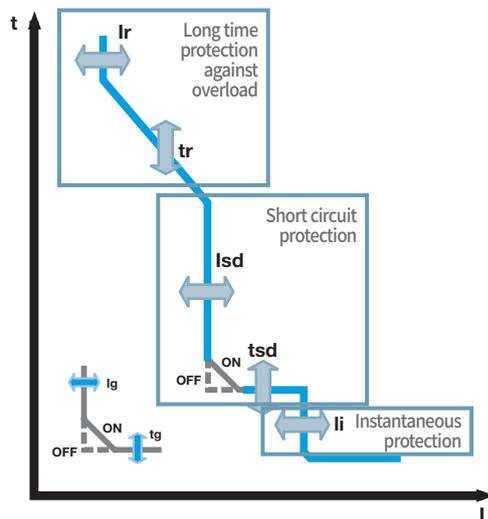

- 1) Overload protection(Long time): The operating current ( $I_r$ )and operating time ( $t_r$ ) can be set.
- 2) Short-circuit protection(Short time): The operating current ( $I_{sd}$ ) and operating time ( $t_{sd}$ ) can be set.
- 3) Instantaneous protection: The operating current ( $I_i$ ) can be set.
- 4) Ground fault protection: You can set whether to use ground fault relay, operating current ( $I_g$ ) and operating time ( $t_g$ ).
- 5) N - phase protection: N-phase protection relay can be set for a 4Pole.
  - Off: No protection
  - 100%: N-phase protection for  $100\% \times I_r$
  - 50%: N-phase protection for  $50\% \times I_r$
  - OSN: When  $I_r$  is set to ' $<0.63 \times I_n$ ', N-phase protection for  $160\% \times I_r$  (Used under load conditions that contain a lot of harmonics)
- 6) ZSI (Zone Selective Interlocking: Selective breaking in a protected area.

\* Set the relay so that malfunction does not occur by inrush current.  
(In the case of a motor or capacitor load, inrush current may occur several times of the rated current.)

## Relay specification table

Protection	Setting range								Remark	
Long time protection	Current setting $I_r$ (A)	Rated current		Min( $0.4 \times I_n$ )			Max( $1.0 \times I_n$ )			fine adjustments in 1A step
		40A		16A			40A			
		100A		40A			100A			
		160A		64A			160A			
		250A		100A			250A			
		400A		160A			400A			
		630A		252A			630A			
	800A		320A			800A				
	Time delay $t_r$ (s) Accuracy $\pm 20\%$	Setting		0.5	1	2	4	8	16	
		Operation time	$1.5 \times I_r$	11	22	45	90	180	360	
$6 \times I_r$			0.5	1	2	4	8	16		
$7.2 \times I_r$			0.35	0.7	1.4	2.8	5.5	11		
Short time protection	Current setting $I_{sd}$ (A) Accuracy $\pm 10\%$	$1.5 \times I_r \sim 10 \times I_r$ (18 steps)								fine adjustment $I_n 0.5 \times I_r$ steps
		Time delay $t_{sd}$ (s) Accuracy $\pm 20\%$	Setting	$I^2t_{Off}$	0	0.1	0.2	0.3	0.4	
	$I^2t_{On}$		-	0.1	0.2	0.3	0.4			
	$I^2t_{Off}$	Operation time	Non-tripping	0.02	0.08	0.14	0.24	0.35		
			Maximum break	0.08	0.14	0.24	0.35	0.50		
Instantaneous protection	Current setting $I_i$ (A) Accuracy $\pm 15\%$	Setting	Rated current	Range						fine adjustments in $0.05 \times I_n$ steps
		40A ~ 160A		$1.5 \times I_n \sim 15 \times I_n$ (28 steps)						
		250A ~ 400A		$1.5 \times I_n \sim 12 \times I_n$ (22 steps)						
		630A ~ 800A		$1.5 \times I_n \sim 11 \times I_n$ (20 steps)						
	Non-tripping time: 10ms, Maximum break time: 60ms									
Ground leakage protection	Current setting $I_g$ (A) Accuracy $\pm 10\%$	Setting	Rated current	Range						fine adjustments in $0.05 \times I_n$ steps
			40A	$0.45 \times I_n \sim 1.0 \times I_n$ (12 steps)						
			100A	$0.35 \times I_n \sim 1.0 \times I_n$ (14 steps)						
			160A	$0.25 \times I_n \sim 1.0 \times I_n$ (16 steps)						
	$I_n > 160A$		$0.2 \times I_n \sim 1.0 \times I_n$ (17 steps)							
	Time delay $t_g$ (s) Accuracy $\pm 25\%$	Setting	$I^2t_{Off}$	0	0.1	0.2	0.3	0.4		
			$I^2t_{On}$	-	0.1	0.2	0.3	0.4		
		Operation time	Non-tripping	0.02	0.08	0.14	0.24	0.35		
			Maximum break	0.08	0.14	0.24	0.35	0.50		

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Measurement

Type		ETU Type				Display		
		ETSi	ETMi	ETHi	ETLi	ETU	HMI (3.5")	HMI (7.0")
Current	Each Phases and neural (Ia, Ib, Ic, In)	●	●	●	●	●	●	●
	Highest current of the each Phases and neural (Imax of Ia, Ib, Ic, In)	●	●	●	●	●		
	Ground fault (I <sub>g</sub> )	●	●	●	●	●		
	Highest Ground fault current (Imax of I <sub>g</sub> )	●	●	●	●	●		
	Average of phases: I <sub>avg</sub> =(Ia+Ib+Ic)/3	●	●	●	●			
	Unbalance: I <sub>unbal</sub> (%) = (Imax - I <sub>avg</sub> )/I <sub>avg</sub>	●	●	●	●			
Voltage	Phase voltage(Va, Vb, Vc)/ Line voltage(Vab, Vbc, Vca)			●	●	●	●	●
	Average voltage: V <sub>avg</sub> =(Va(Vab)+Vb(Vbc)+Vc(Vca))/3			●	●			
	Unbalance: V <sub>unbal</sub> (%) = (Vmax - V <sub>avg</sub> )/V <sub>avg</sub>			●	●			
Frequency	Hz			●	●		●	
Power	Active, Reactive, Apparent (total, each phase)			●	●	●	●	●
Power factor	Power Factor (total, each phase)			●	●		●	●
Energy	Active, Reactive, Apparent			●	●	●	●	●
Demand (Previous, Max)	Current (Ia, Ib, Ic)		●	●	●		●	
	Power (Active, Reactive, Apparent)			●	●		●	●
Power Quality	THDV: Total Harmonic Distortion V			●	●		●	
	THDI: Total Harmonic Distortion I		●	●	●		●	

## Measurement accuracy

- Reference standards: IEC 61557-12
- Current: Three phase (0.2 ~ 0.4I<sub>n</sub> : ± 1.5%, 0.4 ~ 1.2I<sub>n</sub> : ± 1.0%), single phase (0.2 ~ 1.2I<sub>n</sub> : ± 2.0%)
- Voltage: ±0.5%
- Power and Energy: Class 2


Type		Error range	Error
Power / Energy	PF 1.0	0.2~0.4I <sub>n</sub>	±2.5%
		0.4~1.2I <sub>n</sub>	±2.0%
	PF 10	0.4~0.8I <sub>n</sub>	±2.5%
	PF 0.5(Lag) PF 0.8(Lead)	0.8~1.2I <sub>n</sub>	±2.0%

## ZSI function


The ZSI function is used to minimize the impact upon MCCB and other electric devices under accident conditions by reducing the delay time which the device eliminates the failure.

- 1) While a short time delay or a ground fault occurs in the system where ZSI is set, the device at the point of failure generates a ZSI signal to suppress the operation of the host(upper) device.
- 2) The MCCB at the point of failure operates at the minimum operating time regardless of the set time to eliminate the fault.
- 3) The upper circuit breaker that receives the ZSI input signal operates according to the set short time delay or the ground fault operation delay time for cascading in the system, but the upper circuit breaker that did not receive the ZSI input signal from the lower circuit breaker operates at the minimum operation time regardless of the set time.

For normal ZSI operation, the operation time must be set correctly for cascading so that lower devices operate before upper devices in case of a short time delay and ground fault.

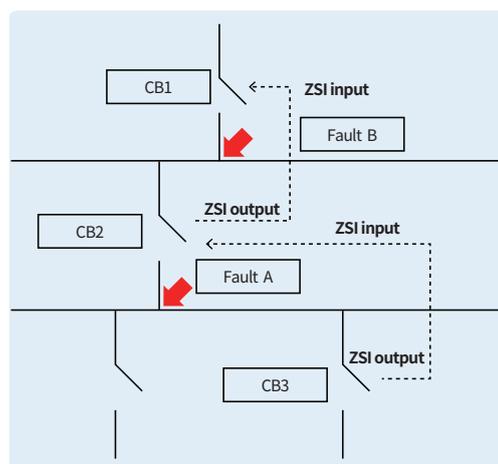

[ ZSI operation ]

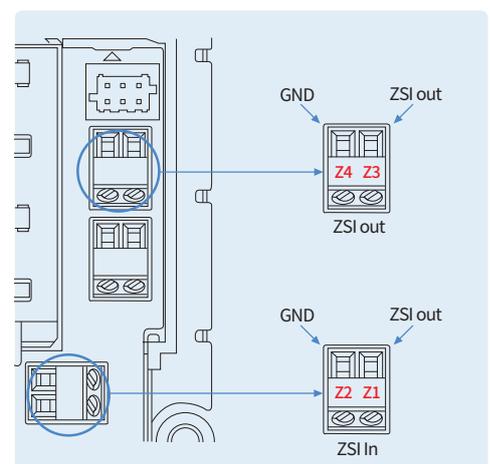

[ External I/O Board ]

※ Whether to use the ZSI function can be set in the ZSI PIN connection status and relay setting mode.

(ZSI use: ZSI pin removed, ZSI not used: ZSI pin fastened)

- When ZSI is set to enable, the ZSI function is activated.

- ZSI input signal is received through External I/O Board input terminal.

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Diagnosis and maintenance

Smart MCCB's ETU can save various operation contents such as device operation and setting change. It can also check its contents through communication and HMI.

### Record

#### 1) System event

- Recordable up to 50 events including the type and time of the event
- If it exceeds 50, it is deleted sequentially from the oldest event (Roll-Over)

#### 2) Fault event

- In the event of an accident due to relay operation, up to 50 records including the type and time of occurrence can be recorded.
- If it exceeds 50, it is deleted sequentially from the oldest event (Roll-Over)
- Accident waveform recording: Record up to 2 (current and voltage waveforms, 8 cycles)

#### 3) Max. Demand and Max. Power value

- Record the occurrence value and occurrence time

#### 4) Device operation

- Operation/breaker On (input) time (hour)
- Number of Mechanical/electrical/trip count
- Contacts wear rate (%): wear rate according to the number of electric opening and closing of the main body
- Load Profile (load usage rate): Usage time according to the used load (hour)
- There are 4 levels (0~49%In, 50~79%In, 80~89%In, >90%In)

### Device management

Device information can be obtained by using ETUs with communication function.

- Communication related items (communication address, speed etc.)

Type			ETU Type				Display	
			ETSi	ETMi	ETHi	ETLi	ETU	HMI (3.5")
Event record	System	Status change, Setting change, System control, etc.(Up to 50) - Event type and time	-	●	●	●	-	●
	Fault	Long time/short-time/instantaneous/ground fault(Up to 50) - Fault type, value and time	-	●	●	●	-	●
Maximum value record	Demand	Ia, Ib, Ic	-	●	●	●	-	●
		Active/reactive/apparent	-		●	●	-	●
	Power	Active/reactive/apparent	-		●	●	●	-
Device operation	Operating time (hour)		-	●	●	●	-	●
	On time (hour)		-	●	●	●	-	●
	Mechanical count (number of times)		-	●	●	●	-	●
	Electrical count (number of times)		-	●	●	●	-	●
	Trip count (number of times)		-	●	●	●	-	●
	Contact wear rate (%)		-	-	●	●	-	●
	Load profile		-	●	●	●	-	●

Types of events

		Items	Settings	Description
System event	Status change	Operation Status Inside a Device		Operating the Unlock Key
				Current Direction (forward/backward)
				Device Restart
				Local/Remote
		Device DI status		Trip status (Trip/None trip)
				CB Status (On/Off)
				ZSI DI
		Device DO status		Trip pulse output
				ZSI DO
		Device malfunction (self-diagnostics)		Memory failure
				RTC failure
				Mechanical count alarm
			Electrical count alarm	
			Contact life alarm	
	Others		Device overheat	
			MTD Status	
	Change settings	System configuration		Factory Configuration
				System Configuration
		Relay configuration		Long time
				Short-time
				Instantaneous
				Ground fault
				N-phase protection
		Use of ZSI		
	System control	Data Clear		Fault reset
				System event buffer clear
				Fault event buffer clear
				Energy reset
			Max demand reset	
			Max power reset	
			Max Internal temperature reset	
			Load profile clear	
			Operation time[hour] reset	
			On time[hour] reset	
			Max. W reset by Key	
			Max. Var reset by Key	
			Max. VA reset by Key	
			Wh reset by Key	
		Varh reset by Key		
		VAh reset by Key		
		Test trip by Key		
Device DO and CB control * (Operation)			CB ON	
			CB OFF	
		CB RESET		


\* Dedicated MOP coming soon in 2022.

Fault event	Long time	Relay occurrence/return
	Short-time	
	Instantaneous	
	Ground fault	

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Composition of Smart MCCB

Smart MCCB provides special functions in combination with digital accessory modules. When external power (DC 24V) is applied, data like MCCB status information can be transmitted through communication with the display device or the upper operating S/W. Multi-drop connection of device power and communication is feasible by using the T-Connection module. The portable battery module can be connected to the test port to supply power to the MCCB, and a simple trip test can be performed. In addition, relay test and relay setting are possible by connecting a tester to the test port.

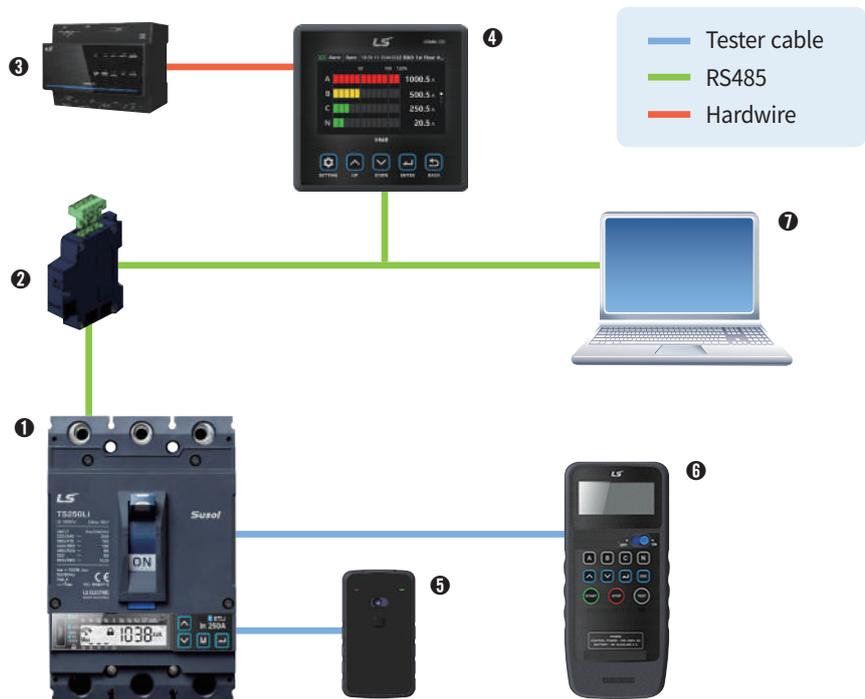

Number	Description	Remarks
①	Smart MCCB	MCCB product
②	ITCM	T-Connection module
③	IPM	DC power module
④	IHM8	Display module
⑤	IPBM	Portable battery & trip module
⑥	Tester71	OCR Tester
⑦	Communication	Higher-level operating software

## Communication

### Remote communication (RS485)

- 1) Communication protocol: Modbus RTU
- 2) Communication speed: 9,600, 19,200, 38,400 bps
- 3) Communication distance: Max. 5m (between devices), can be connected to up to 16 devices
- 4) DC 24V power supplied from outside
- 5) Slave addresses: 1 ~ 247
- 6) Transmitted information: Device status, measurement values, setting information, and record data, etc.

※ Communication available only when there is an outer power supply.

### Tester Port communication

- 1) DC 12V power supplied from outside
- 2) Connected devices: OCR teste, IPBM: Input the relay test current signal.

### BLE communication

- 1) Communication range: 1m (in an open space)
- 2) Transmitted information: Device status, measurement values, setting information, and record data, etc.

※ Communication available only when there is an outer power supply.

\* When the device is re-energized, the device time will be reset to 01:01:01, January 1, 2018.

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Trip unit external



Number	Description	Remarks
1	Indicated value	Indicates the relevant information and data value.
2	Unit	The unit of the displayed item.
3	Display mode and settings display	📶(Measurement), Max, ⚙️(Settings), 🔒(Lock), Reset?, OK
4	Display the relay element and other indications	Hz (frequency), EP (external power), com (communication)
5	Indication LED	Active and Alarm LED
6	Test Port	The test port to provide communication and power
7	Each phase and ground fault	G (ground fault)
8	Key Interface	The key to be used in manipulating the screen and change settings.

### Indication LED

Indicates the operation and load status of the device by the change of the color of the LED.


LED	Color	Remarks	
 ACTIVE	Active	Blue	Blinks when there is a failure in engaging external power (DC24V) or self-power operating current.
 >90%I <sub>r</sub>	>90%I <sub>r</sub>	Orange	Blinks when the load current is 90% or higher of the I <sub>r</sub> current setting.
 >105%I <sub>r</sub>	>105%I <sub>r</sub>	Red	Blinks when the load current is 105% or higher of the I <sub>r</sub> current setting.

※ The condition of using self-power  
 - 250AF : Rated power 40A (15A or higher), Rated current 100 ~ 250A (30A or higher)  
 - 630AF, 800AF : 50A or higher

LCD Indication Mode

LCD Display

The ETU indicates the corresponding item for each display mode when the unit is running on external power or self-power.

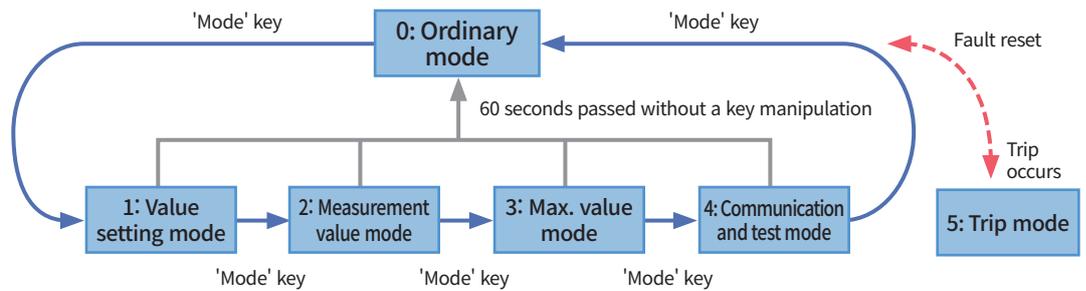

Item	display item	A sample for indication
Ordinary mode	The current for each phase is indicated in the order of A, B, C, and N.	: Phase A current
Value setting mode	Operating frequency → long time current → long time time → short-time current → short-time time → Instantaneous current → Use of ground fault → Ground fault current → Ground fault time → N-phase protection → Use of ZSI → ...	: tsd setting
Measurement value mode	Current value for each phase → Ground fault current → Va(Vab) → Vb(Vbc) → Vc(Vca) → Active power → Reactive power → Apparent power → ...	: Vrs voltage value
Max. value mode	Current value → Ground fault current → Va(Vab) → Vb(Vbc) → Vc(Vca) → Active power → Reactive power → Apparent power → Forward active energy → Forward reactive energy → Apparent energy → ...	: Max value (T-phase)
Communication and test mode	Communication address → Communication speed → Configuration by communication → DO output selection → Relay display mode selection → Feeder/Incoming → Trip test → ...	: Comm. address
Trip mode	'Trip' → Fault current → ...	: Trip display

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Key types

You can manipulate the keys to view the display items on the Led and make changes to settings.

While making changes with the relay settings, you can press the 'Unlock' key or the 'Mode' key twice to exit the mode. Or, you will exit the configuration mode if there is no key operation for 60 seconds, as well.

Number	Description		Remarks
 : Unlock	Engage/disengage the settings edit mode.		Can be used when making changes with the settings.
 : UP	Increase the setting values.		Can be used when making changes with the settings.
 : Down	Decrease the setting values.		
 : Mode	Change the display mode.		Cycle the display mode.
 : Enter	Long (two seconds or longer)	Select and confirm the item.	Can be used to make changes with the settings, resetting the max. values, and run trip tests.
	Short	Change the indicated items	Progressive item display (showing the subsequent items)

## Change settings

You can change the settings of the equipment only when the equipment is in 'unlock' mode.

To change settings, press () to see whether the equipment is in 'unlock' mode.




\* The first screen you will see once 'unlock' mode is activated is the operating frequency item of the relay setting mode.

Press Enter to make changes with the relay settings. Press Mode to change system settings. (Page 48)

## Changing the relay configuration

### Changing settings operating frequency

ex) 60Hz → 50Hz

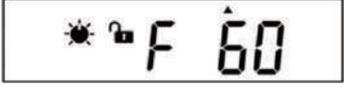
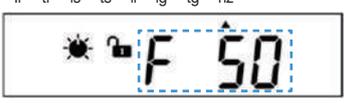
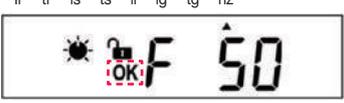
Steps	LCD display	Remarks
	<p>lr tr ls ts li lg tg hz</p> 	Press 'unlock' to display the operating frequency
 (Long)	<p>lr tr ls ts li lg tg hz</p> 	Select the item to change (blink)
 	<p>lr tr ls ts li lg tg hz</p> 	Change the item's value (blink)
 (Long)	<p>lr tr ls ts li lg tg hz</p> 	Confirm the changes you made (shows 'OK')

※ F: Frequency

## Changing the relay configuration




### Change settings long time operating current (I<sub>r</sub>)

ex) 150A → 160A

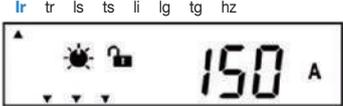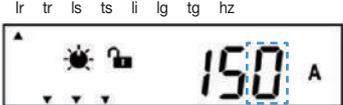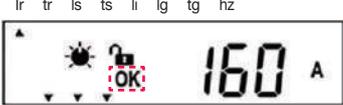Steps	LCD display	Remarks
 (short)		Press Enter in the relay setting mode to move to the rated current (I <sub>r</sub> ) item. (See the configuration status in the LCD display.)
 (Long)		Select the item to change (The position where the change is to be made will blink.)
		Move to the position where the setting is to be changed. (The position where the change is to be made will blink.)
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')

### Change settings long time operating time (tr)

ex) 4s → 16s

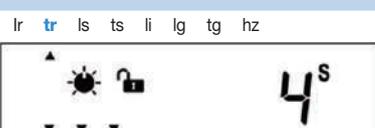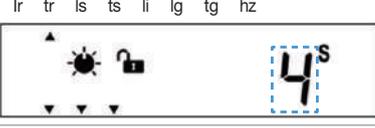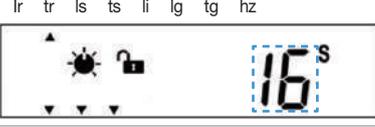
Steps	LCD display	Remarks
 (short)		Press Enter in the relay setting mode to move to the overload long time (tr) item. (Check the LCD display for setting status.)
 (Long)		Select the item to change (blink)
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Changing the relay configuration


### Change settings short-time operating current (Isd)

ex) 5xlr → 10xlr

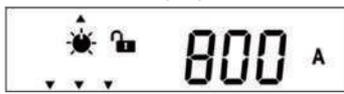Steps	LCD display	Remarks
 (short)	lr tr <b>Is</b> ts li lg tg hz 	Press Enter in the relay setting mode to move to the short-circuit operating current (Isd) item. (Check the setting status in the LCD display.)
 (Long)	lr tr Is ts li lg tg hz 	Select the item to change (blink)
	lr tr Is ts li lg tg hz 	Change the item's value (blink)
 (Long)	lr tr Is ts li lg tg hz 	Confirm the changes you made (shows 'OK')

### Change settings short-time operating time (tsd)

ex) 0.2s(I<sup>2</sup>t Off) → 0.4s(I<sup>2</sup>t On)

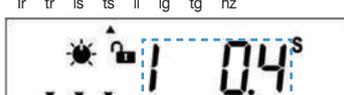Steps	LCD display	Remarks
 (short)	lr tr Is <b>ts</b> li lg tg hz 	Press Enter in the relay setting mode to move to the short-circuit short-time operating time (tsd). (Check the setting status in the LCD display.)
 (Long)	lr tr Is ts li lg tg hz 	Select the item to be changed (blink)
	lr tr Is ts li lg tg hz 	Change the item's value (blink) (The "1" at the beginning stands for the I <sup>2</sup> t On-time.)
 (Long)	lr tr Is ts li lg tg hz 	Confirm the changes you made (shows 'OK')

## Changing the relay configuration

### Change settings instantaneous operating current (Ii)

ex) 10xIn → 12xIn

Steps	LCD display	Remarks
 (short)	Ir tr Is ts <b>Ii</b> Ig tg hz 	Press Enter in the relay setting mode to move to the instantaneous operating current (Ii) item. (Check the setting status in the LCD display.)
 (Long)	Ir tr Is ts Ii Ig tg hz 	Select the item to be changed (blink)
	Ir tr Is ts Ii Ig tg hz 	Change the item's value (blink)
 (Long)	Ir tr Is ts Ii Ig tg hz 	Confirm the changes you made (shows 'OK')

### Change the settings to decide whether to use ground fault or not.

ex) Not Use → Use

Steps	LCD display	Remarks
 (short)	Ir tr Is ts Ii Ig <b>tg</b> hz 	Press Enter in the relay setting mode to move to the settings to enable/disable ground fault. (Check the LCD display for the status of the setting.)
 (Long)	Ir tr Is ts Ii Ig tg hz 	Select the item to be changed (blink)
	Ir tr Is ts Ii Ig tg hz 	Change the item's value (blink)
 (Long)	Ir tr Is ts Ii Ig tg hz 	Confirm the changes you made (shows 'OK')

※ dISA: Disable (Not use)  
 EnbL: Enable (Use)

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Changing the relay configuration



### Change settings ground fault operating current (I<sub>g</sub>)

ex) 0.4xI<sub>n</sub> → 1.0xI<sub>n</sub>

Steps	LCD display	Remarks
 (short)	lr tr ls ts li <b>I<sub>g</sub></b> tg hz 	Press Enter in the relay setting mode to move to the ground fault current (I <sub>g</sub> ) setting. (Check the setting status in the LCD display.)
 (Long)	lr tr ls ts li I <sub>g</sub> tg hz 	Select the item to be changed (blink)
	lr tr ls ts li I <sub>g</sub> tg hz 	Change the item's value (blink)
 (Long)	lr tr ls ts li I <sub>g</sub> tg hz 	Confirm the changes you made (shows 'OK')

### Change settings ground fault operating time (t<sub>g</sub>)



ex) 0.2s(I<sup>2</sup>t On) → 0.4s(I<sup>2</sup>t Off)

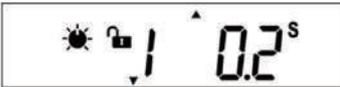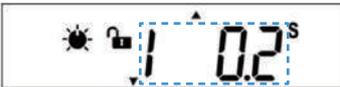Steps	LCD display	Remarks
 (short)	lr tr ls ts li I <sub>g</sub> <b>t<sub>g</sub></b> hz 	Press Enter in the relay setting mode to move to the ground fault activation time (t <sub>g</sub> ) setting. (See the setting status in the LCD display.)
 (Long)	lr tr ls ts li I <sub>g</sub> t <sub>g</sub> hz 	Select the item to be changed (blink)
	lr tr ls ts li I <sub>g</sub> t <sub>g</sub> hz 	Change the item's value (blink) (The absence of the "I" at the beginning stands for the I <sup>2</sup> t Off time.)
 (Long)	lr tr ls ts li I <sub>g</sub> t <sub>g</sub> hz 	Confirm the changes you made (shows 'OK')

## Changing the relay configuration


### Changing the N-phase protection settings

ex) 100% → 50%

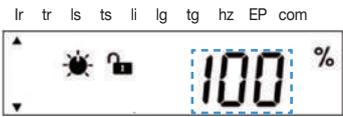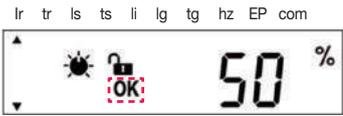Steps	LCD display	Remarks
 (short)		Press Enter in the relay setting mode to move to the N-phase protection setting. (Check the status of the setting in the LCD display.)
 (Long)		Select the item to be changed (blink)
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')

### ZSI enable settings change

ex) Disable → Enable

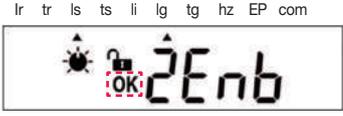Steps	LCD display	Remarks
 (short)		Press Enter in the relay setting mode to move to ZSI Enable setting. (Check the status of the setting in the LCD display.)
 (Long)		Select the item to be changed (blink)
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')


※ Zdl 5: ZSI Disable  
 ZEnb: ZSI Enable

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Change system settings

### Changing communication address settings



ex) 1 → 5

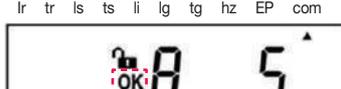Steps	LCD display	Remarks
 	<p>lr tr ls ts li lg tg hz EP com</p> 	Press Mode in the relay setting mode to display the communication address setting of the system setting mode. (Check the LCD display for the setting status.)
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Select the item to be changed (blink).
 	<p>lr tr ls ts li lg tg hz EP com</p> 	Change the item's value (blink)
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Confirm the changes you made (shows 'OK')

※ A: Address

### Changing the communication speed




ex) 9,600 → 38,400 bps

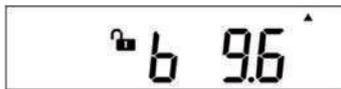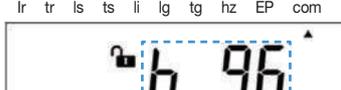Steps	LCD display	Remarks
   (short)	<p>lr tr ls ts li lg tg hz EP com</p> 	Press Mode in the relay setting mode to move to the system setting mode. Then, press Enter to move to the communication speed setting. (Check the status of the setting in the LCD display.)
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Select the item to be changed (blink)
 	<p>lr tr ls ts li lg tg hz EP com</p> 	Change the item's value (blink)
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Confirm the changes you made (shows 'OK')

## Change system settings

### Enable/disable remote configuration via network




ex) Local → Remote

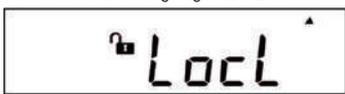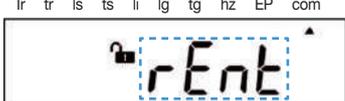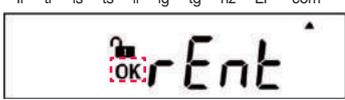Steps	LCD display	Remarks
 (short)		Press mode in the relay setting mode to move to the system setting mode. Then, press Enter to move to the enable/disable remote configuration settings. (Check the status of the setting in the LCD display.)
 (Long)		Select the item to be changed (blink).
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')

※ It is possible to change the settings remotely only when the 'Remote' mode is active.  
 LoCl: Local  
 rEnt: Remote

### Changing the DO output settings

ex) Display relay operation → CB Control

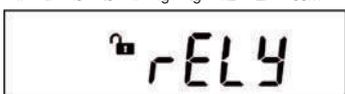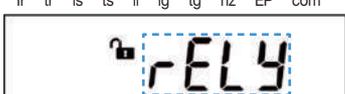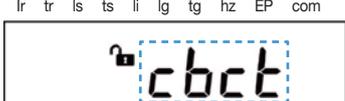Steps	LCD display	Remarks
 (short)		Press Mode in the relay setting mode to move to the system setting mode. Then, press Enter to move to the DO output setting. (Check the status of the setting on the LCD display.)
 (Long)		Select the item to be changed (blink).
		Change the item's value (blink)
 (Long)		Confirm the changes you made (shows 'OK')



※ CB Control: It is possible to control the CB using a dedicated MOP.  
 (The dedicated MOP with a communication function will become available starting from 2022.)  
 rELY: Relay  
 cbct: CB Control

# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Change system settings

### Change the settings for displaying relay operations




ex) LSI → LG

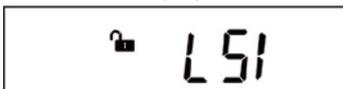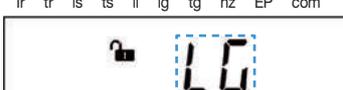Steps	LCD display	Remarks
 (short)	lr tr ls ts li lg tg hz EP com 	Press Mode in the relay setting mode to move to the system setting mode. Then, press Enter to move to the relay operation display mode. (Check the LCD display for setting status.)
 (Long)	lr tr ls ts li lg tg hz EP com 	Select the item to be changed (blink)
	lr tr ls ts li lg tg hz EP com 	Change the item's value (blink)
 (Long)	lr tr ls ts li lg tg hz EP com 	Confirm the changes you made (shows 'OK')

- ※ 1) LSI - DO1: Long time, DO2: Short-time/Instantaneous
- ※ 2) LG - DO1: Long time, DO2: Ground fault
- ※ 3) LSiG - DO1: Long time/Ground fault, DO2: Short-time/Instantaneous/Ground fault

### Changing the Feeder/Incoming setting

ex) Feeder → Incoming

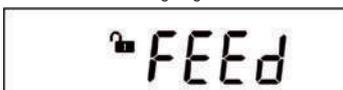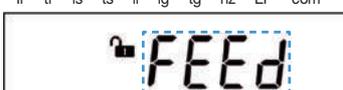
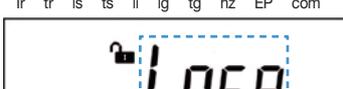
Steps	LCD display	Remarks
 (short)	lr tr ls ts li lg tg hz EP com 	Press Mode in the relay setting mode to move to the system configuration mode. Then, press Enter to move to the Feeder/Incoming setting. (Check the LCD display for setting status.)
 (Long)	lr tr ls ts li lg tg hz EP com 	Select the item to be changed (blink)
	lr tr ls ts li lg tg hz EP com 	Change the item's value (blink)
 (Long)	lr tr ls ts li lg tg hz EP com 	Confirm the changes you made (shows 'OK')

- ※ FEED: Feeder
- ※ Inco: Incoming

## Perform other resets


## Trip Test

The trip test for confirming the operation of MTD.

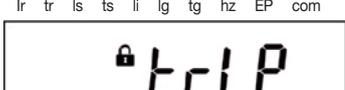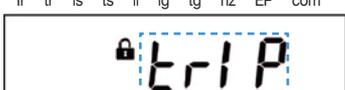Steps	LCD display	Remarks
	<p>lr tr ls ts li lg tg hz EP com</p> 	Press the 'Mode' button briefly to move to the communication and test display mode.
 (short)	<p>lr tr ls ts li lg tg hz EP com</p> 	Press 'Enter' briefly to move to the trip test item.
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Select trip test (blink).
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Perform a trip test (Shows OK.)

## Max. Value Reset

Power and energy data reset



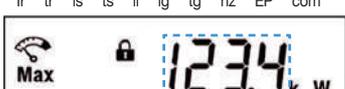
Steps	LCD display	Remarks
	<p>lr tr ls ts li lg tg hz EP com</p> 	Press 'Mode' briefly to move to the max. value display mode.
 (short)	<p>lr tr ls ts li lg tg hz EP com</p> 	Press 'Enter' briefly to move to the item that you wish to reset.
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Select the data to be rest (blink.)
 (Long)	<p>lr tr ls ts li lg tg hz EP com</p> 	Reset the data. (Shows 'OK')


# Smart trip units (ETSi, ETMi, ETHi, ETLi)

## Perform other resets

### Fault reset

Perform a fault reset when there is an accident.

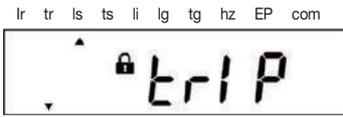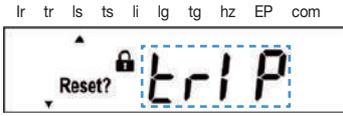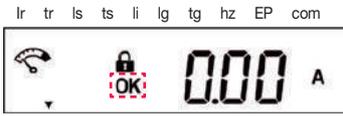Steps	LCD display	Remarks
		LCD display screen in case of an accident
 (Long)		Press and hold down 'Enter' to prepare for fault reset (blink)
 (Long)		Reset the data. (Shows 'OK.')

 





## Accessory

---

▪ Internal accessory	56
▪ External accessory	63
▪ Wiring diagram	102
▪ Standard accessories	103

---

# Internal accessory


## Possible configuration of electrical auxiliaries



### Maximum possibilities

Phase	Accessory	TS100	TS160	TS250	TS400	TS630	TS800
R (Left)	AX	1	1	1	3	3	3
	AL	1	1	1	-	-	-
	AX	1	1	1	1	1	1
T (Right)	AX	1	1	1	-	-	-
	AL	-	-	-	1	1	2
	FAL	1	1	1	1	1	1

### Where to install accessories

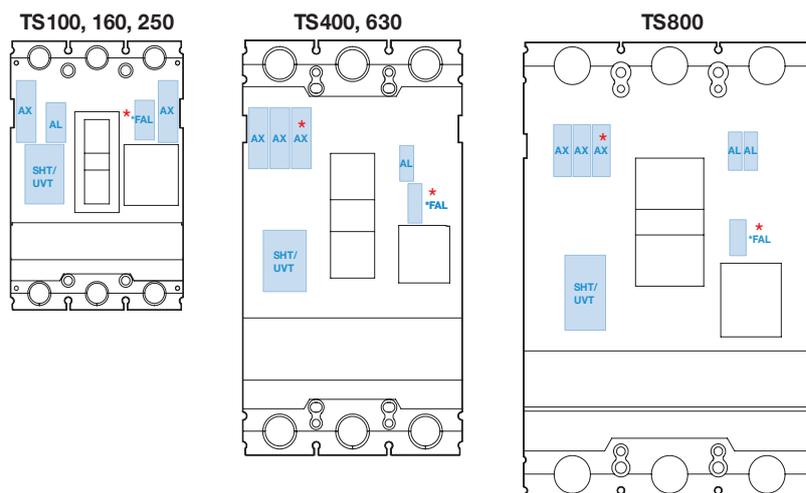

Note 1) ETMi, ETHi, and ETLi types cannot use \*FAL or \*AX.  
 Note 2) SHT/UVT/TAL cannot be used simultaneously.

## Auxiliary switch and Alarm switch

### Auxiliary switch, AX

Auxiliary switch is for applications requiring remote “ON” and “OFF” indication. Each switch contains two contacts having a common connection. One is open and the other closed when the circuit breaker is open, and vice-versa.



AX

### Alarm switch, AL

Alarm switches offer provisions for immediate audio or visual indication of a tripped breaker due to overload, short circuit, shunt trip, or undervoltage release conditions.

They are particularly useful in automated plants where operators must be signaled about changes in the electrical distribution system. This switch features a closed contact when the circuit breaker is tripped automatically. In other words, this switch does not function when the breaker is operated manually. Its contact is open when the circuit breaker is reset.




AL

### Fault alarm switch, FAL

FAL Indicates that the breaker has tripped due to overload or short circuit. And, it can be applied to only circuit breakers with electronic trip units.

### Contact operation

MCCB	ON	OFF	TRIP
Position of AX			
Position of AL, FAL			

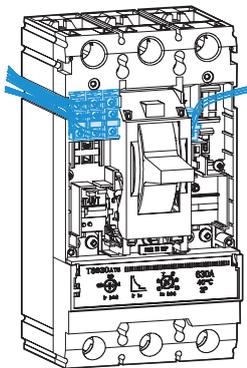

### Technical data

Conventional thermal current I <sub>th</sub>	5A				
	Voltage (U <sub>e</sub> )	Current (I <sub>e</sub> )		Minimum load current	Applicable MCCB
Resistance		Inductance			
AC 50/60Hz	125V	5	3	5V DC 160mA 5V DC 160mA	TS100, TS160 TS250, TS400 TS630, TS800
	250V	3	2		
	500V	-	-		
DC	30V	4	3		
	125V	0.4	0.4		
	250V	0.2	0.2		

# Internal accessory

## Under-Voltage Trip (UVT)



UVT



The undervoltage release automatically opens a circuit breaker when voltage drops to a value ranging between 35% to 70% of the line voltage. The operation is instantaneous, and after tripping, the circuit breaker cannot be re-closed again until the voltage returns to 85% of line voltage.

Continuously energized, the undervoltage release must be operating before the circuit breaker can be closed. The undervoltage release can be easily installed in the left accessory compartment of the Susol TS circuit breakers.

- Range of tripping voltage: 0.35 ~ 0.7Vn
- MCCB making is possible voltage: 0.85Vn (exceed)
- Frequency (only AC): 45Hz ~ 65Hz

### Rating

	Control voltage (V)	Consumption			Applicable MCCB
		AC (VA)	DC (W)	mA	
Power consumption	AC/DC 24V	0.64	0.65	27	TS100, TS160 TS250, TS400 TS630, TS800
	AC/DC 48V	1.09	1.10	23	
	AC/DC 110~130V	0.73	0.75	5.8	
	AC 200~240V/DC 250V	1.21	1.35	5.4	
	AC 380~440V	1.67	-	3.8	
	AC 440~480V	1.68	-	3.5	
Max. opening time (ms)		50			
Tightening torque of terminal screw		8.2 kgf·cm			
Transformer operating voltage (V)					
- Drop (Circuit breaker trips)		35~70% Vn			
- Rise (Circuit breaker can be switched on)		85% Vn			

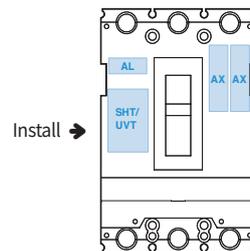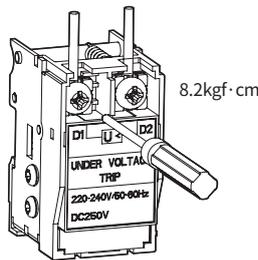

This is installed on the left-hand side of the handle of the breaker. It cannot be used simultaneously with the SHT (voltage trip unit).

## Electrical auxiliaries (SHT)



SHT



The shunt release opens the mechanism in response to an externally applied voltage signal. The releases include coil clearing contacts that automatically clear the signal circuit when the mechanism has tripped.

The shunt release can be installed in the left accessory compartment of the Susol TS circuit breakers.

- Range of operational voltage: 0.7 ~ 1.1Vn
- Frequency (only AC): 45Hz ~ 65Hz

### Rating

	Control voltage (V)	Consumption			Applicable MCCB
		AC (VA)	DC (W)	mA	
Power consumption	DC 12V	-	0.36	30	TS100, TS160 TS250, TS400 TS630, TS800
	AC/DC 24V	0.58	0.58	24	
	AC/DC 48V	1.22	1.23	25	
	AC/DC 110~130V	1.36	1.37	10.5	
	AC 220~240V/DC250V	1.80	1.88	7.5	
	AC 380~500V	1.15	-	2.3	
Max.opening time (ms)		50			
Tightening torque of terminal screw		8.2 kgf·cm			

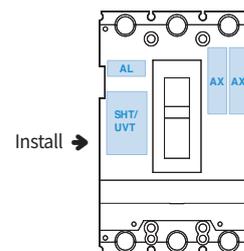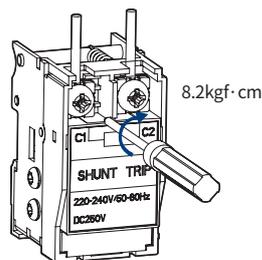

This is installed on the left-hand side of the handle of the breaker. It cannot be used simultaneously with the UVT (undervoltage trip unit).


# Internal accessory

## Trip alarm relay, TAL

The TAL (trip alarm relay) is a device that is used to display the trip status signal of the Smart MCCB breaker.


### Applicable breakers

- TS100Ni/Hi/Li ETMi/ETHi/ETLi
- TS250Ni/Hi/Li ETMi/ETHi/ETLi
- TS630Ni/Hi/Li ETMi/ETHi/ETLi
- TS160Ni/Hi/Li ETMi/ETHi/ETLi
- TS400Ni/Hi/Li ETMi/ETHi/ETLi
- TS800Ni/Hi/Li ETMi/ETHi/ETLi

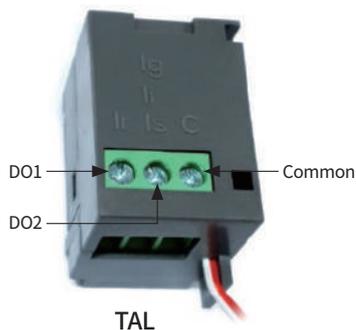


Assemble TAL on "SHT/UVT/TAL" marking. Attach the TAL in the area that is marked SHT/UVT/TAL.

TAL Lead Wire AWG 22 ~ 26

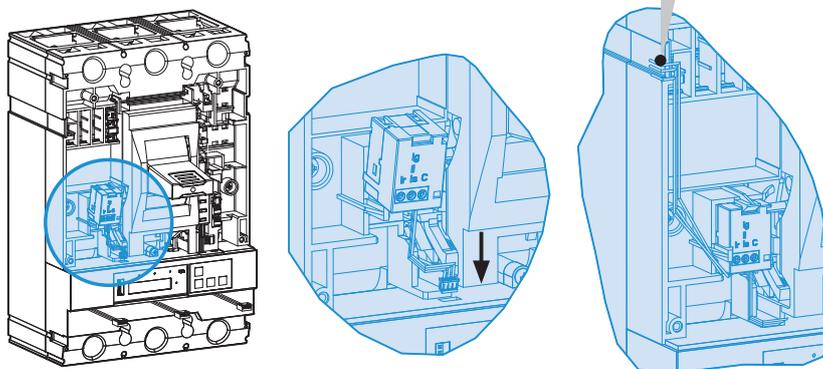

Assemble the connector according to indicated direction.

### Where to install accessories

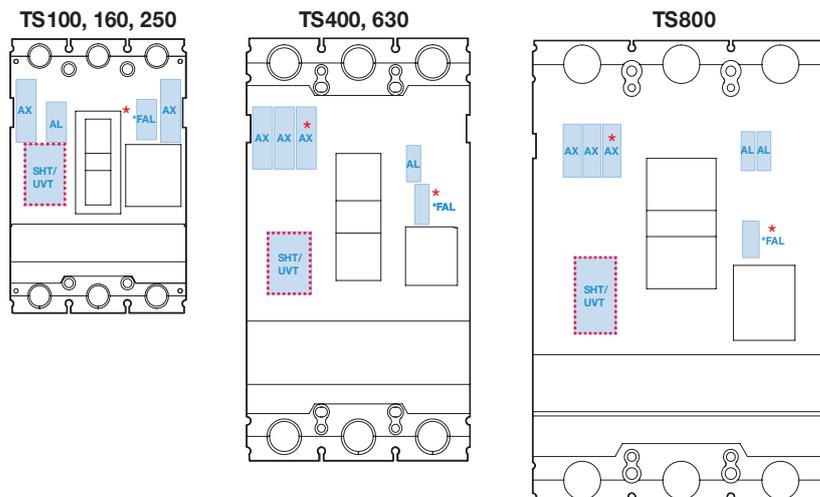

Note 1) ETMi, ETHi, and ETLi types cannot use \*FAL or \*AX.  
 Note 2) SHT/UVT/TAL cannot be used simultaneously.

### Contact operation status


Relay Cfg.	Ir (Long time)	Isd/li (Short-time/ Instantaneous )	Ig (Ground fault)
LSI			-
LG		-	
LSIG			

※ LSI : Long time, Short-time/ Instantaneous Protection  
 LG : Long time, Ground fault Protection  
 LSIG : Long time, Short-time / Instantaneous, Ground fault Protection

### TAL contact rated voltage and current

Items	AC		DC	
	Voltage	Current	Voltage	Current
Resistance load	250VAC	3A	30VDC	3A

### How to change the relay settings

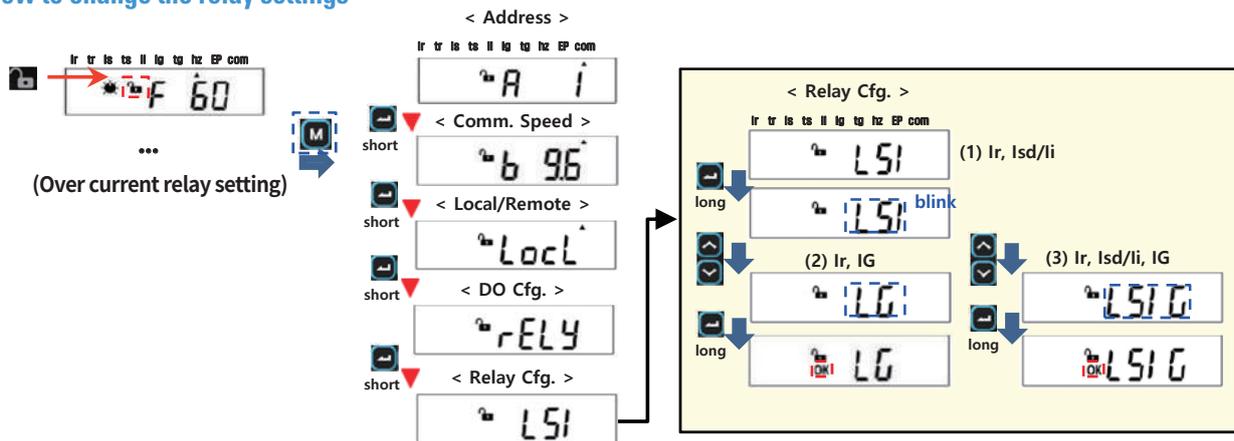

1. Press 'Unlock' while the ETU is energized.
2. Press 'Mode' to access the system settings change mode.
3. Press 'Enter' to move to the 'Relay Cfg.' screen.
4. Once you are in the 'Relay Cfg.' Screen, press, and hold down 'Enter' to access the change settings mode.

\* When you are in the change settings mode, the indicated item will blink.

5. While in the change settings mode, press 'Up/Down' to edit the setting.

\* For Relay, you can choose 'LSI,' 'LG,' or 'LSIG'

	Ir (Long time)		Isd/li (Short-time/Instantaneous)		Ig (Ground fault)	
	DO1	DO2	DO1	DO2	DO1	DO2
LSI	●				●	
LG	●					●
LSIG	●				●	●

6. To confirm the changes you made with the Relay settings, press and hold down 'Enter'

\* Once the changes you made are confirmed, the LCD display will show 'OK,' and the screen will stop blinking.

# Internal accessory


## Neutral voltage tap, NVT

The NVT wiring type is used to measure the voltage and power in a Smart MCCB 3-pole Trip Unit (ETHi/ETLi.) An electronic trip unit is connected to the NVT through a VT terminal.


### Applicable trip units

- TS100Ni/Hi/Li 3P ETHi/ETLi
- TS160Ni/Hi/Li 3P ETHi/ETLi
- TS250Ni/Hi/Li 3P ETHi/ETLi
- TS400Ni/Hi/Li 3P ETHi/ETLi
- TS630Ni/Hi/Li 3P ETHi/ETLi
- TS800Ni/Hi/Li 3P ETHi/ETLi


### NVT wiring type

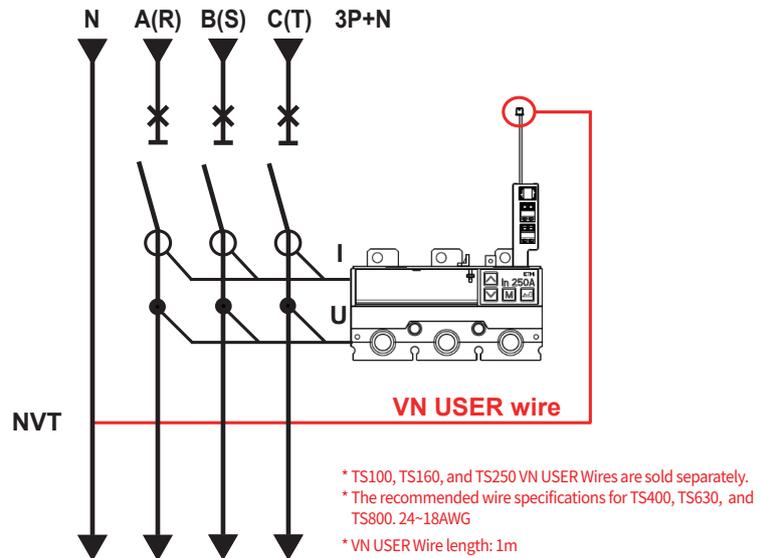

### Where to install accessories

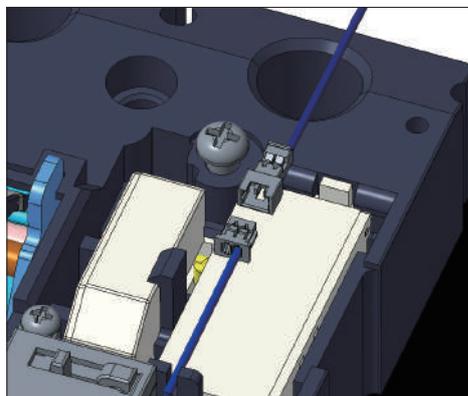


TS100, TS160, TS250

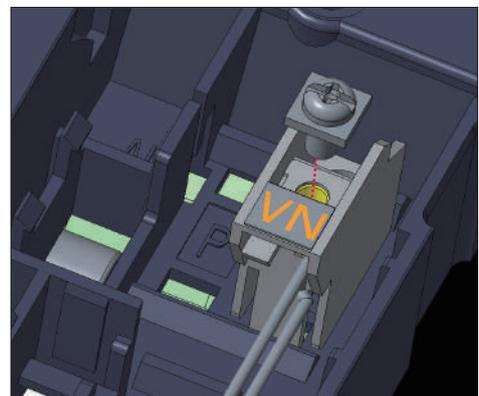

TS400, TS6300, TS800

## Rotary handle


The rotary handle operating mechanism is available in either the direct version or in the extended version on the compartment door. It is always fitted with a compartment door lock and on a request it can be supplied with a key lock in the open position.

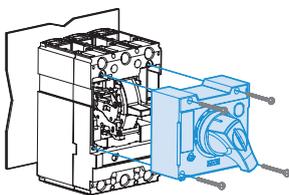

Direct rotary handles

### Direct rotary handles


MCCB	Rotary handle
TS100, 160, 250	DH2
TS400, 630	DH3
TS800	DH4

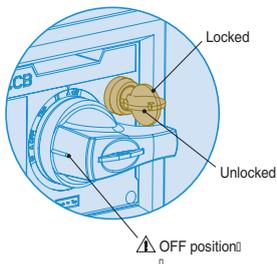

Direct rotary handle with a key lock

### Direct rotary handle with a key lock


MCCB	Padlockable device	Lock function
TS100, 160, 250	DHK2	Lock in On or Off position
TS400, 630	DHK3	
TS800	DHK3	

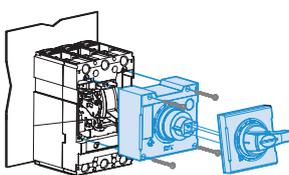


Extended rotary handles

### Extended rotary handles

MCCB	Padlockable device
TS100, 160, 250	EH2
TS400, 630	EH3
TS800	EH4

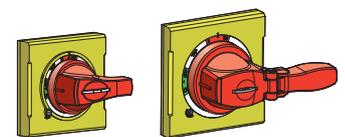

Red/Yellow color handle available


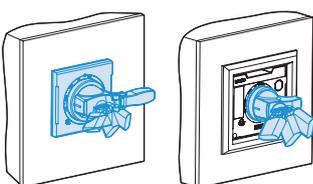


Padlocks for direct or extended handle

Padlocks can be used to lock the breaker in the ON or OFF position.

# External accessory




## Rotary handle

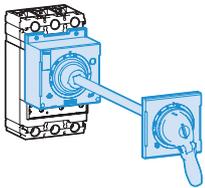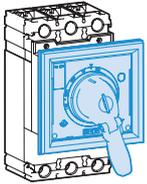

### Degree of protections

Type	Degree of protection	IP
Circuit breaker with cover frame and rotary direct handle	The access probe of 1.0mm diameter shall not penetrate.	IP40
Circuit breaker with cover frame and rotary extended handle	Totally protected against ingress of dust and water jets from any direction	IP65

### Type suffix according to the mounting position

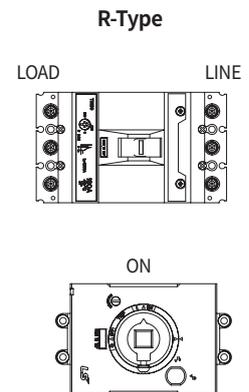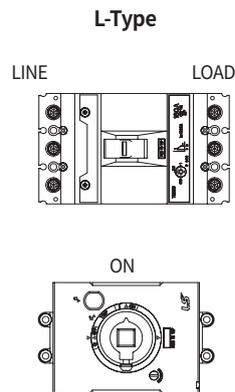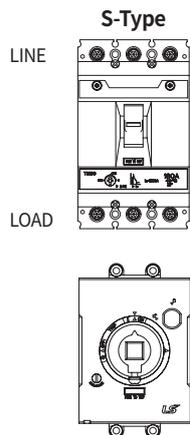

## Locking device

### Removable locking device



Removable locking device is available for all TS circuit-breakers. The locking device is designed to be easily attached to the circuit-breaker.

This device allows the handle to be locked in the “OFF” position. Locking in the OFF position guarantee isolation according to IEC 60947-2.

The locking device for the toggle handle can be installed in 3-pole and 4-pole circuit-breakers. Maximum three (3) padlocks with shackle diameters ranging from 5 to 8mm may be used. (Padlocks are not supplied)



MCCB	Padlockable device	Function
TS100, 160, 250	PL2	“OFF” position
TS400, 630	PL3	
TS800	PL4	

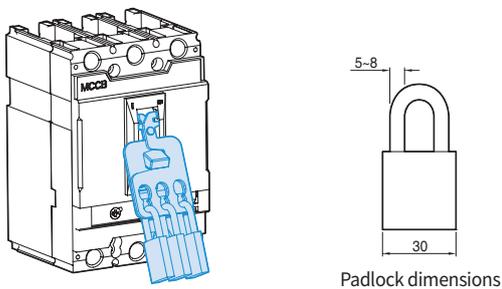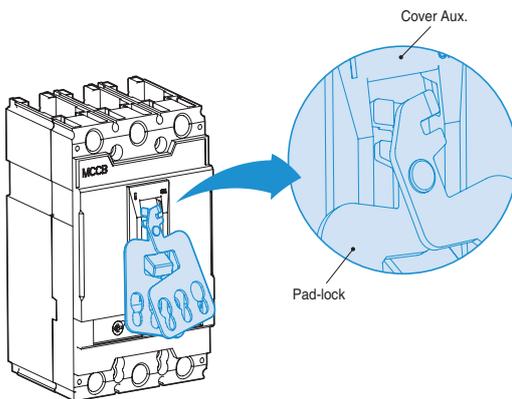

# External accessory

## Locking device

### Fixed locking device

Fixed locking device is available for all TS circuit-breakers. This device allows the handle to be locked in the "ON" and "OFF" position. Locking in the OFF position guarantee isolation according to IEC 60947-2.

The locking device for the toggle handle can be installed in 3-pole and 4-pole circuit-breakers. Maximum three (3) padlocks with shackle diameters ranging from 5 to 8mm may be used. (Padlocks are not supplied)




MCCB	Padlockable device	Function
TS100, 160, 250	PHL2	Lock in Off or On position
TS400, 630	PHL3	
TS800	PHL4	


### How to use

The locking device for the toggle handle is designed to be easily attached to the front of circuit-breaker.

- ① Please set the toggle handle in the position of "On" or "Off".
- ② Install the lock device onto the front of auxiliary cover of circuit breaker.
- ③ Folding the wings of lock device as shown in picture ③.
- ④ The padlock to be used shall be that which is commercially available with the nominal dimension. (30mm nominal dimension, 5-8mm diameter)

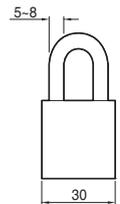


Padlock dimensions

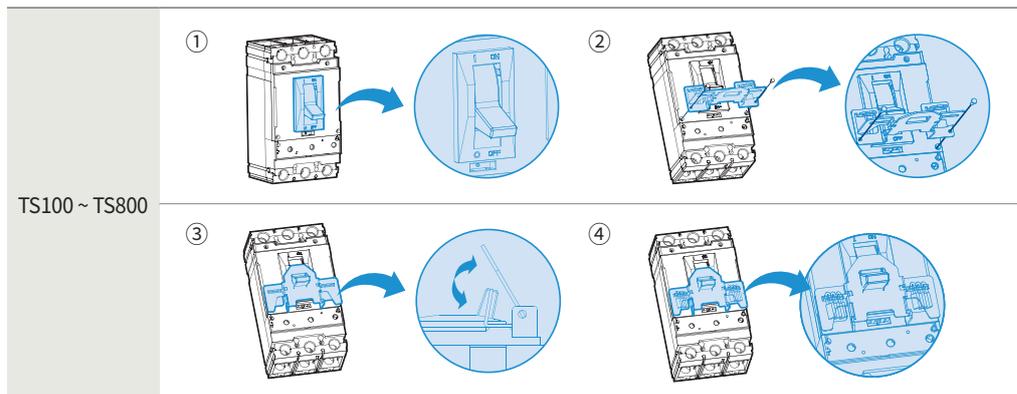

**Locking by rotary handle with a key lock**


A locking can be done by using the rotary handle which has key lock device. The lock is used to lock the circuit-breaker in the OFF position.

MCCB	Padlockable device	Function
TS100, 160, 250	DHK2	Lock in Off position
TS400, 630	DHK3	
TS800	DHK4	

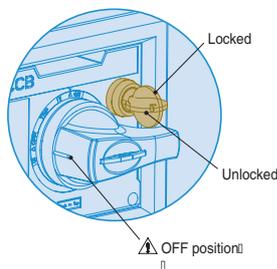


**Padlocking by rotary handle**

A padlocking can be also done by using the rotary handle. The lock is used to lock the circuit-breaker in the ON and OFF position. Maximum three (3) padlocks with shackle diameters ranging from 5 to 8mm may be used. (Padlocks are not supplied)

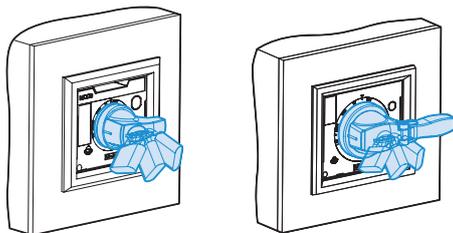

**Releasing panel door lock at ON position**

The panel door can be locked at ON and TRIP position of rotary handle. To open the panel door at ON position, just rotate release screw clockwise.

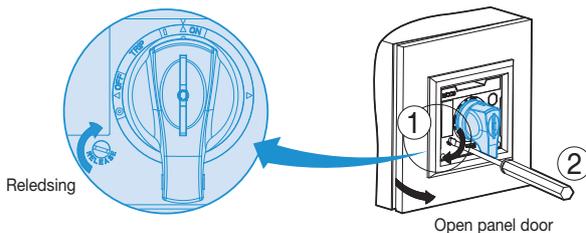

# External accessory

## Terminals

### Terminal mounter


It is supplied with Susol MCCBs as a standard part of circuit-breaker.  
Connecting part with terminal for bus bar, cable with lug.



MCCB	Type
TS100, 160, 250	TM2
TS400, 630	-
TS800	-




### Inner lug terminal

Bare cable connectors for Susol TS series circuit-breakers.  
Can be used for both aluminum and copper cables.

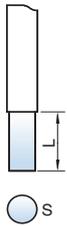

MCCB	Type	Pole	Set quantity	Cable connection possibilities	Conductor size	
TS100, 160, 250	SBT23	3	1 Set (3EA)	1	L(mm)	21
	SBT24	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al	10~150
			Tightening torque (kgf·cm)		120~147	
TS400, 630	SBT33 <sup>Note1)</sup>	3	1 Set (3EA)	1	L(mm)	30
	SBT34	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al	70~300
			Tightening torque (kgf·cm)		367~428	
PB12, 13	IBT13 <sup>Note2)</sup>	3	1 Set (3EA)	1	L(mm)	18
	IBT14	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al	2.5~95
			Tightening torque (kgf·cm)		306	
PB22, 23	IBT23 <sup>Note2)</sup>	3	1 Set (3EA)	1	L(mm)	21
	IBT24	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al	10~150
			Tightening torque (kgf·cm)		306	


Note) 1. IBT3 for TS630 can be applied in case that rate current is upto 400A.  
2. IBT13, 23 are for Plug-in base.

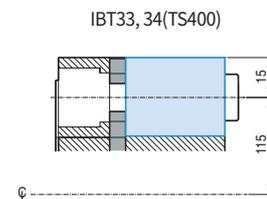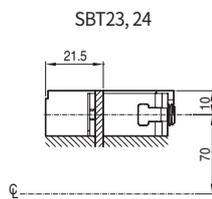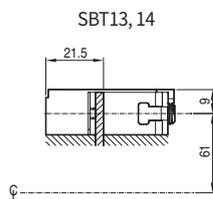


**Extended lug terminal**

The extended box terminals for TS circuit breakers can be used for cooper cables/bars and aluminum cables. There (3) kinds of terminals.


- For TS100, TS160, TS250: 1-cable connector (EBT23, EBT24)
- For TS400, TS630: 2-cable connector (EBT33, EBT34)
- For TS800: 3-cable connector (EBT43, EBT44)

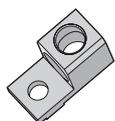

1-cable connector

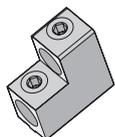

2-cable connector

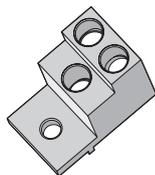


3-cable connector




MCCB	Type	Pole	Set quantity	Cable connection possibilities	Conductor size
TS100, 160, 250	EBT23	3	1 Set (3EA)	1	L(mm) 24
	EBT24	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al 10~150
			Tightening torque (kgf·cm) 306		
TS400, 630	EBT33	3	1 Set (3EA)	1	L(mm) 33 or 62
	EBT34	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al 2×85 to 2×240
			Tightening torque (kgf·cm) 367~428		
TS800	EBT43	3	1 Set (3EA)	1	L(mm) 25~48
	EBT44	4	1 Set (4EA)		S(mm <sup>2</sup> )Cu/Al 3×85 to 3×240
			Tightening torque (kgf·cm) 367~428		


EBT13, 14

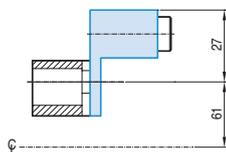


EBT23, 24

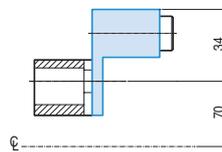

EBT33, 34

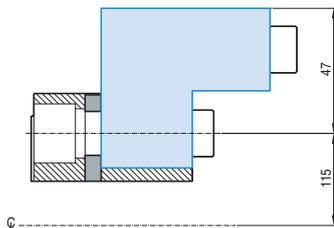

EBT43, 44


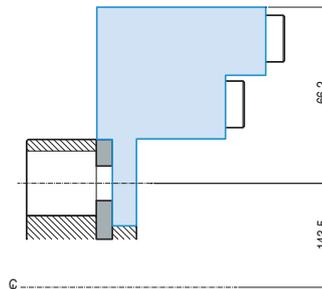


# External accessory

## Terminals

### Spreader 100~250AF


As an optional part of circuit-breaker  
Can increase the pitch of the terminals.

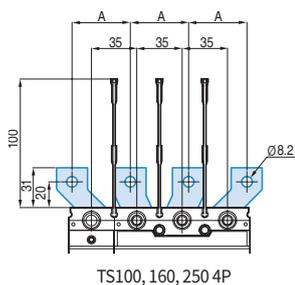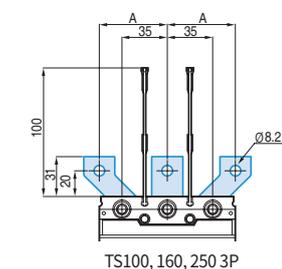


MCCB	Pole	Type	Size (mm)	Feature
TS100, 160, 250	2P	SP22a	45	
	3P	SP23a		
	4P	SP24a		
	2P	SP22b	52.5	
	3P	SP23b		
	4P	SP24b		

**Spreader  
400~800AF**


As an optional part of circuit-breaker  
Can increase the pitch of the terminals.

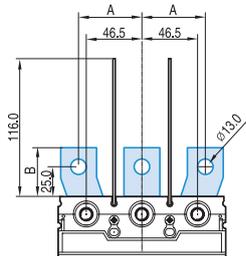


TS400, 630 3P

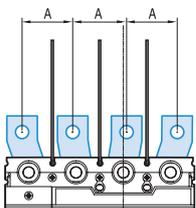

TS400, 630 4P

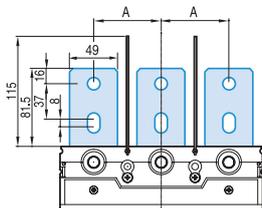

TS800 3P

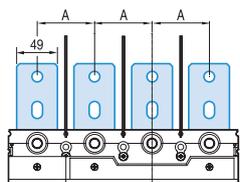

TS800 4P

MCCB	Pole	Type	Size (mm)		Feature
TS400, 630	2P	SP32a	52.5	41	
	3P	SP33a			
	4P	SP34a			
	2P	SP32b	70	54	
	3P	SP33b			
	4P	SP34b			
	2P	SPS32	46.5	41	
	3P	SPS33			
	4P	SPS34			
TS800	2P	SPS42	70	81.5	
	3P	SPS43			
	4P	SPS44			

# External accessory

## Terminals

### Rear connection terminal

Rear connection terminals are used to adapt Susol TS circuit-breakers to switchboards or other applications that require rear connection.



These can be connected directly to circuit breakers without any modification

There are two kinds of rear connection terminals.

- Flat type
- Round type

### Flat type (Flat vertical terminals)


MCCB	2-pole	3-pole	4-pole
TS100, 160, 250	RTB22	RTB23	RTB24
TS400, 630	RTB32	RTB33	RTB34
TS800	RTB42	RTB43	RTB44

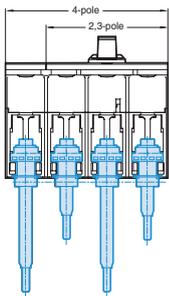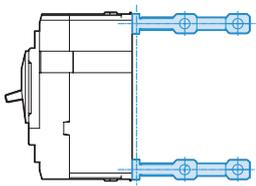

Flat type

#### TD160, TS250

BOLT, HEX. SOCKET, P.S/W, M6, L15  
Torque: M6 (51.1 ~ 64.9kgf-cm)

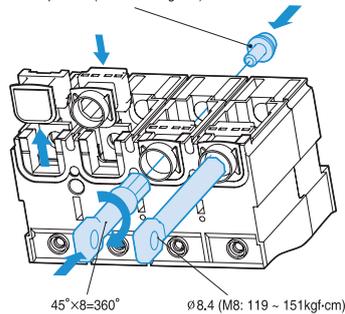


#### TS630

BOLT, HEX. SOCKET, P.S/W, M8, L20  
WASHER SPRONG LOCK D10  
WASHER PLAIN D10  
Torque: M8 (119 ~ 151kgf-cm)



#### TS800

BOLT, HEX. SOCKET, P.S/W, M12, L35  
Torque: M12 (423 ~ 537kgf-cm)

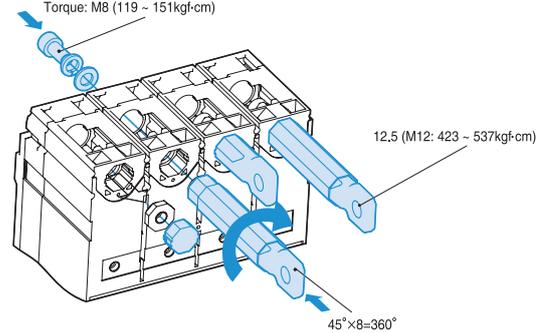

### Round type (Round threaded terminals)

MCCB	2-pole	3-pole	4-pole
TS100, 160, 250	RTR22	RTR23	RTR24
TS400, 630	-	-	-
TS800	-	-	-

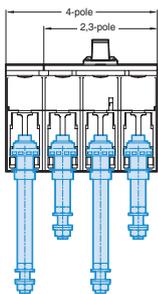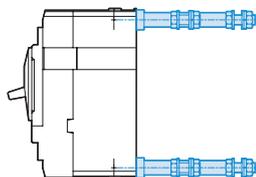

Round type

## Terminal cover

The terminal covers are applied to the circuit-breaker to prevent accidental contact with live parts and thereby guarantee protection against direct contacts.

### Long type covers, ITL

IP40 degree of protection

For fixed circuit-breakers with front, front extended, front for cables terminals.

### Short type covers, ITS

IP40 degree of protection

For fixed circuit-breakers with rear terminals and for moving parts of plug-in




Short type covers



Long type covers

MCCB		Terminal cover	
Frame type	Pole	Long type	Short type
TS100, 160, 250	2P, 3-pole	ITL23	ITS23
	4-pole	ITL24	ITS24
TS400, 630	2P, 3-pole	ITL33	ITS33
	4-pole	ITL34	ITS34
TS800	2P, 3-pole	ITL43	ITS43
	4-pole	ITL44	ITS44

Note1) 2P in 3pole mold case

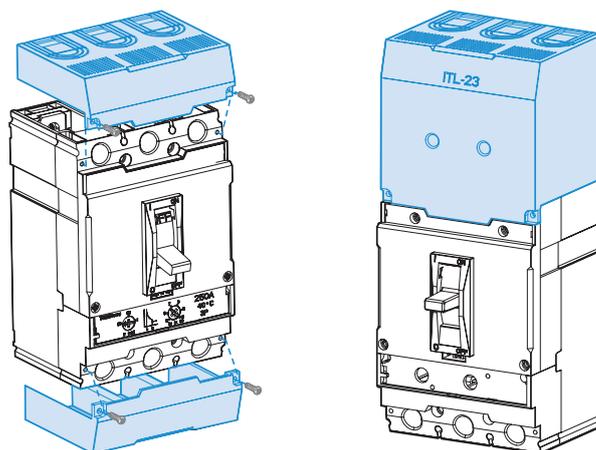

# External accessory

## Insulation barrier




Insulation barriers

These allow the insulation characteristics between the phases at the connections to be increased. They are mounted from the front, even with the circuit-breaker already installed, inserting them into the corresponding slots.

They are incompatible with both the insulating terminal covers.

It is possible to mount the phase separating partitions between two circuit-breakers side by side.

Applied MCCB	Set quantity
TS100, 160, 250	B-23C
TS400, 630	B-33C
TS800	B-43C

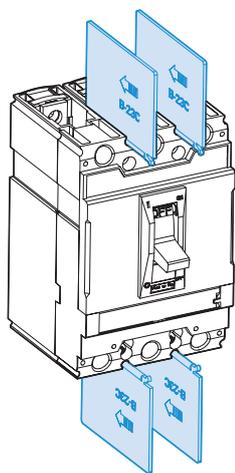

## Mechanical interlock




Mechanical Interlock  
(Padlocks are not supplied)

The mechanical interlock (MIT) can be applied on the front of two breakers mounted side by side, in either the 3-pole or 4-pole version and prevents simultaneous closing of the two breakers. Fixing is carried out directly on the cover of the breakers.


The front interlocking plate allows installation of a padlock in order to fix the position. (possibility of locking in the O-O position as well)

This mechanical interlocking device is very useful and simple for consisting of manual sourcechangeover system.


### Operation

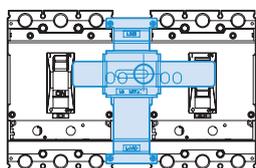

Left MCCB: ON/OFF is possible  
Right MCCB: Off lock

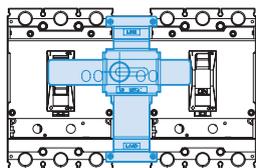


Left MCCB: Off lock  
Right MCCB: ON/OFF is possible

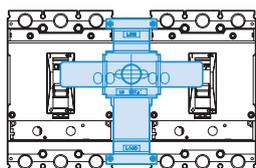

Both MCCBs are of locked

MCCB		Interlock
Frame type	Pole	
TS100, 160, 250	3-pole	MIT23
	4-pole	MIT24
TS400, 630	3-pole	MIT33
	4-pole	MIT34
TS800	3-pole	MIT43
	4-pole	MIT44

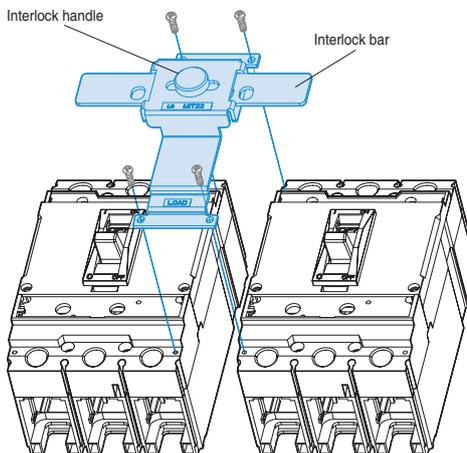

# External accessory

## Plug-in system


The plug-in base is the fixed part of the plug-in version of the circuit-breaker. It will be installed directly on the back plate of panel. The circuit-breaker is racked out by unscrewing the top and bottom fixing screws.

Plug-in base makes it possible to extract and/or rapidly replace the circuit breaker without having to touch connections for ship and important installations.




MCCB	Pole	Arrangement	Type	Means
TS100, 160, 250	2	Single line	PB22	
	3	Single line	PB23	
TS400, 630	2	Single line	PB32	
	3	Single line	PB33	
TS800	2	Single line	PB42	
	3	Single line	PB43	

### Front connection

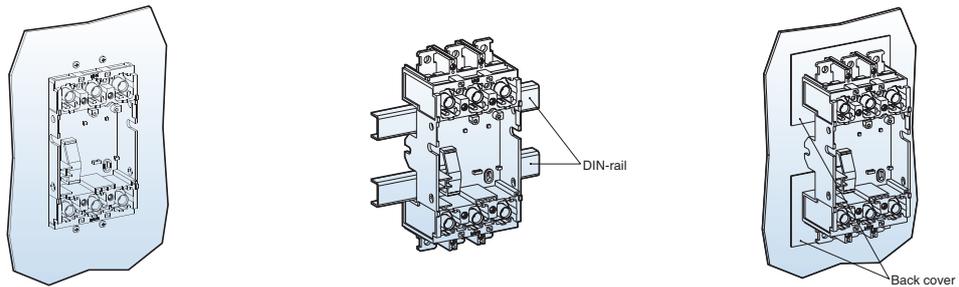


### Rear connection

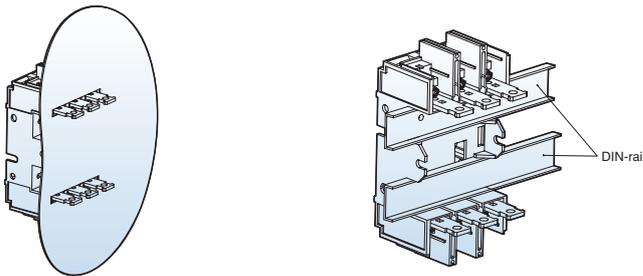

### Normal type Plug-in MCCB: PB□ type


MCCB rating: TS100~TS800  
Generally used in switchgears

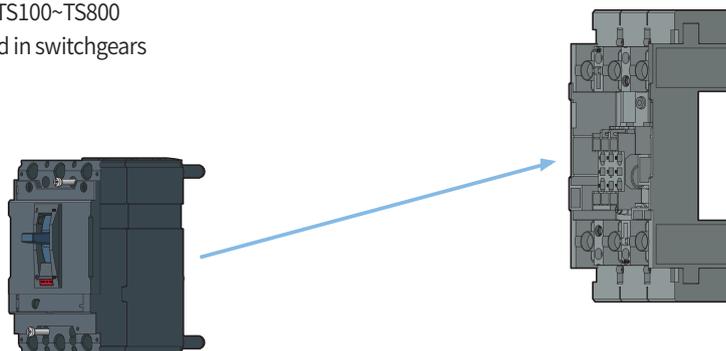


**Assembling procedure**

**TS100, 160, 250**


**1. Conversion to Plug-in MCCB**

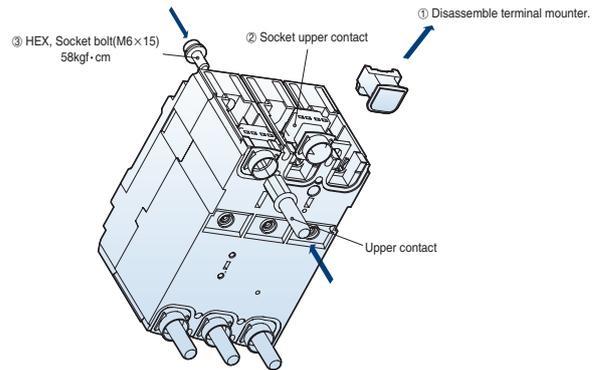

**2. Assembling safety device**

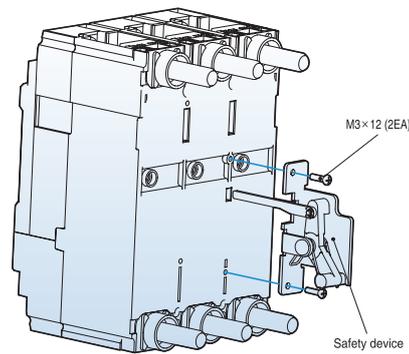

**3. Assembling MCCB and plug-in device**

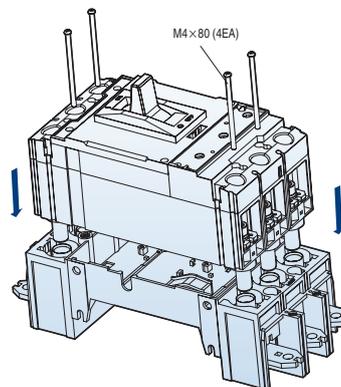


# External accessory

## Plug-in device


### Assembling procedure

TS400, 630


#### 1. Conversion to Plug-in MCCB

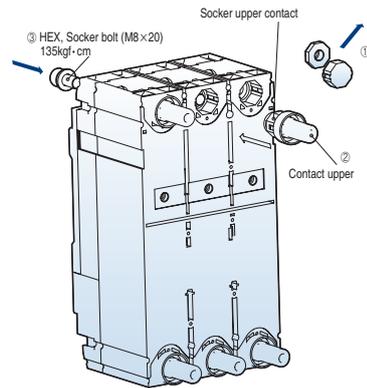

#### 2. Assembling safety device

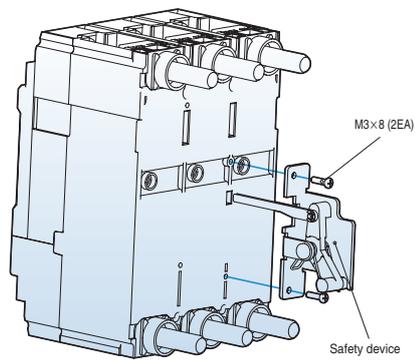


#### 3. Assembling MCCB and plug-in device

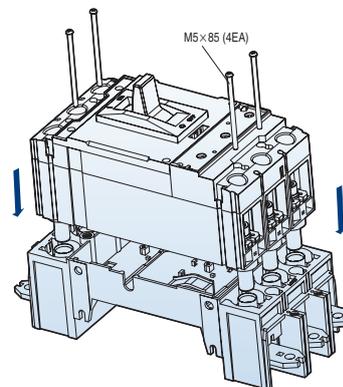


**Assembling  
procedure**

**TS800**


**1. Conversion to Plug-in MCCB**

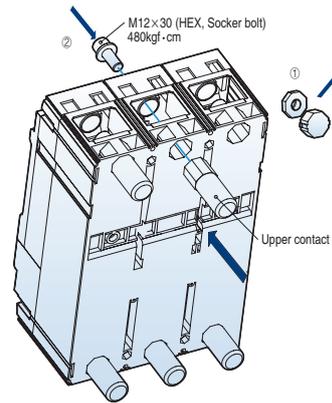

**2. Assembling safety device**

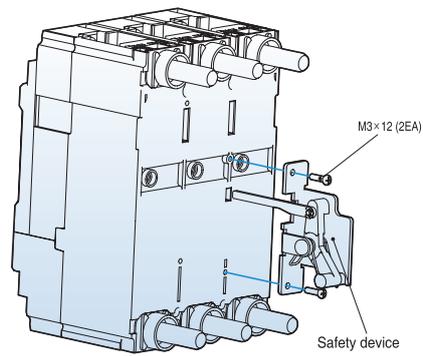

**3. Assembling MCCB and plug-in device**

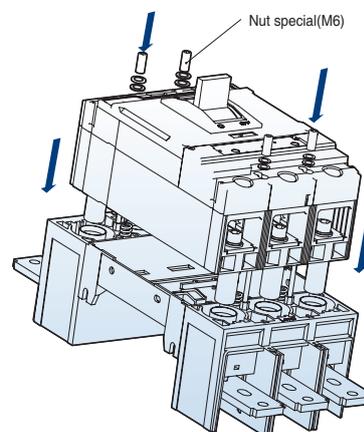

# External accessory


## Connector KIT

Electric auxiliary circuit (AX, AL, SHT, UVT) from Breaker via one to three connector KIT (nine wires each). These are made of moving part on Breaker and fixed part on plug-in base up to 800AF.


Breaker Max.	Fixed part		Moving part	
	Max. Installed Q'TY	Description	Q'TY	Description
TS250	2	SPARE PART ASS'Y, CONNECOR KIT	1	SPARE PART ASS'Y, BASE CONNECTOR, TS250
TS400/630	3		1	SPARE PART ASS'Y, BASE CONNECTOR, TS630
TS800	3		1	SPARE PART ASS'Y, BASE CONNECTOR, TS800

### TS250

#### Moving part

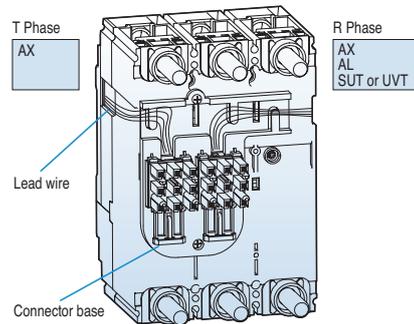


#### Fixed part

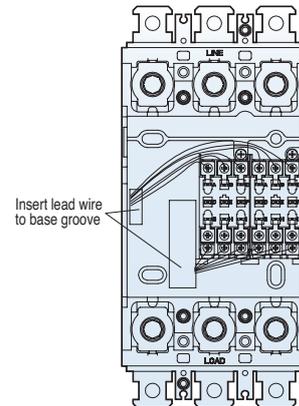


**TS400/630**

Moving part

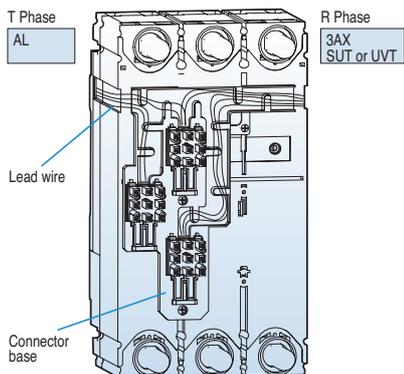


Fixed part

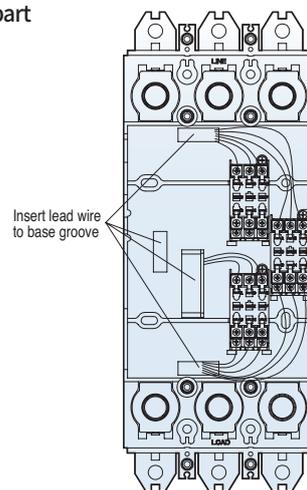


**TS800**

Moving part

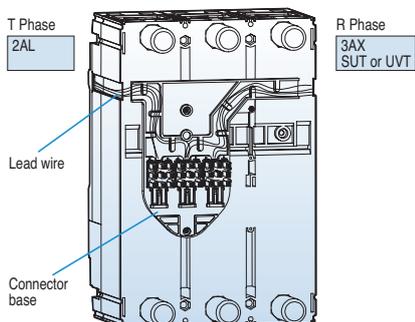


Fixed part

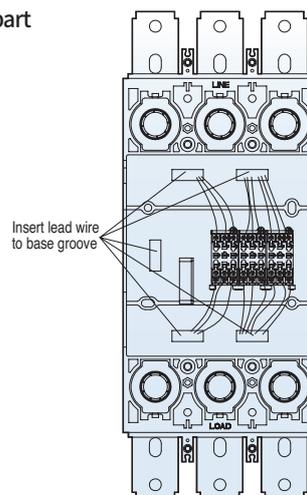

**Read wire color**

Moving part

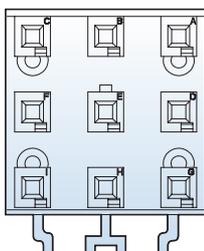


Lead wire color

A: Red	B: White	C: Black
D: Blue	E: Yellow	F: Green
G: Gray	H: Orange	I: Brown

Note) Useless lead wires should be ended for Preventing an electric accident.


Fixed part

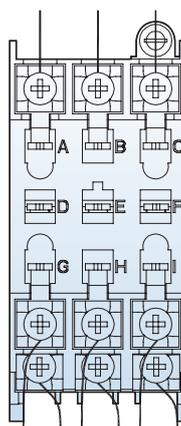

Lead wire color

A: Red	B: White	C: Black
D: Blue	E: Yellow	F: Green
G: Gray	H: Orange	I: Brown

Note) Useless lead wires should be ended for Preventing an electric accident.  
- To connent AL and FAL solder the wire and insulates the wire

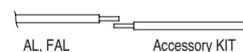

# External accessory

## Motor operator

Motor operators can also be operated by manual. The motor drives a mechanism which switches TS toggle handle to the “ON” and “OFF/RESET” positions.

- The manual actuator handle is located on the front of the cover.
- Manual or Automatic operation can be selected.
- Applicable to 2, 3 and 4-pole breakers.

The motor operator is an essential device for constructing a remote operated automatic source-changeover system to ensure a continuous supply of electrical power at following certain installations:

- Commercial sector: Hospital, Tall building, Bank, Insurance companies, Shopping centers
- Industry: Ships, Assembly lines at plant, Military sites, Port and Railway installation


### Model and rating



TS250 + MOP2


Smart MCCB	Type	Control voltage	Actuation current (A)	Response time (ms)		Consumption (W)	Mechanical service life (operations)	No. of operations per hour
				Closing	Opening			
TS100, 160, 250	MOP2	① DC 24V ② AC 100~110V/ DC 110V ③ AC 230V/DC 220V	$\leq 5A$ (DC 24V) $\leq 2A$ (AC)	350	230	14	25,000	120
TS400, 630	MOP3			500	350	35	20,000	60
TS800	MOP4			700	420	35	10,000	20

### Wiring connection

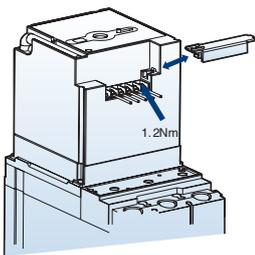

#### Standard connection

Circuit breaker On and Off controlled by remote operation and manual operation

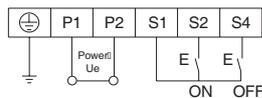


#### Connection with alarm switch (AL)

- 1) The below connection diagram is the method of using an alarm switch (AL) without shunt or undervoltage trip.
- 2) After clearing the fault surely, manual reset is mandatory in case of tripping due to an electrical fault.


#### Connection with FAL (only for the breakers with electronic trip unit ETS or ETM)

- 1) The below connection diagram is the method of using a FAL for circuit breakers with electronic trip unit.
- 2) After clearing the fault surely, manual reset is mandatory in case of tripping due to an electrical fault.

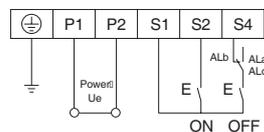


Exterior description

1. On position indication (Red color)
2. Trip position indication (White color)
3. Off position indication (Green color)
4. Button for push to trip (available for only for and TS630AF)
5. On/Off/Reset selection lever
6. Manual/Auto selection lever

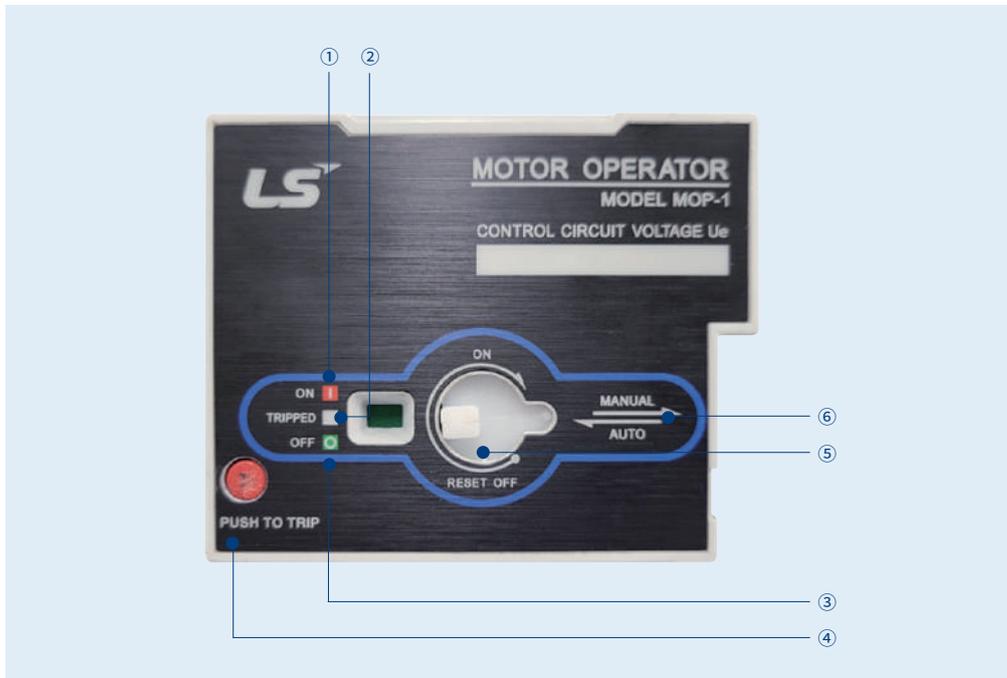

Manual operation

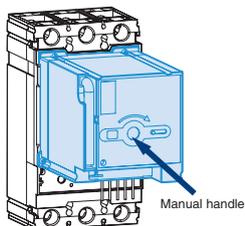


- 1) Insert the manual handle into the slot of Motor Operator surface and rotate it clockwise.
- 2) It must be rotated just 180° clockwise for safe operation of micro switch in the motor operator.
- 3) Return the manual handle after the manual operation
- 4) Turn the slide switch back to the position of AUTO.


**CAUTION:** When the circuit breaker is tripped by trip button in the OFF status, it is impossible to operate motor operator automatically. It must be reset by manual operation.

Automatic operation

- 1) Set the slide switch to AUTO, then internal power is closed automatically.
- 2) ating frequency should be less than these below regulated values.  
TS250Ni/Hi/Li:180 operations per hour
- 3) Use the ON/OFF switch in the range of regulated values.
- 4) It may interfere near communication equipments because of internal switching power supply.  
It's recommended that a noise filter be installed to power supply.
- 5) Please do not input ON/OFF signals at the same time during the automatic operation.
- 6) If the circuit breaker has a UVT attached inside, charge a UVT on the rated voltage before performing MOTOR OPERATOR.

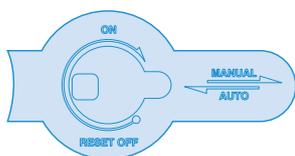

[TS100, 160, 250]

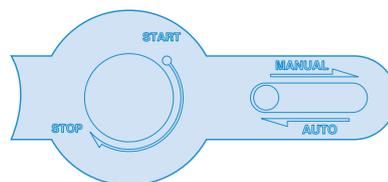

[TS400, 630, 800]

# External accessory

## Residual Current Devices (RCD)

### Summary

The Smart Susol circuit breaker can offer protection against earth leakage currents by using an add-on residual current device (RCD). In particular, the TS100, TS160 and TS250 circuit breakers can be combined with the RTU23/24 of residual current device, the TS400 and TS600 circuit breakers can be combined with the RTU33/34 of residual current device and the TS800 circuit breaker can be combined with the RTU43 of residual current device. In all cases the RCD unit interfaces directly below the circuit breaker trip unit area without the use of any secondary wiring or connections.

The Smart Susol circuit breaker and an RCD unit combination can be connected like any stand-alone breaker and are available as fixed or plug-in devices. The main connection interface of the RCD is an exact replacement of the breaker connection area, thus allowing the use of all standard breaker terminals.

### Overview

Apart from the protection against overloads typical of automatic circuit breakers, the residual current circuit breaker derived from them also guarantee protection of people against earth leakage currents, thereby ensuring protection against direct contacts, indirect contacts and fire hazards.-(ELCB)

The RCD unit has numerous current and time settings and an override blocking the time settings when set to 30mA. The earth leakage test button tests the electrical and mechanical operation of the device. In order to allow for a dielectric test of the breaker and RCD combination without damaging the electronics, the dielectric plug is placed within the setting area. The RCD unit may be equipped with an alarm switch (FAL) to remotely indicate tripping due to an earth leakage current.

### Compliance with standards

- IEC 60947-2 (industrial), Appendix B
- IEC 61009 (residential)
- IEC 60755, class A, immunity to DC components up to 6mA
- VDE664, operation down to -25°C


### Remote indications

RCD unit may be equipped with an alarm contact (FAL-fault alarm switch) to remotely indicate tripping due to an earth leakage current.

### Power supply

RCD unit are self-supplied internally by the distribution-system voltage and therefore do not require any external source. They continue to function even when supplied by only two phases.

### Configuration

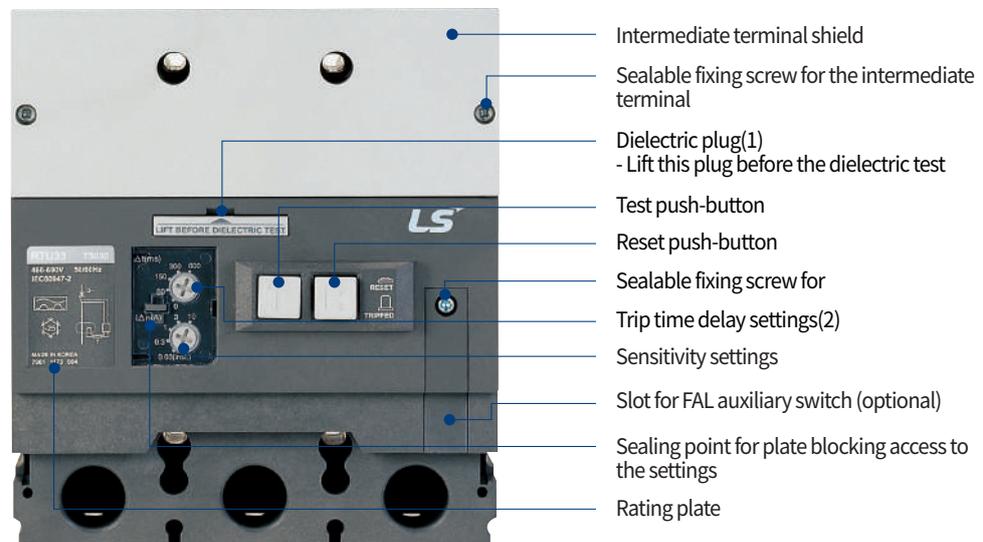

- If the sensitivity is set to 30 mA, there is no time delay. Whatever the time-delay setting.

## Ratings and Selection



RCD type		RTU23	RTU24	RTU33	RTU34	RTU43
Number of poles		3*	4	3*	4	3*
Applicable circuit breaker	TS100	■	■			
	TS160	■	■			
	TS250	■	■			
	TS400			■	■	
	TS630			■	■	
	TS800					■
Sensitivity	$I\Delta n$ (A)	(adjustable) 0.03-0.3-1-3-10				
Time delay **	Intentional time delay (ms)	(adjustable) 0-60-150-300-600				
	Max. breaking time (ms)	(adjustable) 40-150-300-600-990				
Rated voltage	AC 50/60 Hz	220~460V / 460~690V				
MCCB	L×H×D (mm)	105×160×86	140×160×86	140×260×110	186.5×260×110	210×320×135
MCCB + RCD		105×240×86	140×240×86	140×370×110	186.5×370×110	210×450×135
RCD		105×80×86	140×80×86	140×110×110	186.5×110×110	210×130×135
MCCB + RCD	Weight (kg)	2.7	1.1	8.1	3.9	16.3
RCD		1.0	3.7	2.6	11.1	4.6

- Note) 1. RTU can not be applied to 63A or less MTU type MCCB.  
 2. RTU can not be applied to MCCB (Electronic trip unit) + D/E-Handle  
 3. RTU24, RTU34: Only combination of N-R-S-T type MCCB is possible

# External accessory

## Panel HMI (3.5inch)

### Specification

Model name	Rated voltage	Power consumption	Temperature range	
IHM8	DC24V(±20%)	3.0W or less	Operate	-20 ~ +60(°C)
			Store	-30 ~ +80(°C)



- Color TFT LCD (3.5" or more) + LED backlight
- User operation : cancel, move (up), move (down), confirm, set
- Displays communication status LED
- Supports two languages (English and chinese)
- Supports upgrade function through USB port (PC manager connection)
- Sub-device connection through RS-485 communication
  - : Connects up to 8 sub-devices
  - : 9,600, 19,200, 38,400, 57,600bps support
- Fail safe and termination selection switch applied


### Display screen

- **Basic information of circuit breaker**
  - Number of poles, rated voltage, rated current, communication address, communication speed, control method
  - Manufacturer, model name, H/W version, S/W version, communication version, serial number
- **Current/Time of circuit breaker relay**
  - Long time delay, short-time delay, instantaneous, ground fault
- **Measurement data of circuit breaker**
  - Voltage, current, active/reactive/apparent power for each phase
  - Energy : EP, EQ, rEP, rEQ, ES display
  - PQ (Power Quality) : Freq, PF, THD, TDD
  - Max Demand : Current value for each phase, active/reactive/apparent power
- **Breaker operation history**
  - Operating time, circuit breaker close time
  - Number of electrical operations, number of mechanical+electrical operations, number of trip operations
  - Contact consumption rate (0~100%)
- **Circuit breaker DI/DO status information and control**
- **History of events that occurred in the circuit breaker (save 20)**
- **Fault history of circuit breaker (save 20)**

### Target device

Type	Model name
Smart MCCB	Susol Smart MCCB
Smart ACB	Susol ACB STU, Metasol ACB STU
MCB	MCB Connected with M LINK

## Screen description

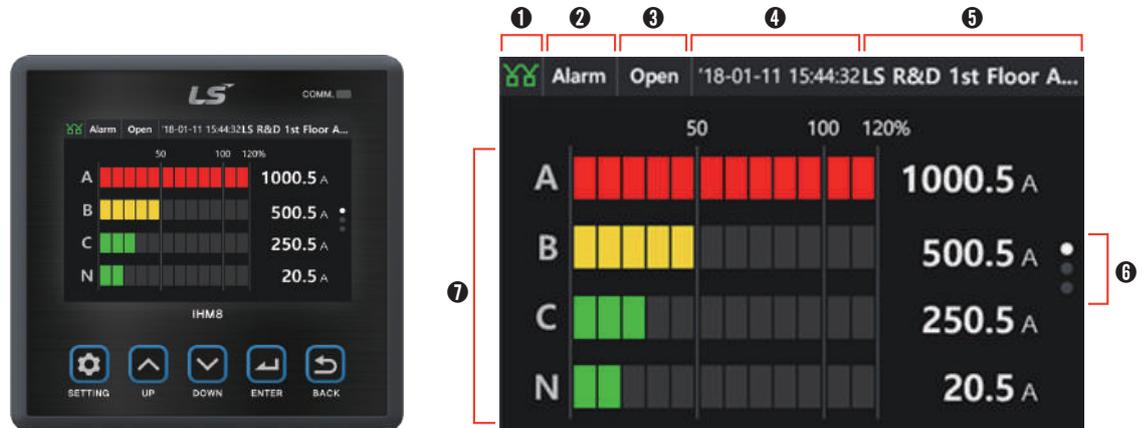

### ❶ Communication connection status display

- "Communication connected" or "Communication not connected" is indicated by the RS485 communication icon.

### ❷ Alarm display

- If there is no alarm, it is shaded. When a new alarm is generated, 'Alarm' is displayed.

### ❸ Contact status display

- Displays the breaker's contact status ('Close', 'Open', 'Trip').

### ❹ Time display

- Displays the time (year-month-day hour : minute : second) of the connected device.

### ❺ Name display

- Displays the name of the connected device.

### ❻ Page display

- Displays the number of connected devices and brightly displays the order of the currently displayed screen.

### ❼ Load current display


- It is displayed as 'A/B/C' or 'A/B/C/N' depending on the load connection.

- The size and color of the graph change depending on the load factor.

- Displays the load current value.

\* The screen configuration of ACB and M LINK is different from that of MCCB, so please refer to the user manual.

## Exterior description

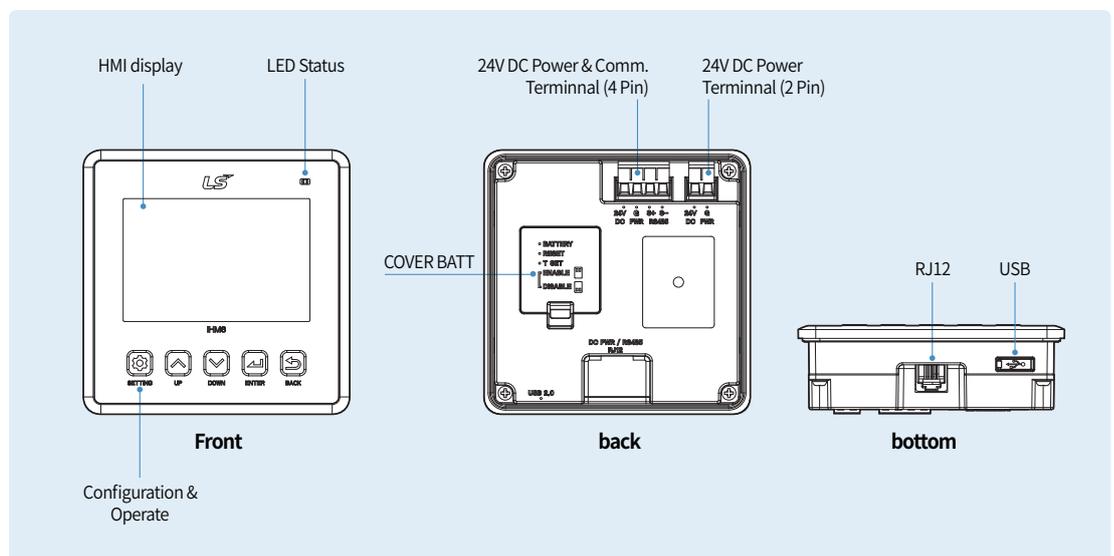

# External accessory

## Panel HMI (7.0inch)

### Specification



Model name	Rated voltage	Power consumption	Temperature range	
IHM32	DC24V(±20%)	23.0W or less	Operation	0 ~ +50 °C
			Storage	-20 ~ +60 °C

- Color TFT LCD (7.0" or more) + LED backlight
- User operation: Touch pad
- Indication of device communication status
- Supports two languages (English and chinese)
- Support upgrade function through USB port
- Sub-device connection through ethernet communication
  - : Up to 32 sub-devices (up to 40 devices can be connected for E TAG)
  - : Up to 16 sub-devices can be selected and displayed (screen output)

### Display screen

#### • Dashboard

- Full information display: Displays communication status with gateway, panel name, and system date/time
- Quick View: Displays representative information of the device selected for monitoring in the form of icons
- Alarm: Displays the alarm information of the device selected for monitoring in the form of a list
- Event: Displays the event information of the device selected for monitoring in the form of a list
- Setting: Gateway IP for communication linkage, device selection for monitoring, user password, etc.

#### • Device Details

- Monitoring: Displays device status, communication status, measurement data, operation time, DI/DO status
- Control: Performs device On/Off control
- Management: Display and reset history and count data information
- Event: Displays incident event, device operation and abnormal event
- View setting: Displays device setting value and relay element setting value
- Device information display: Displays device-specific information such as device ID and device name

### Target device

Type	Model name
Communication device	Data Logger, Gateway, Ethernet Converter, E COLLECTOR
Accessory device	M LINK, TRIO, Thermal CAM
Circuit breaker	Susol ACB STU, Metasol ACB STU, Susol Smart MCCB
Measurement device	GIMAC1000, GIMAC-B, E TAG, MMP, DMPi, Energy Meter

### Screen description



#### Quick View, View All

Display form	Description
ACB STU	Displays device communication status, device name, and device status
TRIO	Displays device communication status, device name, and analog input point (AI #1) value
MCCB	Displays device communication status, device name, and device status
M Link	Displays device communication status, device name, DI/DO status
SEMPR	Displays device communication status, device name, and device status
DMPi	Displays device communication status, device name, and measurement value


#### Quick View, View divided

Display form	Description
ACB STU	Displays device communication status, device name, device status, value of Vab, Tot P
TRIO	Displays device communication status, device name, and analog input point (AI #1) value
MCCB	Displays device communication status, device name, device status, and values of Ia, Ib, and Ic
M Link	Displays device communication status, device name, DI, DO, Mode status, control mode value
SEMPR	Displays device communication status, device name, device status, and values of Ia, Ib, and Ic
DMPi	Displays device communication status, device name, and values of Ia, Ib, and Ic

#### Detailed screen of device

Display form	Description
Monitoring	Displays selected device monitoring data (Device status, communication status, measurement data, operation time, DI/DO status)
Control	Control command (device On/Off)
Management	Display and reset history and count data
Event	Event and alarm list display
Settings	Displays set value information, relay element set value
Device information	Displays device-specific information such as device ID and device name
Group	The category name of the individual information item
Label	Name of individual information item

### Exterior description

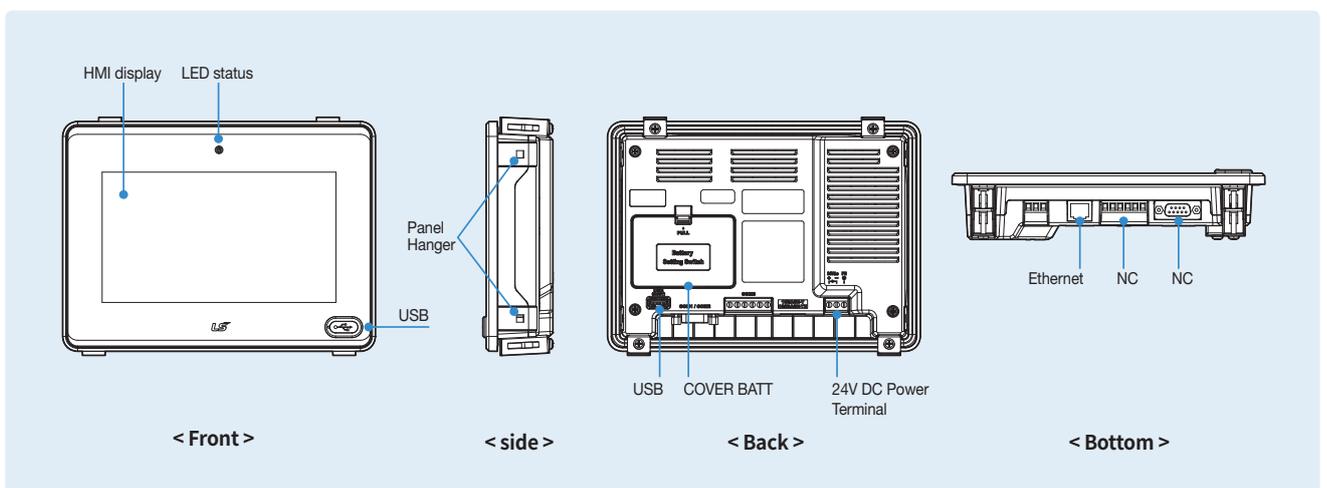

# External accessory

## T Connection Module

### Specification




T Connection Module is a branch module that can provide convenience when connecting multiple RS485 communication devices through multi-drop communication. It also provides termination processing when the device is located at the end.

Type	Details
Model name	ITCM
Rated voltage	DC24V(±10%)
Basic function	Multi-drop connection
	Termination Selection
Mounting method	DIN-Rail, Screw (Screw not supplied)
Size	17.8(W) × 81(H) × 65.6(D), unit : mm

### Applicable breaker


- Susol Smart MCCB
- ACB STU
- MCB connected by M-link

### Exterior description

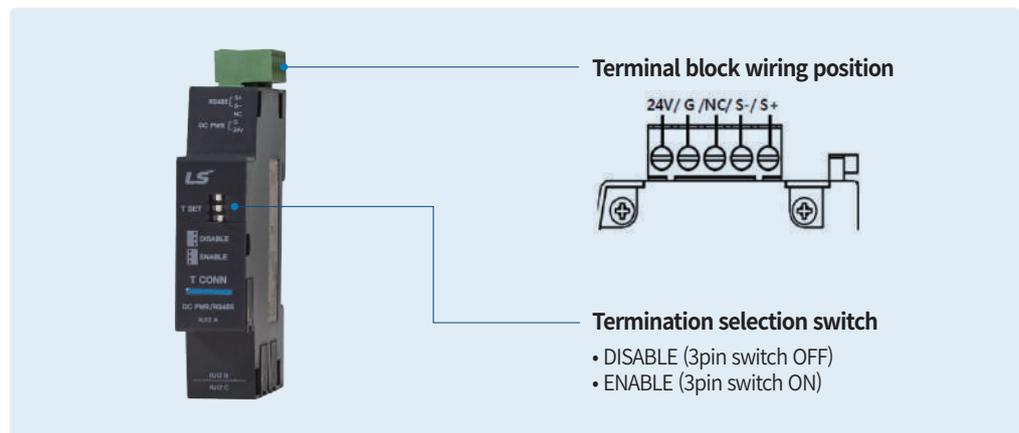

### Device usage example

When you wish to connect n number of devices excluding the upper system, you can conveniently configure them using n number of ITCM. Stable RS485 multi-drop is possible by deadening.

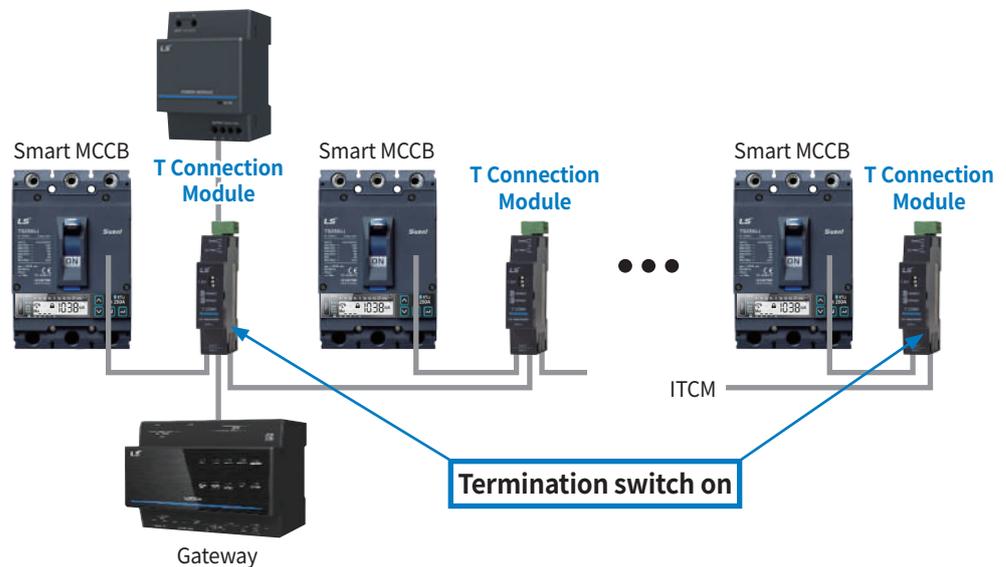


## Communication/power connection cable

### Specification

This is a communication/power connection cable used to connect Smart MCCB, T connection module and panel display (3.5 inch), etc.

There are three types: 0.35m, 1.3m, and 3m in length.

Type	0.35m	1.3m	5m
Model name	EXIO L350	EXIO L1300	EXIO L3000
Basic function	Communication / power connection		

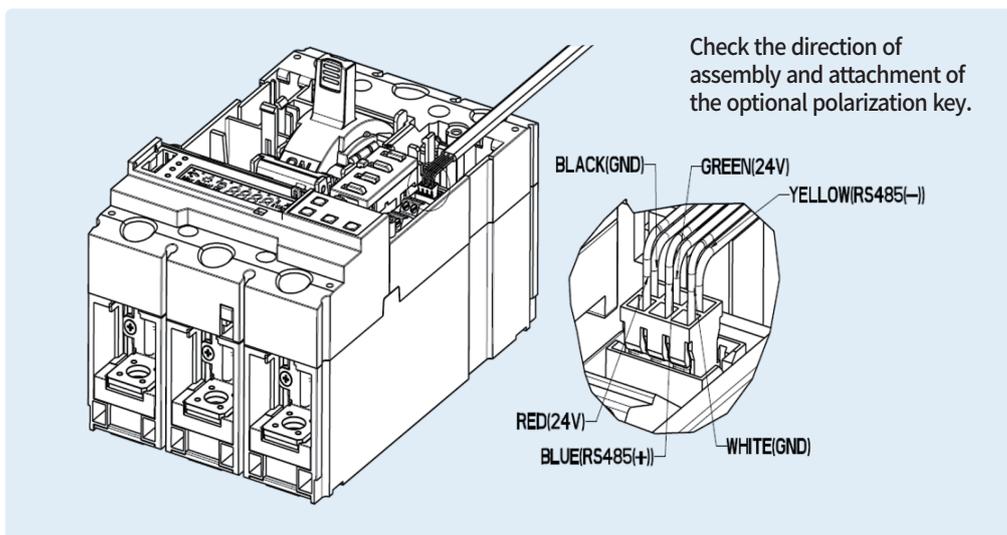

### Exterior description



# External accessory

## M LINK


It is a digital input/output and communication module for monitoring the status of on-site contacts, remote control of on-site contacts, and measuring on-site analog values on the low-voltage panel monitoring and control system.

### Features



Type		Details	
Model name		INM-DC24V-DI6/DO4	
Rated voltage		DC24V	
Power consumption		1.3W or less	
Function		Monitoring function: DI contact monitoring Control function: DO contact control Analog input value measurement: AI contact input value measurement Communication function: RS485 (Modbus)	
Input/output contacts	DI	Number of contacts	6 (6 DI, COM.4) Note] COM contacts are the same in electrical circuit
		Connection method	Hardwired, pluggable
		Contact method	Dry contact
	DO	Number of contacts	4 (4 DO, 2 Com.)
		Connection method	Hardwired, pluggable
		Rated voltage/current	250Vac/3A, 30Vdc/3A
		Contact method	Non-Latch, A contact (Normal Open)
	AI	Number of contacts	1개 (AI+, AI-)
		Connection method	Hardwired, pluggable
Input range		DC 4-20mA	
Protocol		Modbus RTU	
Communication method		RS485	
Size		4(W)×81(H)×65(D), unit: mm	
Use temperature		-25 ~ +60 °C	
Storage temperature		-40 ~ +80 °C	
Ambient humidity		Within 85% RH, no condensation	


Exterior description

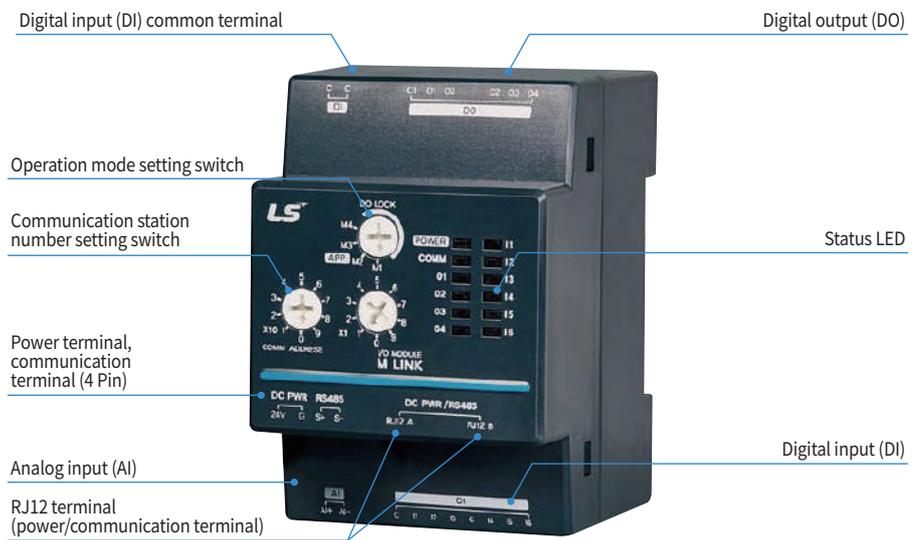

Device usage example

It can be used a digital input/output (DI/DO) communication module for on/off/trip status monitoring and on/off control of the Circuit breaker (MCB/MCCB). It also provides DI/DO operation function according to the operation mode (M1~M4, DO LOCK) for user convenience.

Operation mode	Function and usage
M1	General DI/DO operation
M2	Remote circuit breaker control
M3	Remote/on-site circuit breaker control
M4	On-site load control (DI/DO linkage control)
DO Lock	General DI operation (DO cannot be controlled)

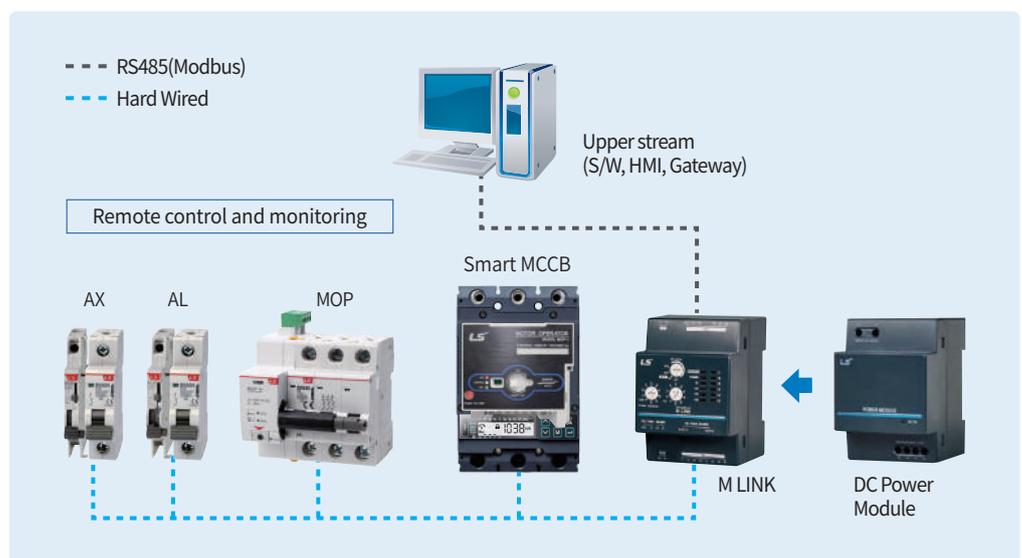

# External accessory

## DC Power Module


The DC Power Module is a power supply device that supplies DC24V. It is composed of 4 types according to the rated voltage of the input.

### Specification



Type	Specification			
Model name	IPM6P-DC30V /DC24V24W	IPM6P-DC125V /DC24V24W	IPM6P-AC415V /DC24V24W	IPM6P-AC240V /DC24V60W
Rated voltage	24-30VDC	48-125VDC	380-415VAC	100-240VAC
Input range	20-33VDC	40-138VDC	323-457VAC	85-264VAC
Frequency	-		50/60Hz(45-65Hz)	
Output voltage	24VDC(±5%)			
Output current	1A		2.5A	
Use temperature	-25~+60°C			
Storage temperature	-40~+85°C			
Mounting method	Din-rail, Screw(Screw not supplied)			

### Exterior description

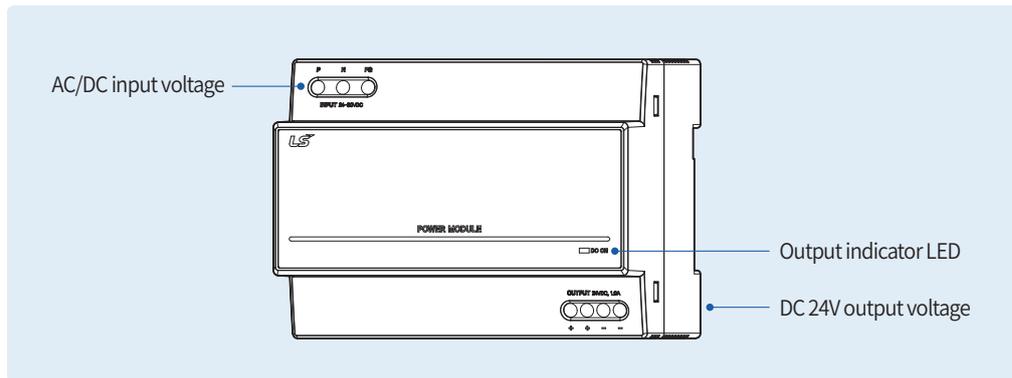

### Device combination

It can be used for the device that uses DC 24V as an input power supply and can be combined with Smart LV panel components. It can be combined with 24 ~ 60W DC power module.

ACB STU Atype - 3W, P/Stype - 5W	Smart MCCB - 1W	M-Link - 1.3W	Panel HMI(3.5 inch) - 3W
TRIO - 5W	Ethernet / Converter - 1W	Gateway - 11W	E-Collector - 5W
Panel HMI(7.0 inch) - 23W	Thermal imaging camera- 2W		

**Device usage example**


**1) Composition of Smart MCCB + M LINK panel**

- If Smart MCCB 6EA, M LINK 8EA and panel HMI (3.5 inch) 2EA are connected to 24W DC power module ((6 × 1W) + (8 × 1.3W) + (2 × 3W)), it can be used stably.
- The T connection module is a necessity for device branching. The power consumption is close to zero.



**2) Composition of ACB+Smart MCCB+M LINK panel**

- If ACB 1EA, Smart MCCB 3EA, M LINK 4EA and Panel HMI (3.5 inch) 1EA are connected to 24W DC power module (5W + (3 × 1W) + (4 × 1.3W) + 3W), it can be used stably.
- The T connection module is a necessity for device branching. Power consumption is close to zero.

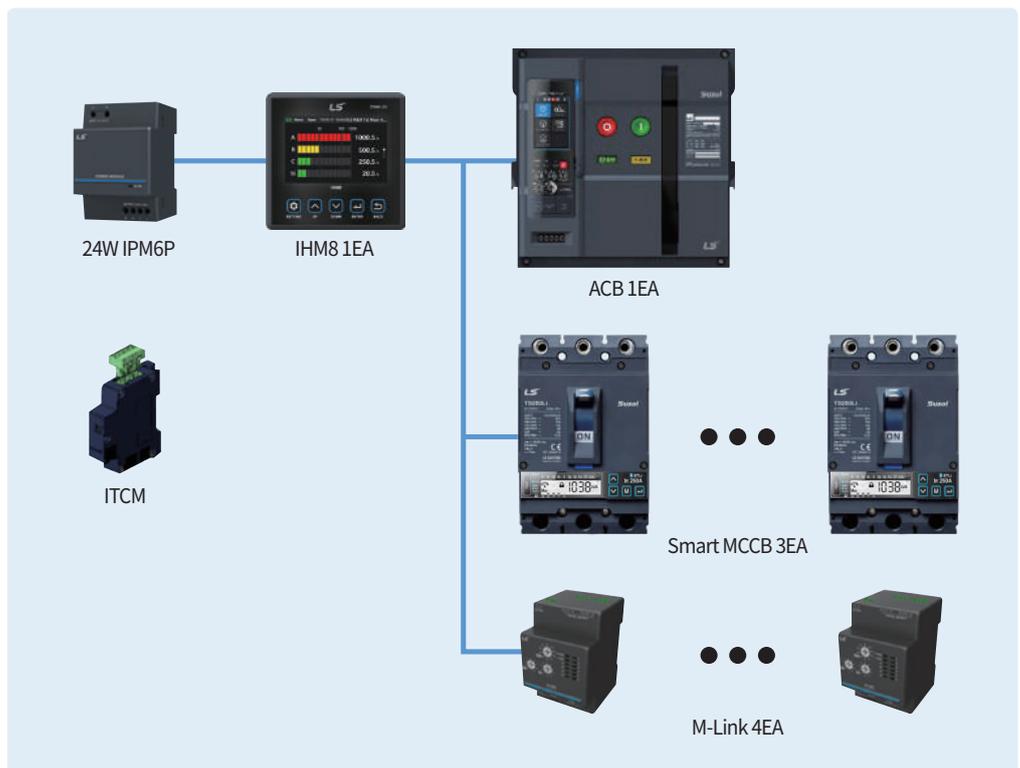


# External accessory

## DC Power Module

### Product combination (example)

#### 3) Smart LV Feeder panel composition

- Use 60W IPM6P to compose a Smart LV feeder panel. The sum of the power consumption of M-Link and gateway, IHM32, E-collector, IHM8, and Smart MCCB 2EA is  $(1.3W + 11W + 23W + 5W + 3W + 1 \times 2W)$  45.3W, which will enable using the system in a stabilized manner.
- ITCM is a required item for branching the product, and the power consumption is almost 0.

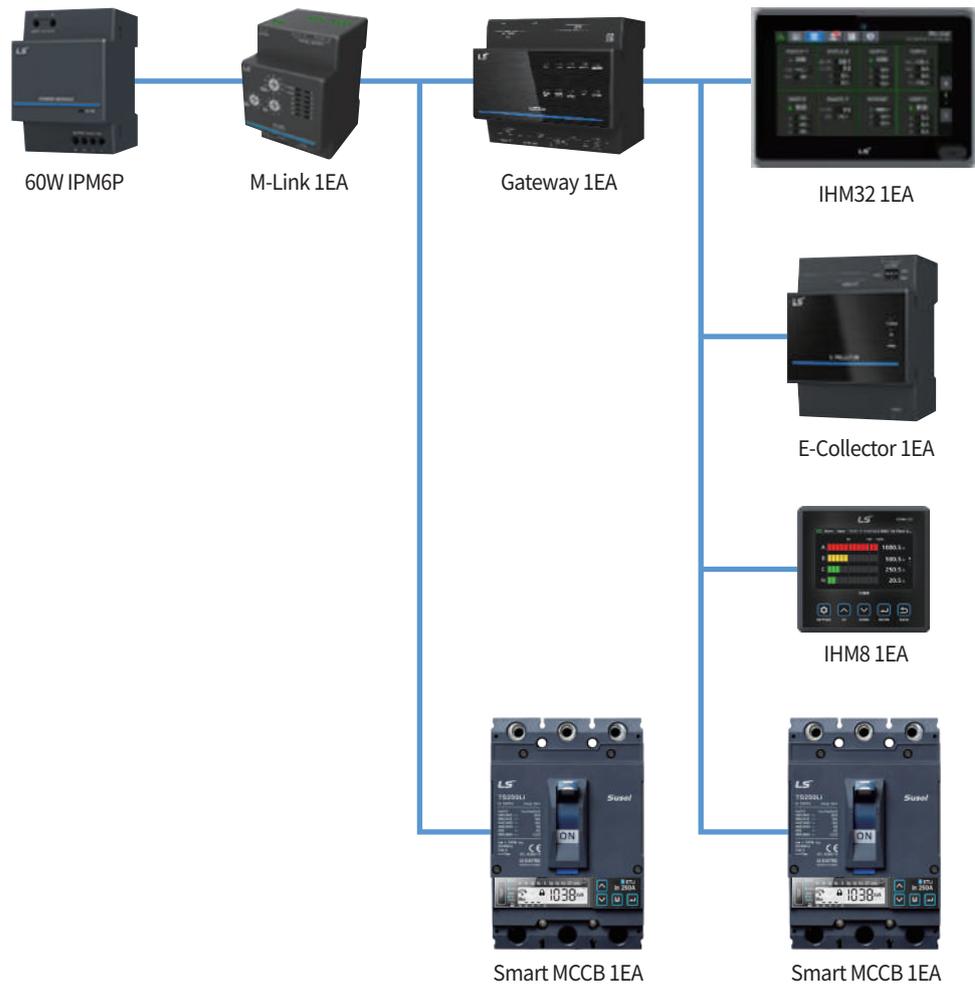

4) You can make different combinations of LV panels to fit your purpose.

**User Precautions (Danger)**

- ※ Make sure that the upper-level breaker is OFF when installing or maintaining the product.
  - There is a risk of serious injuries or even death due to electrocution.
- ※ Do not contact the exposed part of the terminals while the system is energized.
  - There is a risk of serious injuries or even death due to electrocution.

**Check before use**

- ※ Make sure the specification of the product matches the specification of your order.
  - If the ratings of the product are different, it may result in burn damage of the product or a fire.
- ※ Check for loose/dislocated items or damages during transportation.
  - Product damages may lead to a failure or a malfunction.
- ※ To install or maintain the product, make sure the job is performed by a qualified technician.
  - Erroneous installation or maintenance work may result in a malfunction or an accident.

**User Precautions (Caution)**

- ※ Make sure that the power cable is connected to the INPUT.
  - An erroneous wiring can result in damage to the product.
- ※ Make sure to use the rated input voltage indicated on the product.
  - An incorrect input voltage may damage the product.
- ※ The input/output lines must be separated from a high-voltage cable or a power cable by at least 10cm so that the equipment is not affected by noises or fluctuations of magnetic fields.
  - Erroneous installation or maintenance work may result in a malfunction or an accident.
- ※ Do not disassemble or modify the product unless you are authorized to do so.
  - This may result in a failure or a malfunction, even injuries or a fire.
- ※ Operate the product within its operating temperature range.
  - Otherwise, the product may be damaged, or the performance may be affected negatively.

# External accessory

## i-Tester

The i-Tester (Intelligent Tester) is an accessory to test-drive ACB/MCCB. As a stand-alone type, it not only performs various relay tests such as manual/auto/user tests, but also has various functions such as self-calibration function, device information setting, relay setting, and device status checking. In addition, it supports 256×128 graphic LCD and supports not only English but also Chinese and Russian languages. It has the function to output the test and test results in the same way using the upper Manager S/W.

### Features



- **Calibration function**
  - The calibration function of i-Tester is used to calibrates the error using the output value set in i-Tester and the measurement current data.
- **Device H/W setting function**
  - It consists of the part to set the system configuration and time of the device and the part to set the language and time of the i-Tester itself.
- **Relay setting function**
  - It consists of the part to check the current relay element of the device and the part to set the relay.
- **Relay test**
  - As a part for testing the relay, it is composed of manual/automatic/user tests so that various relay tests can be conducted.
- **Control function**
  - It provides a function to clear or reset the device data and to control DO and CB.
- **System information**
  - It consists of the device information, relay status, and tester system information.
- **Test history**
  - It consists of a part to check the test history stored in i-Tester and a part to delete the saved history information.


### Specification

Type	Details
Model name	IPOT
Rated voltage	DC24V adapter, 9V alkaline battery 3EA, USB or rechargeable battery (10000mAH or more)
HMI	Graphic LCD module( 256×128 Graphic LCD)
Supported language	English, Chinese, Russian
Key functions	<ul style="list-style-type: none"> <li>· Device information checking function (information, DI, DO, self-diagnosis)</li> <li>· Relay and H/W information setting function</li> <li>· Device control and reset function</li> <li>· Relay test function                             <ul style="list-style-type: none"> <li>- Manual/auto/user test function</li> </ul> </li> <li>· Test history storage (up to 255) and output (PDF) function</li> </ul>
LCD composition	Navigation TREE configuration for all
Size	98(W)×210.5(H)×43.5(D), unit : mm

Exterior description

Type	Details
① Power switch	Power On/Off function
② LCD	256×128 graphic LCD
③ KEY PAD	Menu navigation, setting and operation buttons
④ Adapter terminal	DC24V power input terminal
⑤ USB terminal	USB communication connection terminal (USB2.0)
⑥ Signal port	Signal terminals for device testing
⑦ Battery	Equipped with 9V alkaline batteries (×3ea)

Device usage example

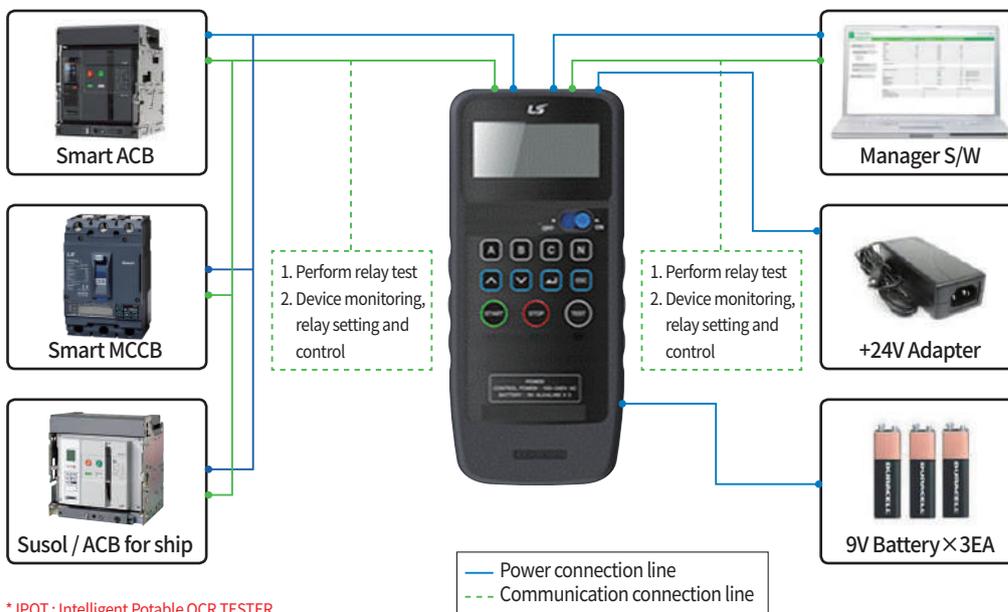

Target device

Circuit breaker	Smart ACB(STU), Susol/Metasol ACB(OCR), Smart MCCB, TS1600
-----------------	--

# External accessory

## Portable Battery & Trip Module


It is a portable battery module that can power the Smart MCCB and test the trip function. The user can change and check the settings by applying power to the Smart MCCB while carrying this device, and easily check the trip function, which is the most important function.

### Specification




Type		Details
Target device		Smart MCCB
Input power		AA size serial battery 2EA (battery specification : DC1.5V)
Output	Power supply	DC 12V(±5%)
	Trip signal	AC 0.9V, 60Hz(±15%)
Device operating time (battery replacement time)		More than 8 hours of continuous use ※The usage time can be changed depending on the battery capacity
Switch	Power supply	Slide switch, power supply On/Off
	Trip signal	Tact switch, Trip signal On/Off
LED	Power supply	Orange, DC 12V output status display
	Trip signal	Green, AC 0.9V Trip signal output status display
Size		72(W) × 135(H) × 34.5(D)

### Exterior description

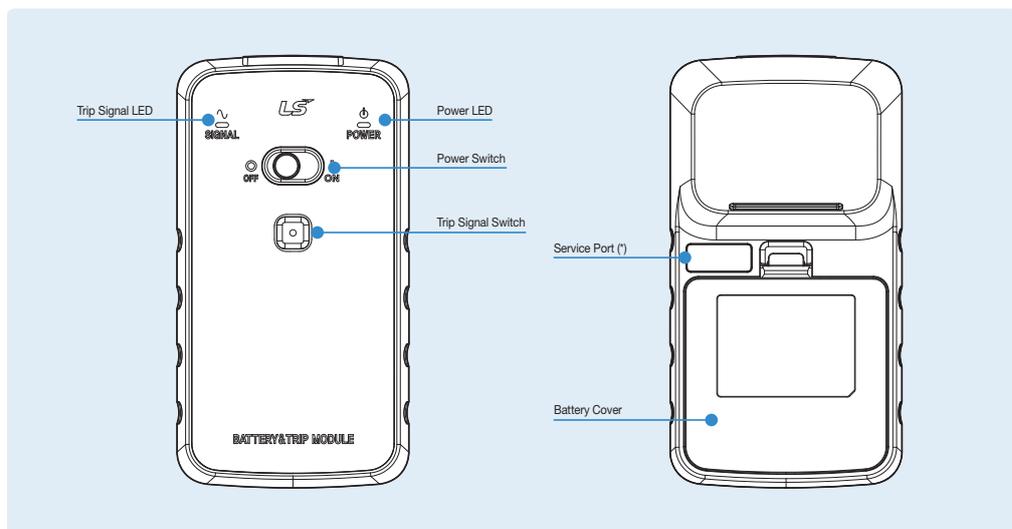

### Operation method


- ❶ Check the power switch off status of the portable battery module.  
※ If the battery is connected while the power switch is on, an error may occur in the device.
- ❷ Open the battery cover on the back and install 2EA of AA size batteries.
- ❸ Close the battery cover and connect the tester cable.
- ❹ Open the glass cover of Smart MCCB and connect the Tester cable to the TEST port.  
※ If the direction of the tester cable does not match, an error may occur in the device.  
※ If the Tester cable is connected while the power switch is on, an error may occur in the device.
- ❺ Operate the power switch of the portable battery module to On.  
- Check that the power is turned on to the Smart MCCB,  
and check and operate the Smart MCCB settings using the Smart MCCB key.  
- The Trip test of Smart MCCB can be performed using the Trip button of the portable battery module.
- ❻ After using the portable battery module, operate the power switch to the Off status.

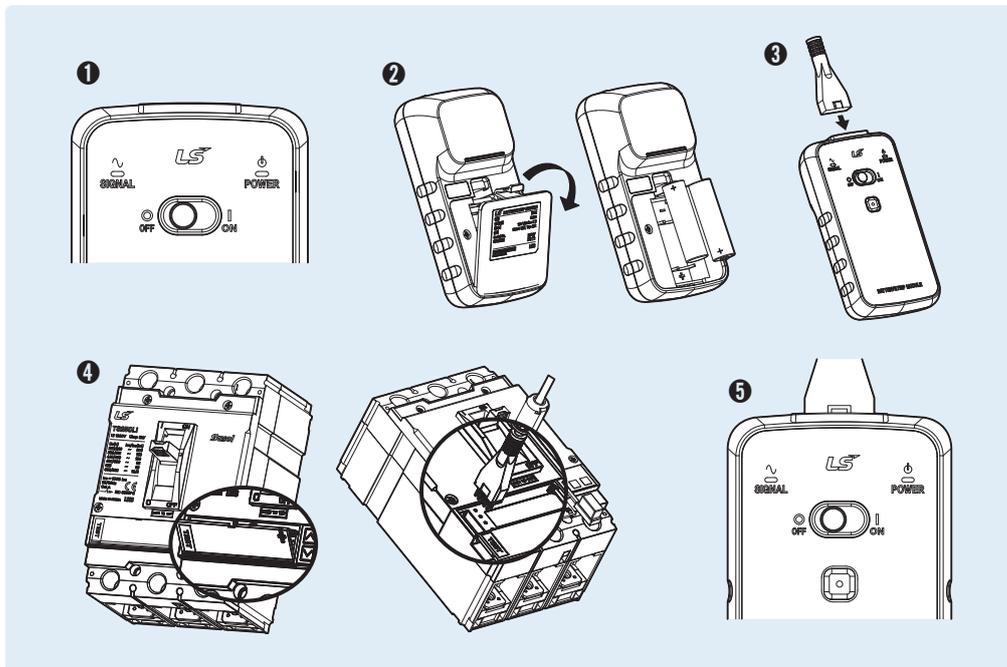

### Tester Cable

The test cable is used to connect a portable battery module and a Smart MCCB.

### Tester Cable Specifications

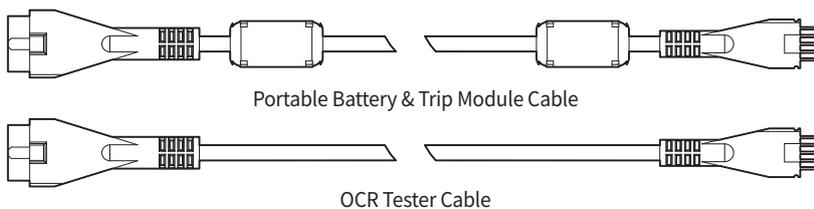

Model name	Items	length
Portable Battery & Trip Module Cable	Apply filter beads	1M
OCR Tester Cable	Exclude filter beads	

### User Precautions (Danger)

- ※ If the power supply LED is not turned on after turning on the power switch, replace the battery.
- ※ Be mindful of the direction of the tester cable when using one.
- ※ Tester cables are sold separately.


# Wiring diagram

## Wiring diagram (State of operation)


ETSi  
ETMi  
ETHi  
ETLi

The diagram is shown in the following conditions:

- Fixed version circuit-breaker (depending on type of circuit-breaker)
- Circuit breakers open.
- Releases not tripped


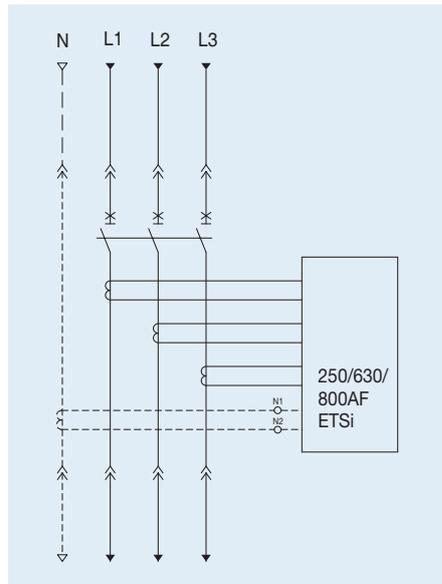


Three-pole circuit-breaker with  
250/630/800AF ETSi electronic release

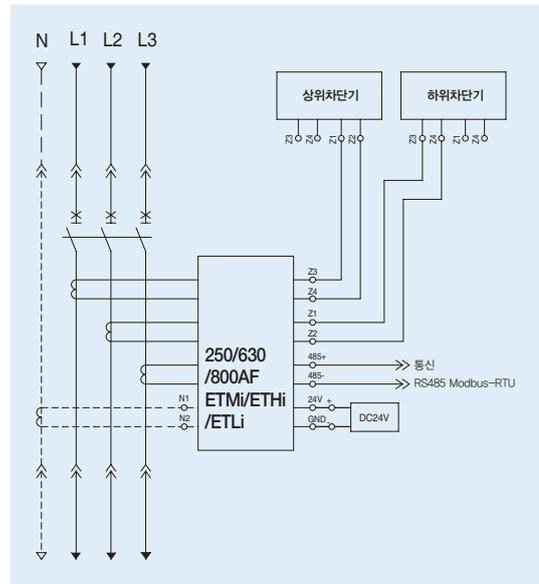

Three-pole circuit-breaker with  
250/630/800AF ETMi/ETHi/ETLi electronic release

The following accessories for mounting, connection, insulation, handle operation are standard items and are packed with Susol TS series circuit breakers.

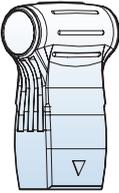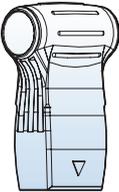	Screw for connection of terminals, Spreader	Screw for mounting	Nut for mounting	Insulation barrier	Auxiliary handle
TS100 TS160 TS250	 M8×20 3P: 6pcs 4P: 8pcs	 M4×75 3P: 2pcs 4P: 4pcs		 B-23C 3P: 4pcs 4P: 6pcs	
TS400 TS630	 M10×30 3P: 6pcs 4P: 8pcs	 M5×85 3P: 4pcs 4P: 4pcs	 M5 3P: 4pcs 4P: 4pcs	 B-23C 3P: 4pcs 4P: 6pcs	 1pc
TS800	 M12×35 3P: 6pcs 4P: 8pcs	 M6×100 3P: 4pcs 4P: 4pcs	 M6 3P: 4pcs 4P: 4pcs	 B-23C 3P: 4pcs 4P: 6pcs	 1pc





## Characteristics curves, Dimensions and Mounting & Connection

---


▪ Characteristics curves	106
▪ Dimensions	116
▪ Mounting & Connection	123

---

# Characteristics curves

## Electronic trip unit, ETSi, ETMi, ETHi, ETLi


TS100Ni/Hi/Li  
 TS160Ni/Hi/Li  
 TS250Ni/Hi/Li

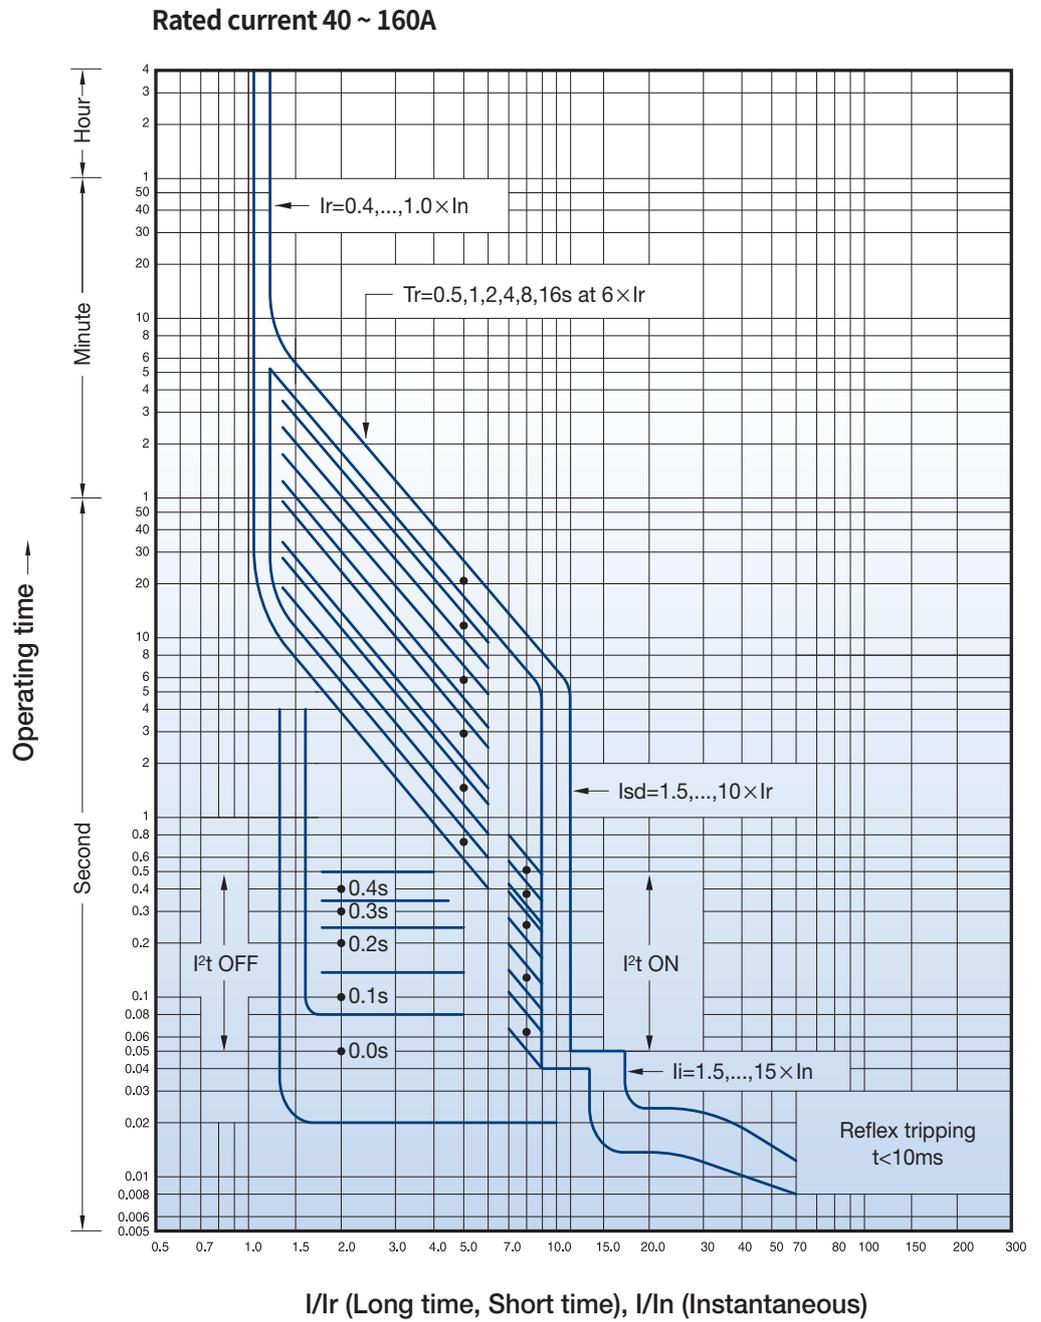

## Electronic trip unit, ETSi, ETMi, ETHi, ETLi

TS250Ni/Hi/Li  
TS400Ni/Hi/Li


Rated current 250 ~ 400A

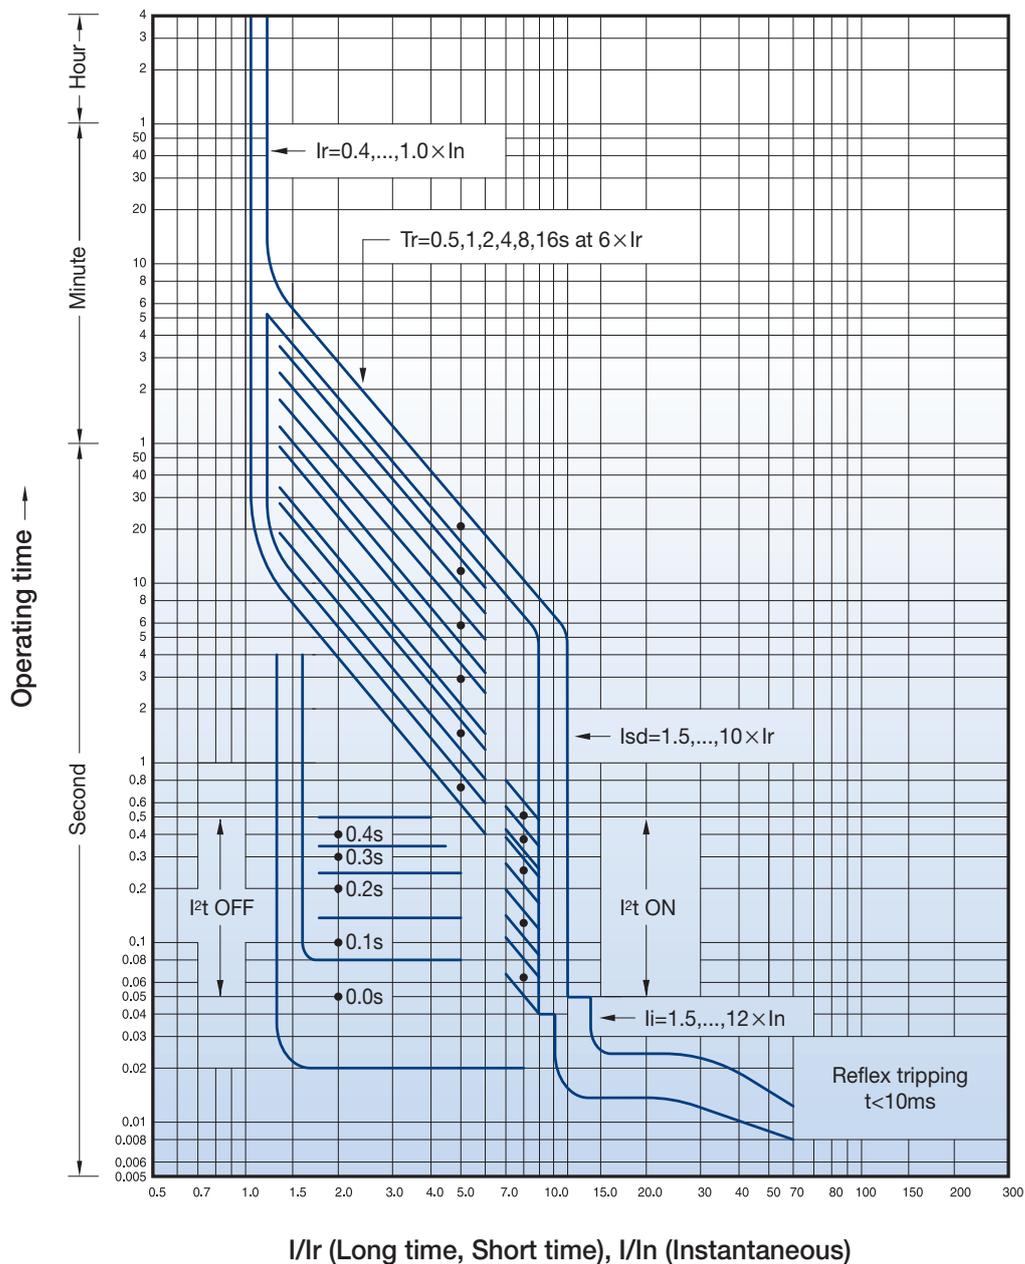

# Characteristics curves


## Electronic trip unit, ETSi, ETMi, ETHi, ETLi

TS630Ni/Hi/Li  
TS800Ni/Hi/Li

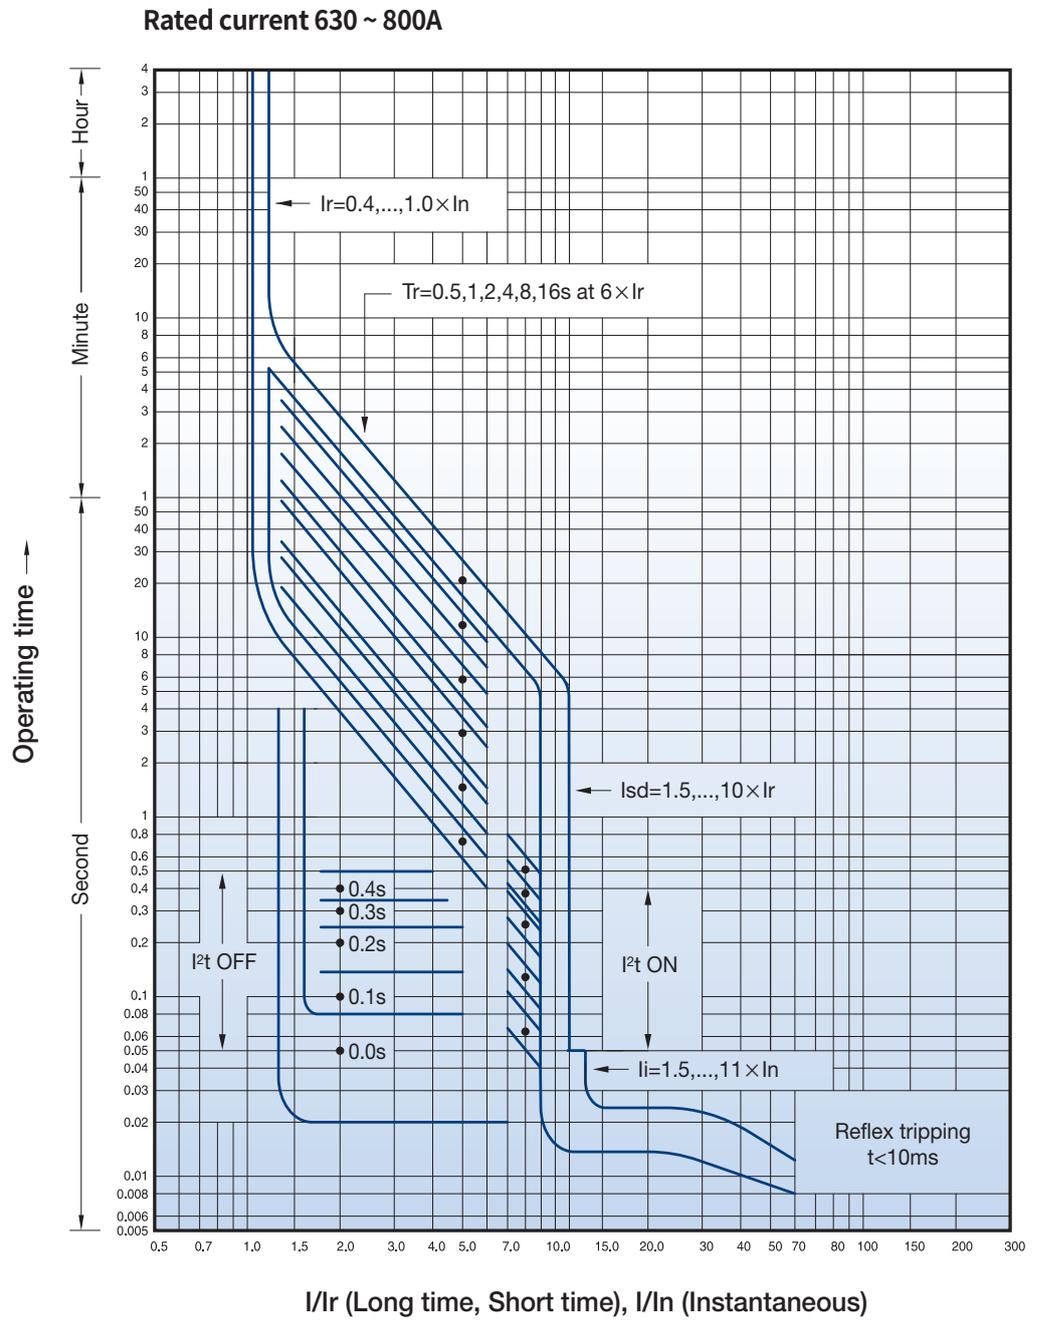

## Ground fault, ETSi, ETMi, ETHi, ETLi

TS100Ni/Hi/Li  
 TS160Ni/Hi/Li  
 TS250Ni/Hi/Li  
 TS630Ni/Hi/Li  
 TS800Ni/Hi/Li

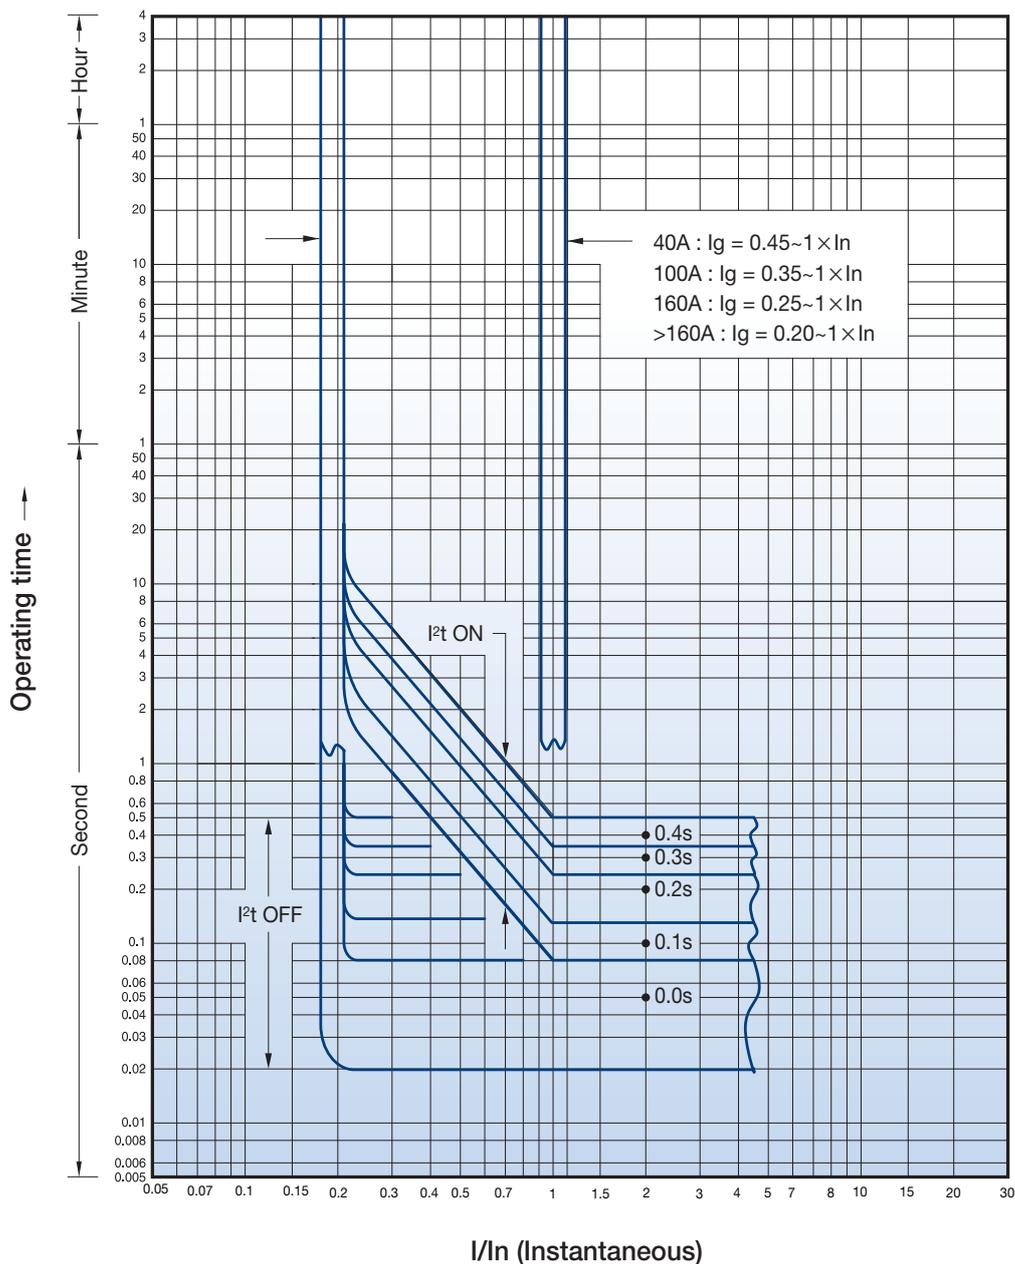


# Characteristics curves

## let-through energy curves

220/240V


Thermal stress

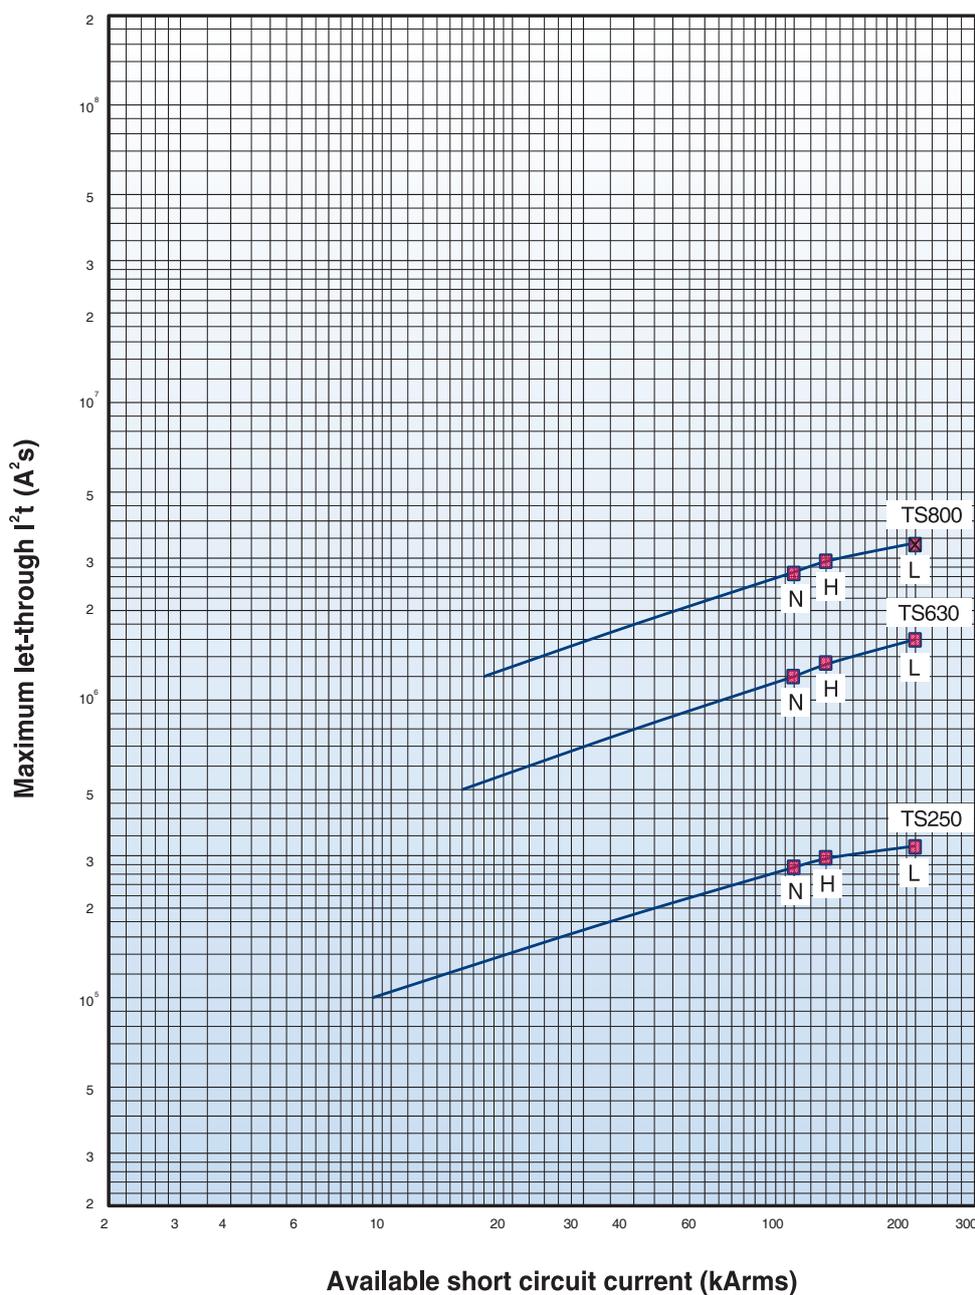

## Specific let-through energy curves

380/415V


Thermal stress

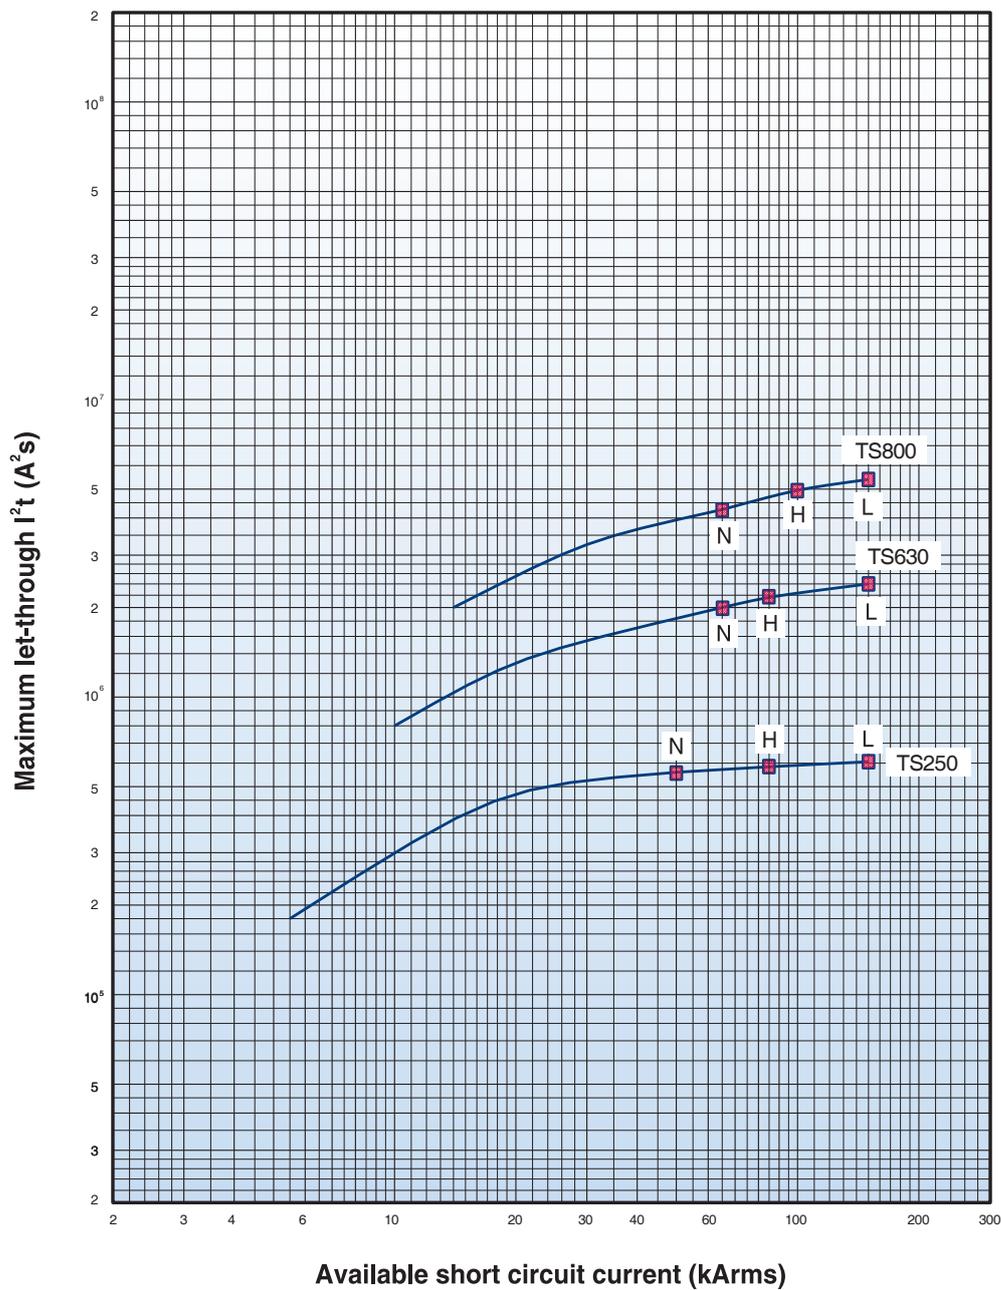

# Characteristics curves


## Specific let-through energy curves

480/500V  
Thermal stress

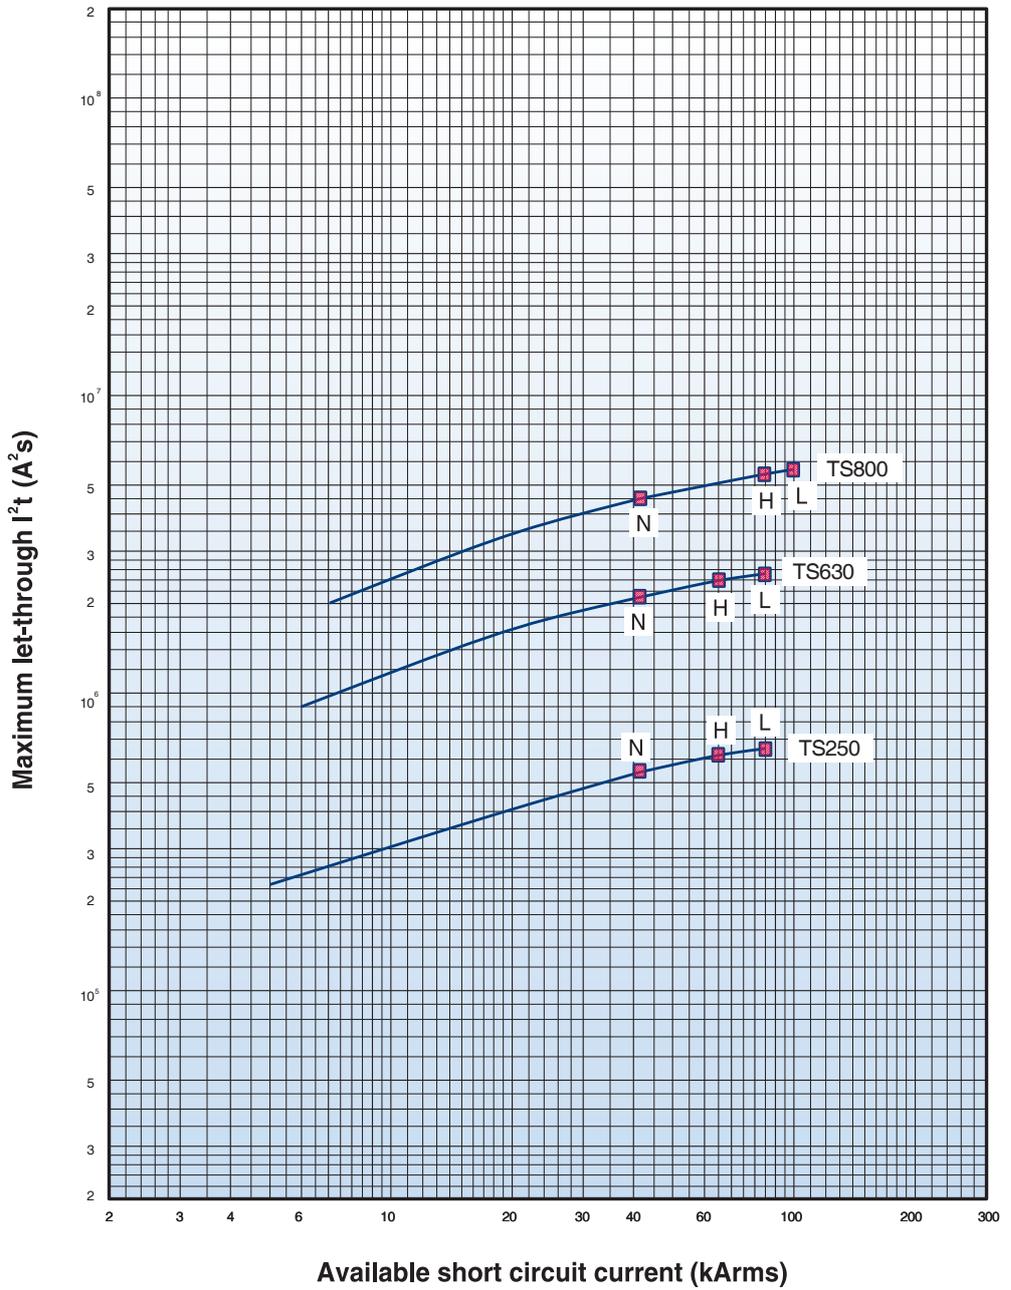

## Current-limiting curves


220/240V  
Peak current

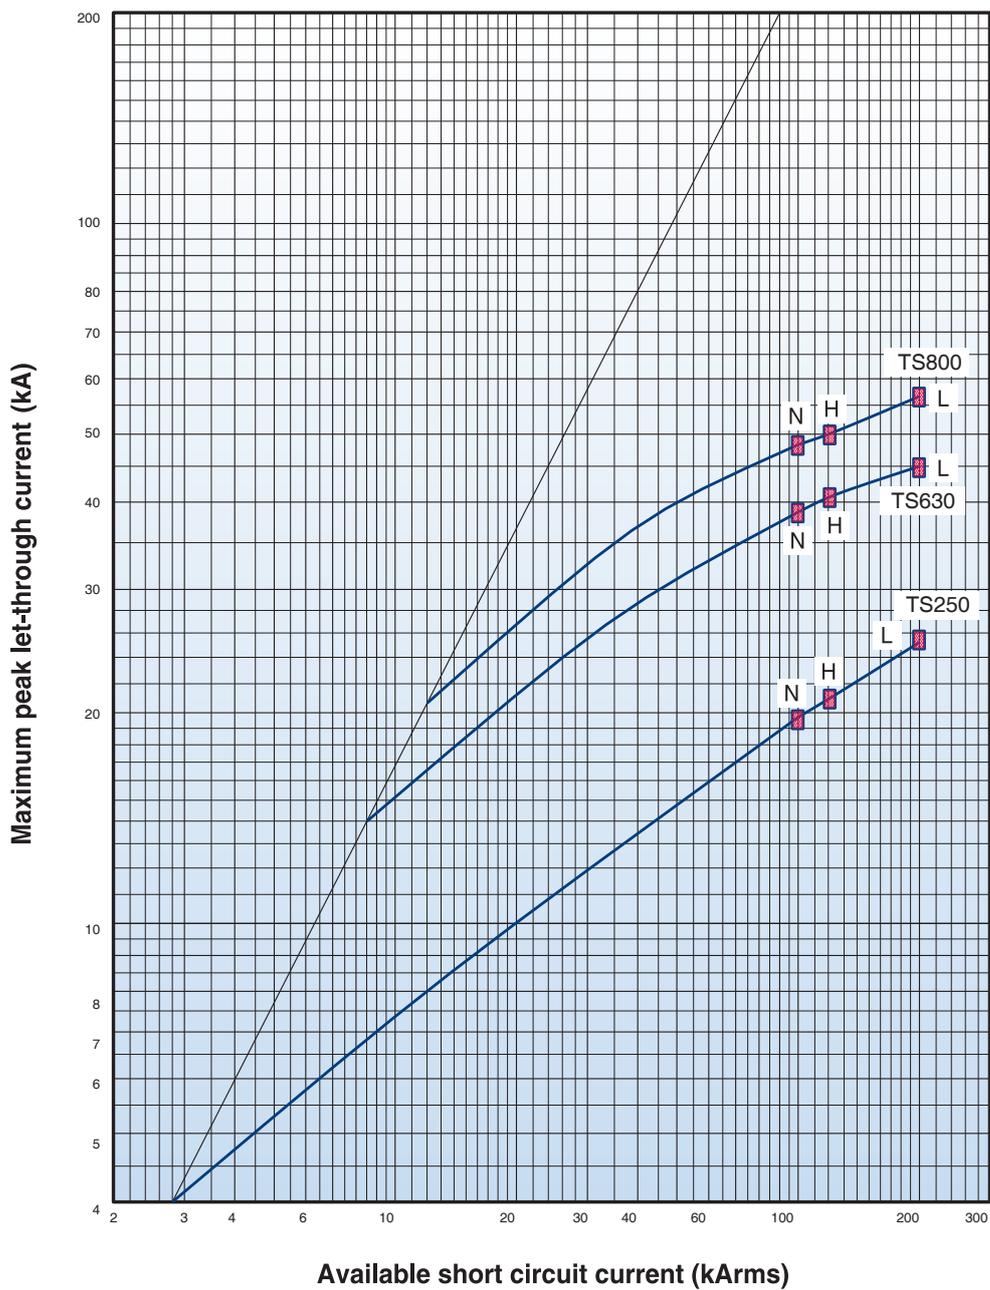

# Characteristics curves


## Current-limiting curves

380/415V  
Peak current

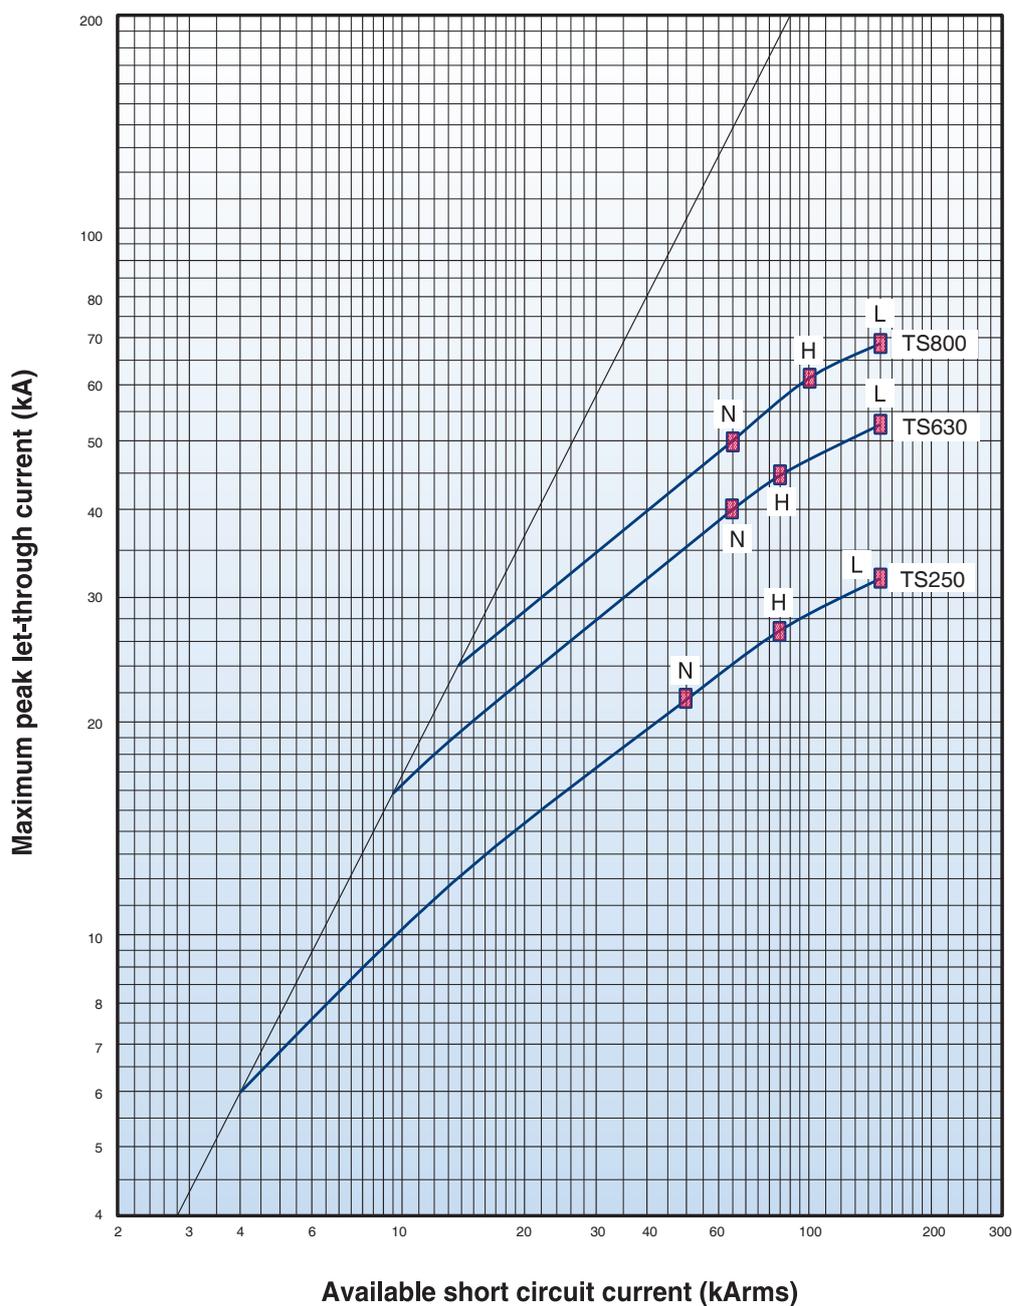

## Current-limiting curves

480/500V  
Peak current

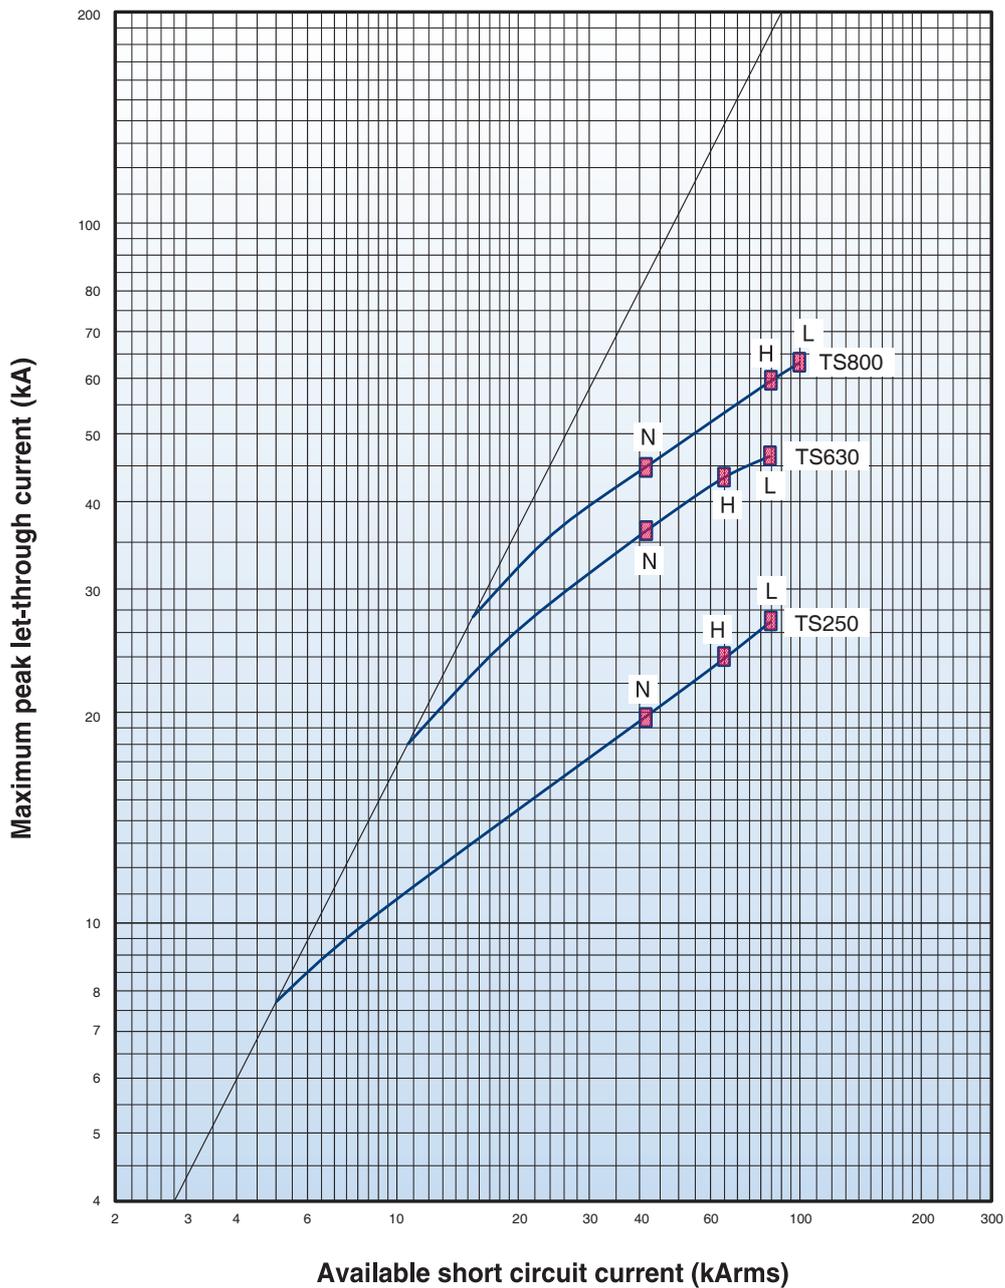


# Dimensions


## Circuit breaker

TS100, 160, 250


[mm]

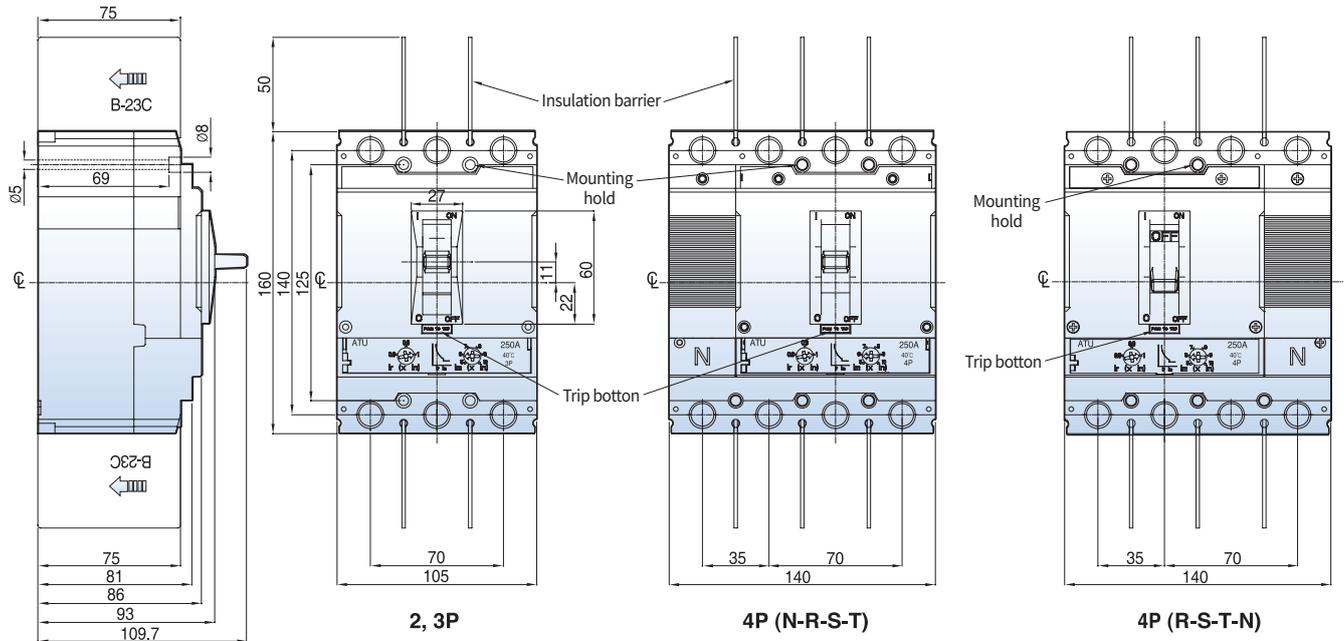


### Terminal section

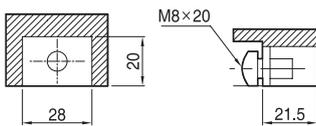


### Conductor

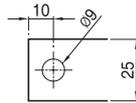

### Panel drilling

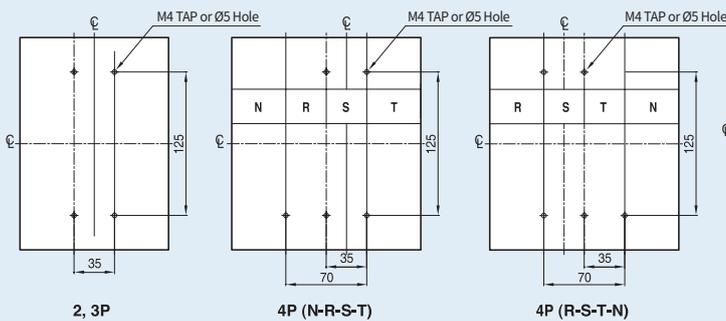


### Front panel cutting

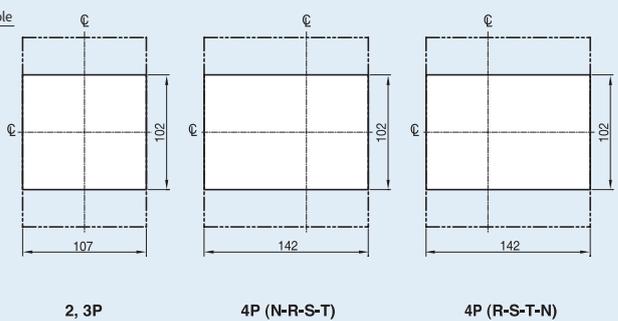


TS400, 630


[mm]

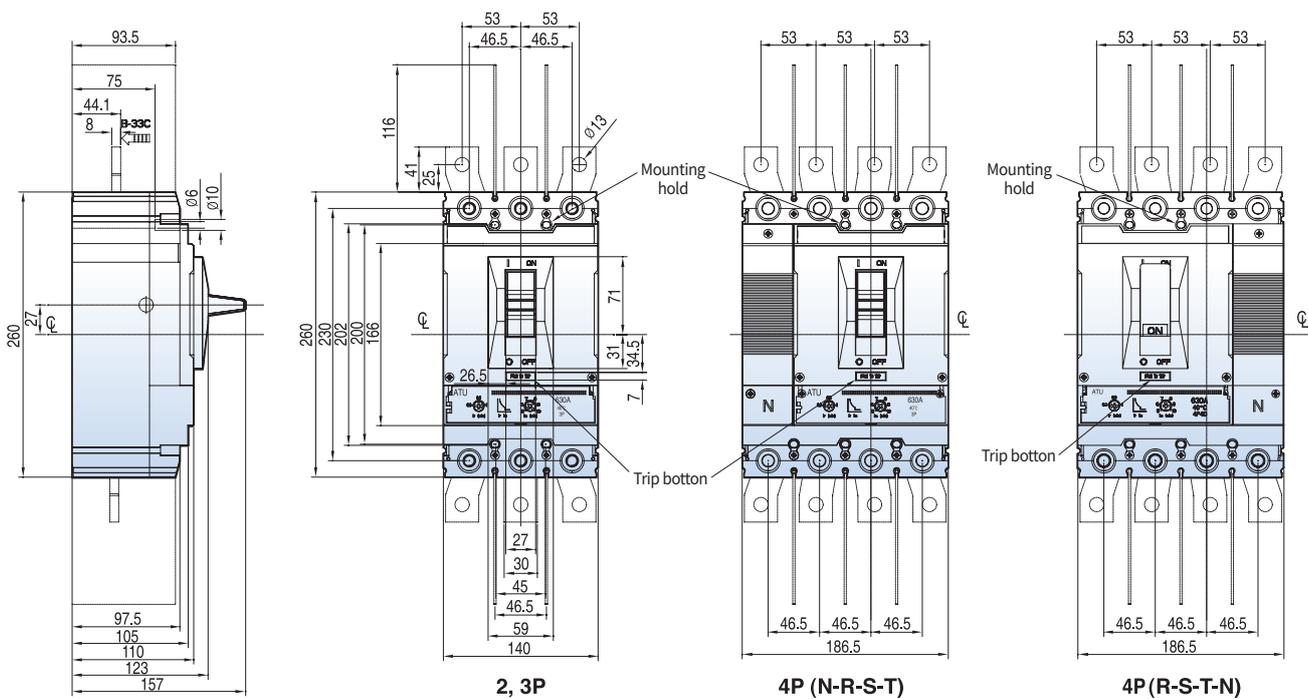


Terminal section

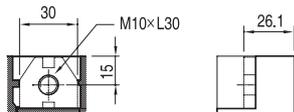


Conductor

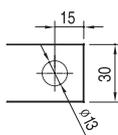

Panel drilling

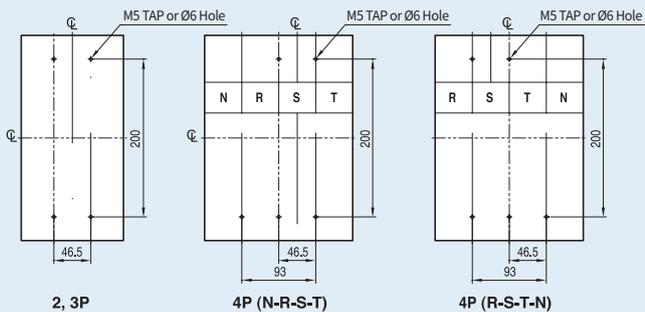

Front panel cutting

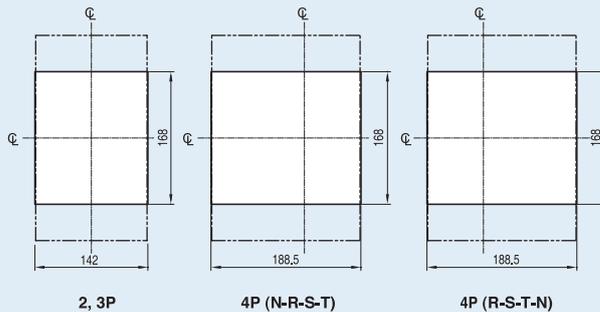


# Dimensions


## Circuit breaker

TS800


[mm]

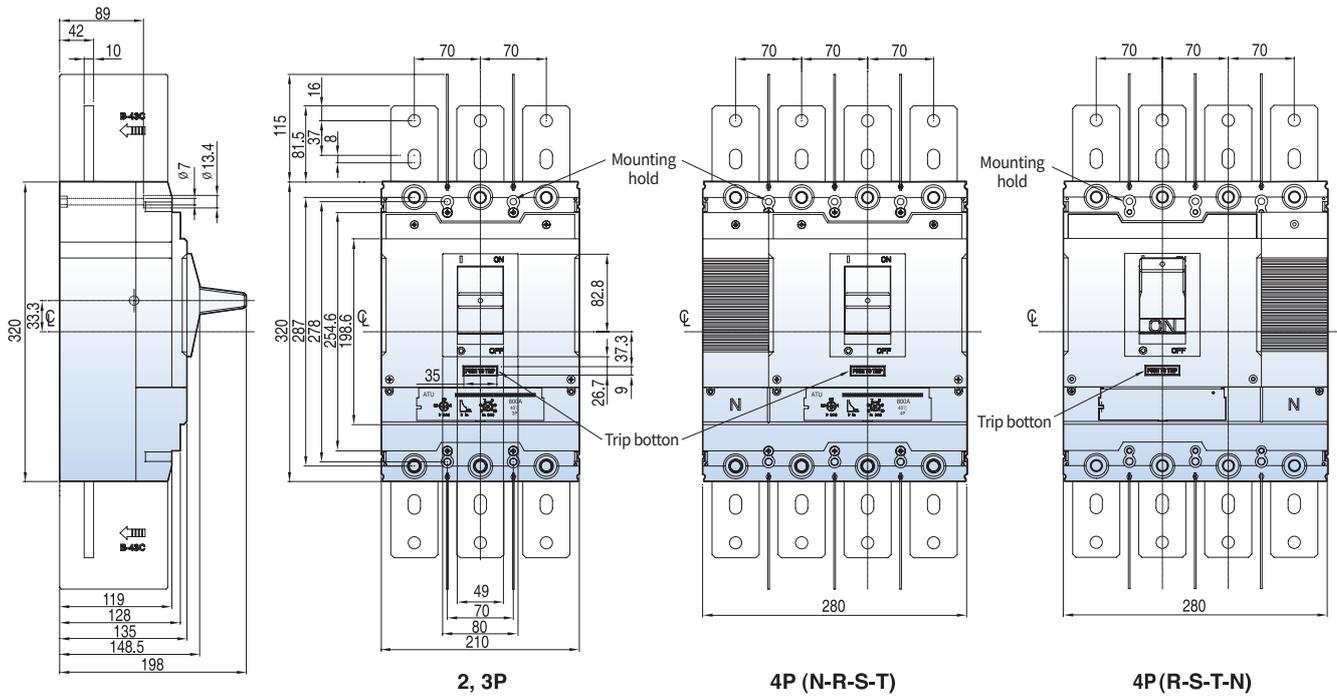


### Terminal section

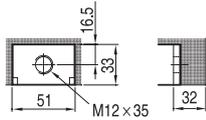


### Conductor

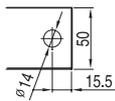

### Panel drilling

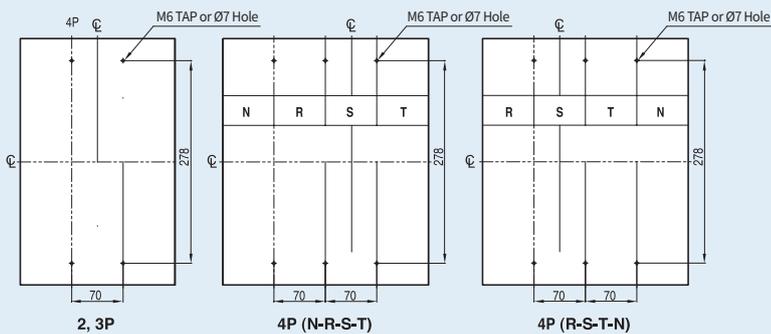


### Front panel cutting

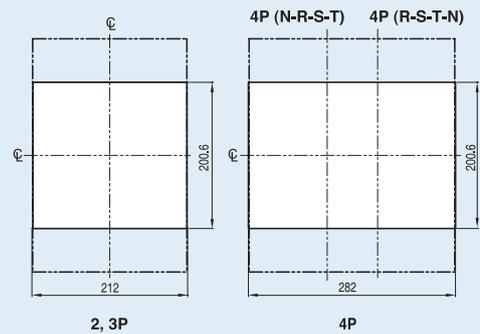


## Panel HMI (3.5inch)

### Dimension

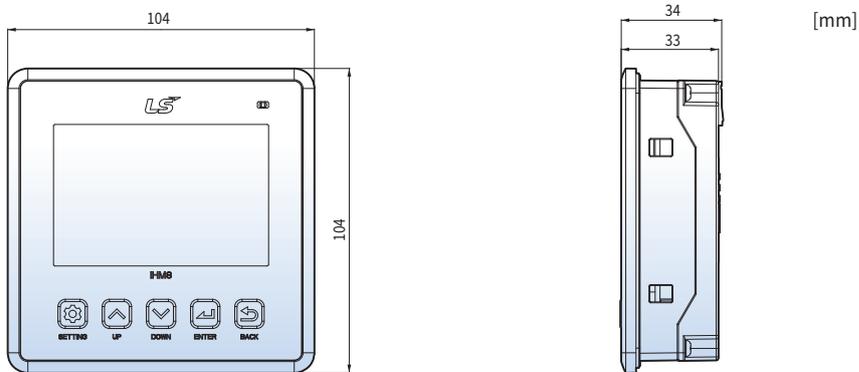

### Mounting method

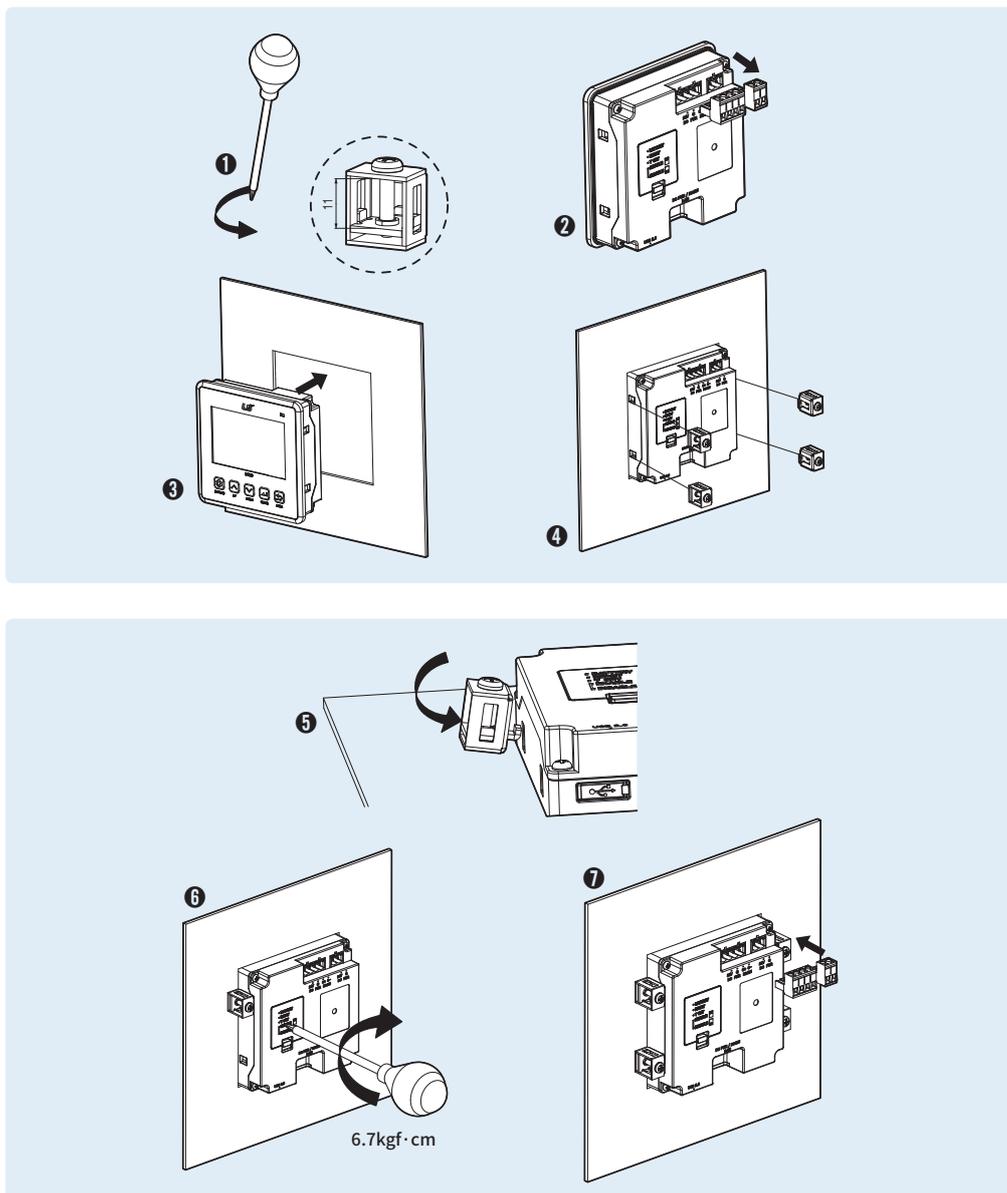


# Dimensions


## Panel HMI (7.0inch)

### Dimension

[mm]

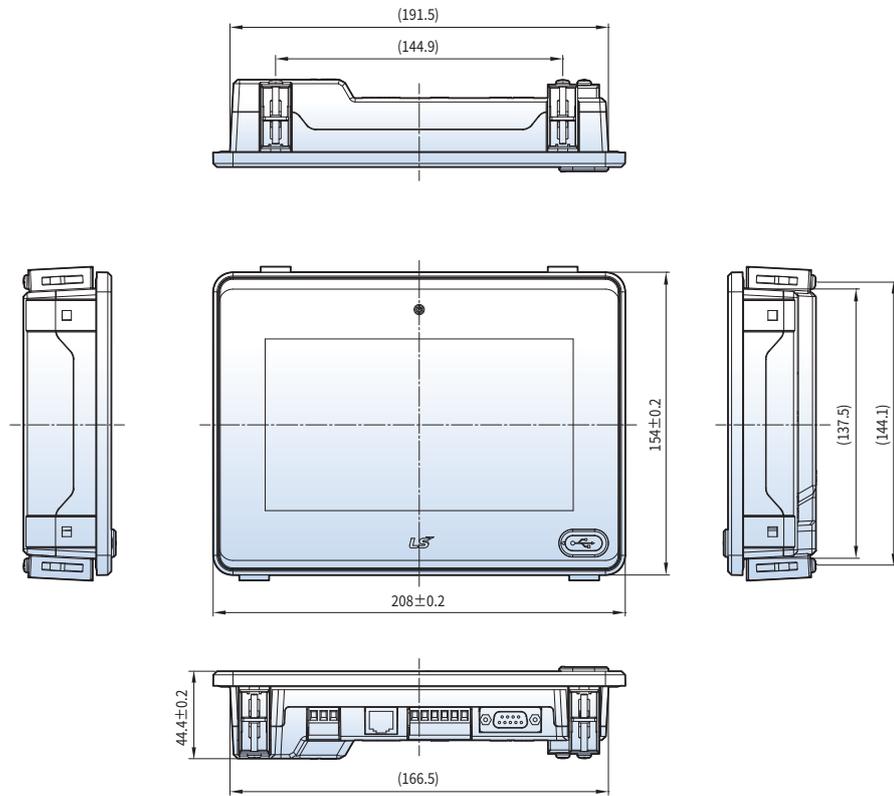


### Mounting method

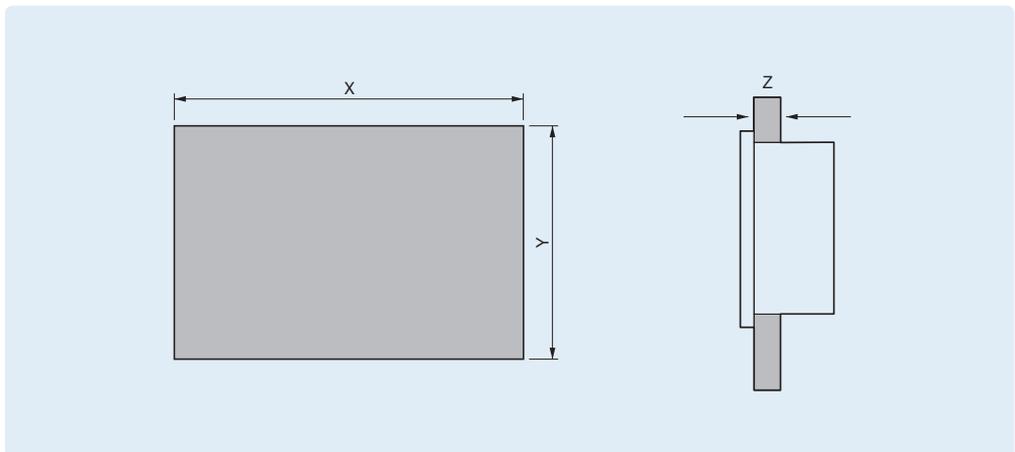

Items	X (width)		Y (height)		Z (depth)
Panel HMI(3.5Inch)	98	+0.3	96.4	+0.3	1.6 ~ 3
		-0		-0	
Panel HMI(7.0Inch)	192	+1	138	+1	1.6 ~ 95
		-0		-0	


# T Connection Module

## Dimension

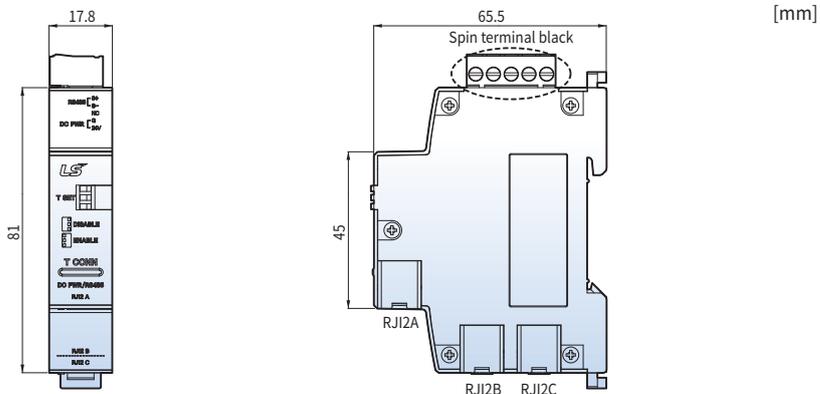


## Mounting method

### DIN-RAIL mounting

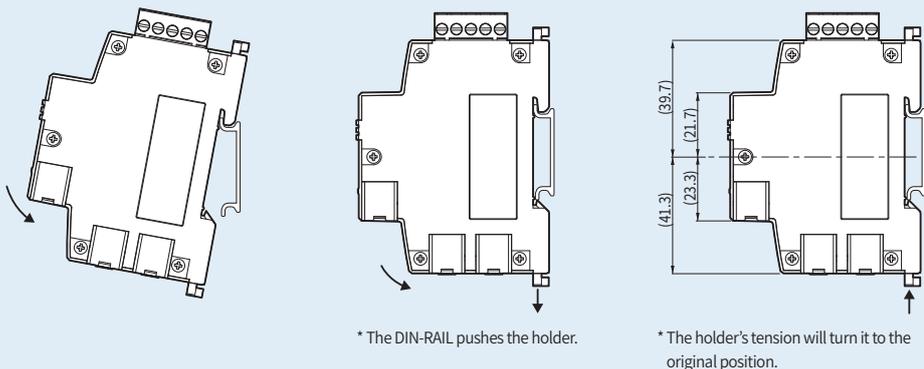

### Screw mounting

\* Disconnect the connector and relocate the holder.

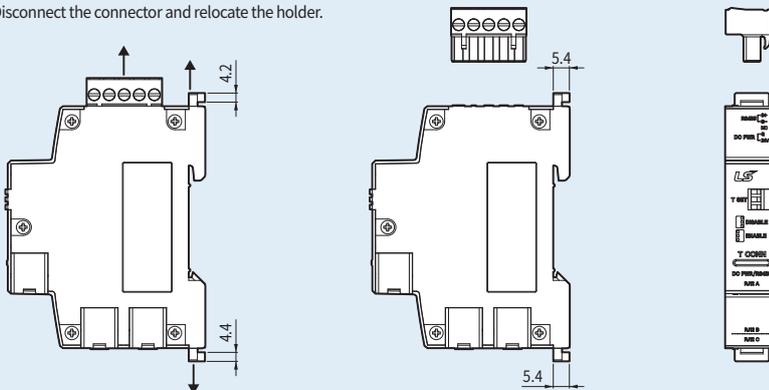


# Dimensions

## DC Power Module


### Dimension

[mm]

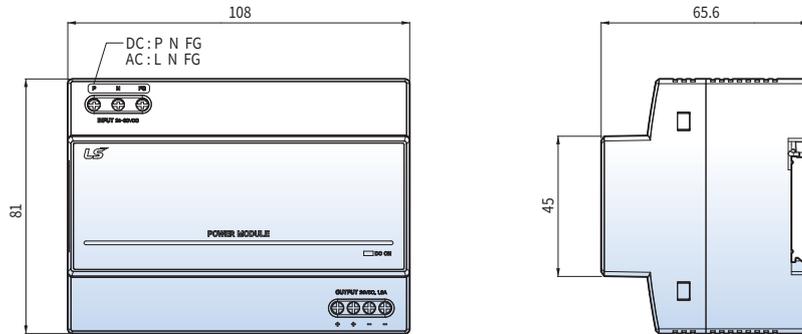


### Mounting method

#### DIN-RAIL mounting

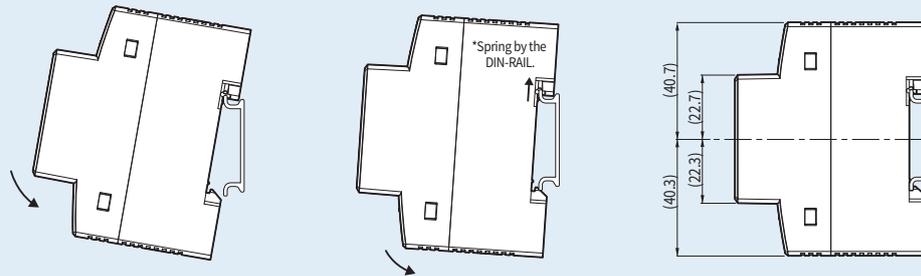


#### Screw mounting

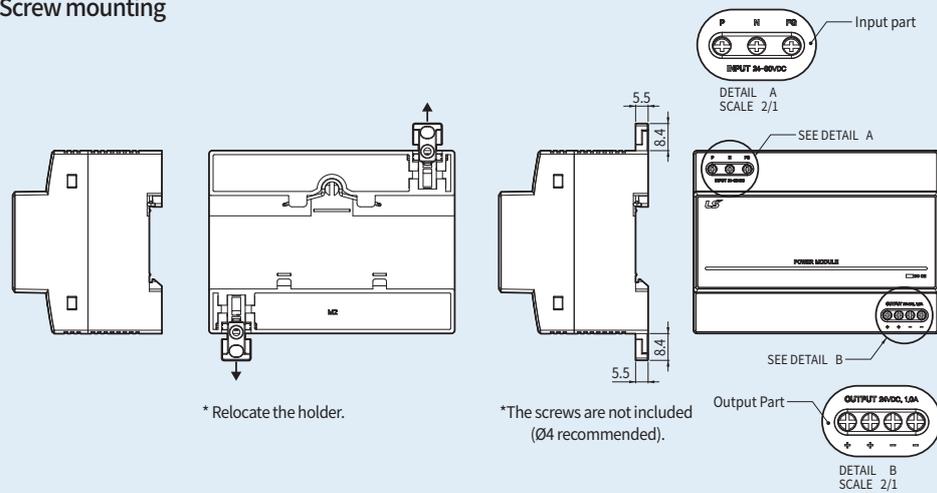

## Fixed mounting

Susol TS circuit-breakers can be directly connected to the mounting plate. If busbars or terminals are used to connect the circuit breaker on the back of the mounting plate, the appropriate safety clearances must be observed.

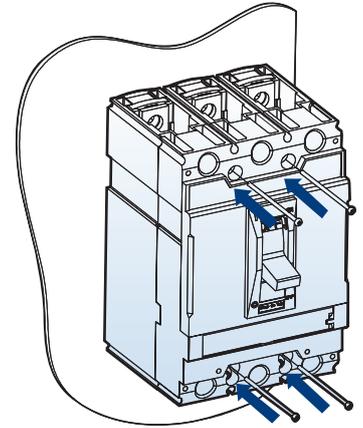

	TS100, TS160, TS250	TS400, TS630	TS800
Screw for mounting	 3Pole: 2EA(M4×75) 4Pole: 4EA(M4×75)	 3Pole: 4EA(M5×85) 4Pole: 4EA(M5×85)	 3Pole: 4EA(M6×100) 4Pole: 4EA(M6×100)
Nut for mounting	-	 3Pole: 4EA(M5) 4Pole: 4EA(M5)	 3Pole: 4EA(M6) 4Pole: 4EA(M6)
Screw for connection of terminals, Spreader	 3Pole: 6EA(M8×20) 4Pole: 8EA(M8×20)	 3Pole: 6EA(M10×30) 4Pole: 8EA(M10×30)	 3Pole: 6EA(M12×35) 4Pole: 8EA(M12×35)
	Torque: Max 147kgf·cm	Torque: Max 490kgf·cm	Torque: Max 630kgf·cm

# Mounting & Connection (100~800AF)

## Connecting terminal & conductor

Breaker type	Terminal (mm)	Torque (mm)	Conductor (mm)
TS100 TS160 TS250		<p>Max 78kgf·cm</p>	
TS400 TS630		<p>Max 490kgf·cm</p>	
TS800		<p>Max 490kgf·cm</p>	


## Safety clearance

When installing a circuit breaker, safety clearances must be kept between the breaker and panels, bars and other protection devices installed nearby. These safety clearances are depend on the ultimate breaking capacity and are defined by tests carried out in accordance with standard IEC 60947-2.

When a short circuit interruption occur, high temperatures pressures are present in and above the arc chambers of the circuit-breaker. In order to allow the pressure to be distributed and to prevent fire and arcing or short-circuit currents, safety clearances are required.


### A: Insulation distance to ceiling for installation in metallic cubicle

	A(mm)	
	415V	240V
TS100Ni, TS160Ni, TS250Ni	35	30
TS100Hi, TS160Hi, TS250Hi	35	30
TS100Li, TS160Li, TS250Li	35	30
TS400Ni, TS630Ni	60	50
TS400Hi, TS630Hi	60	50
TS400Li, TS630Li	60	50
TS800Ni	100	80
TS800Hi	100	80
TS800Li	100	80

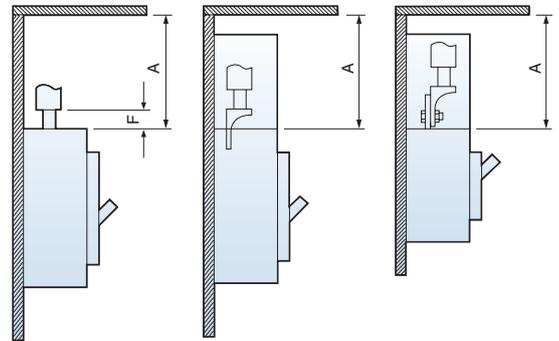

### If there is another breaker above the breaker C1 : Minimum distance for superimposed circuit breakers C : C1+ the dimension of exposed conducting part

	C1(mm)		C (mm)
	415V	240V	
TS100Ni, TS160Ni, TS250Ni	35	30	The dimension of exposed conduct
TS100Hi, TS160Hi, TS250Hi	35	30	
TS100Li, TS160Li, TS250Li	35	30	
TS400Ni, TS630Ni	60	50	
TS400Hi, TS630Hi	60	50	
TS400Li, TS630Li	60	50	
TS800Ni	100	80	
TS800Hi	100	80	
TS800Li	100	80	

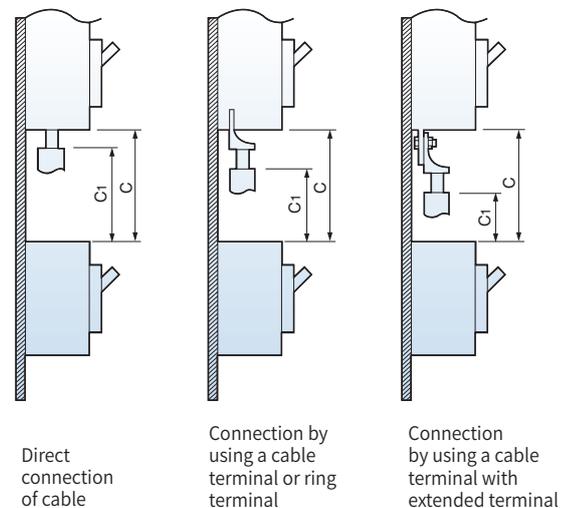


# Mounting & Connection (100~800AF)

## Safety clearance

### D: Insulated length of main terminal of circuit breaker


- D1: Connection by ring terminal after taping
- D2: Connection by bar after taping
- D3: Connection by ring terminal using insulation barrier
- D4: Connection by bar using insulation barrier

	D1 (mm)	D2 (mm)	D3 (mm)	D4 (mm)
TS100Ni, TS160Ni, TS250Ni	The dimension of exposed conduct + 20	100	The dimension of exposed conduct + 20	100
TS100Hi, TS160Hi, TS250Hi		100		100
TS100Li, TS160Li, TS250Li		100		100
TS400Ni, TS630Ni		200		200
TS400Hi, TS630Hi		200		200
TS400Li, TS630Li		200		200
TS800Ni	200	200	200	200
TS800Hi	200	200	200	200
TS800Li	200	200	200	200

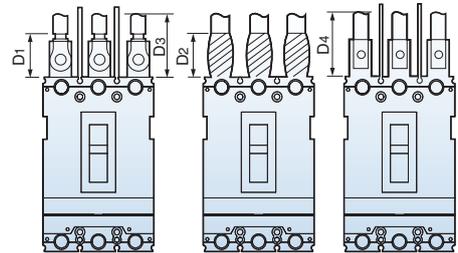


### E: Distance from a side of breaker to side plate

	E(mm)	
	415V	240V
TS100Ni, TS160Ni, TS250Ni	25	15
TS100Hi, TS160Hi, TS250Hi	25	15
TS100Li, TS160Li, TS250Li	25	15
TS400Ni, TS630Ni	20	15
TS400Hi, TS630Hi	20	15
TS400Li, TS630Li	20	15
TS800Ni	45	20
TS800Hi	45	20
TS800Li	45	20

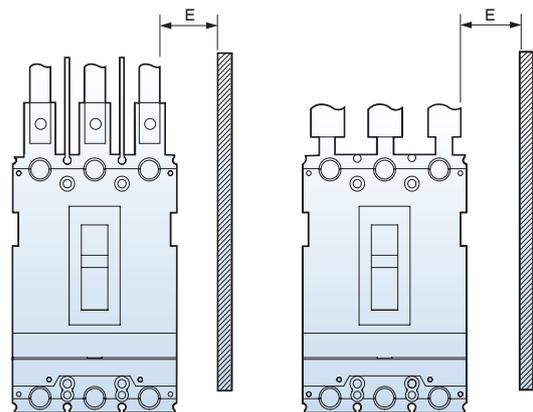


**F: The dimension of exposed conducting part**

	F (mm)
TS100Ni, TS160Ni, TS250Ni	10
TS100Hi, TS160Hi, TS250Hi	10
TS100Li, TS160Li, TS250Li	10
TS400Ni, TS630Ni	10
TS400Hi, TS630Hi	10
TS400Li, TS630Li	10
TS800Ni	10
TS800Hi	10
TS800Li	10

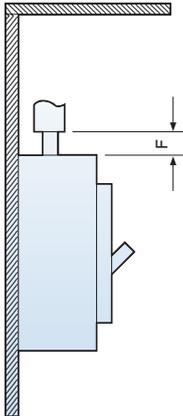

**G: Minimum center distance for two horizontally installed circuit-breakers**


	G (mm)
TS100Ni, TS160Ni, TS250Ni	0
TS100Hi, TS160Hi, TS250Hi	0
TS100Li, TS160Li, TS250Li	0
TS400Ni, TS630Ni	0
TS400Hi, TS630Hi	0
TS400Li, TS630Li	0
TS800Ni	0
TS800Hi	0
TS800Li	0

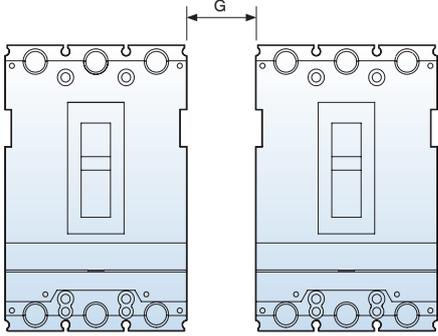


# Mounting & Connection (100~800AF)

## Example of installation


TS100Ni/Hi/Li  
TS160Ni/Hi/Li  
TS250Ni/Hi/Li

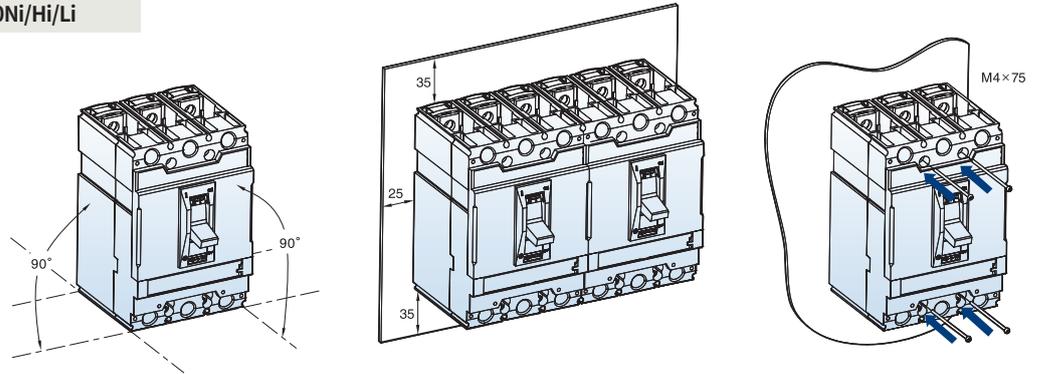


TS400Ni/Hi/Li  
TS630Ni/Hi/Li

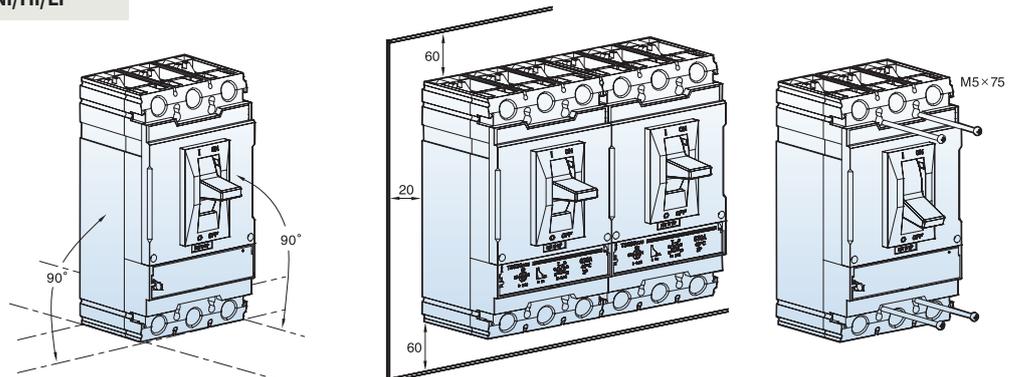


TS800Ni/Hi/Li

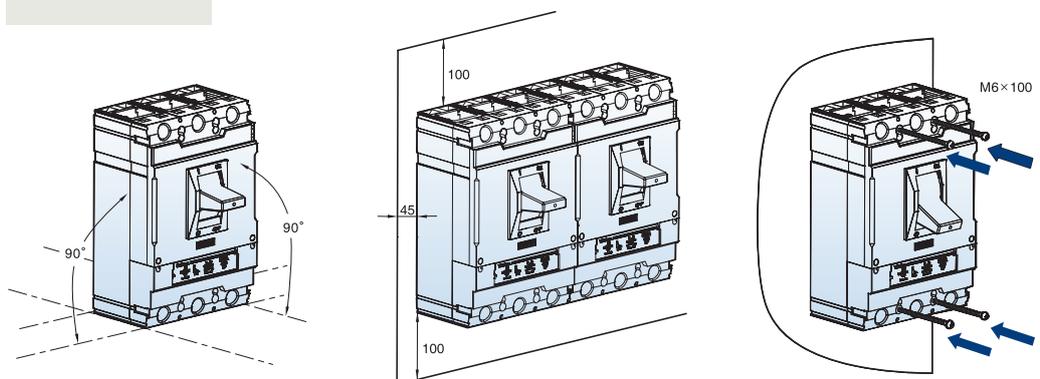


 

# Memo

  ---







**Safety Instructions**

- For your safety, please read user's manual thoroughly before operating.
- Contact the nearest authorized service facility for examination, repair, or adjustment.
- Please contact qualified service technician when you need maintenance. Do not disassemble or repair by yourself!
- Any maintenance and inspection shall be performed by the personnel having expertise concerned.



- According to The WEEE Directive, please do not discard the device with your household waste.



[www.ls-electric.com](http://www.ls-electric.com)

■ **Headquarter**

127 LS-ro (Hogye-dong) Dongan-gu, Anyang-si, Gyeonggi-Do, 14119, Korea

■ **Seoul Office**

LS Yongsan Tower, 92, Hangang-daero, Yongsan-gu, Seoul, 04386, Korea  
Tel. 82-2-2034-4916, 4684, 4429

■ **Overseas Subsidiaries**

- **LS ELECTRIC Japan Co., Ltd. (Tokyo, Japan)**  
Tel: 81-3-6268-8241 E-Mail: japan@ls-electric.com
- **LS ELECTRIC (Dalian) Co., Ltd. (Dalian, China)**  
Tel: 86-411-8730-5872 E-Mail: china.dalian@lselectric.com.cn
- **LS ELECTRIC (Wuxi) Co., Ltd. (Wuxi, China)**  
Tel: 86-510-6851-6666 E-Mail: china.wuxi@lselectric.com.cn
- **LS ELECTRIC Vietnam Co., Ltd. (Hanoi, Vietnam)**  
Tel: 84-93-631-4099 E-Mail: vietnam@ls-electric.com
- **LS ELECTRIC Middle East FZE (Dubai, U.A.E.)**  
Tel: 971-4-886-5360 E-Mail: middleeast@ls-electric.com
- **LS ELECTRIC Europe B.V. (Hoofddorp, Netherlands)**  
Tel: 31-20-654-1424 E-Mail: europartner@ls-electric.com
- **LS ELECTRIC America Inc. (Chicago, USA)**  
Tel: 1-800-891-2941 E-Mail: sales.us@lselectricamerica.com
- **LS ENERGY SOLUTIONS LLC (Charlotte, USA)**  
Tel: 1-704-587-4051 E-Mail: cmfeldman@ls-es.com
- **LS ELECTRIC Turkey Co., Ltd. (Istanbul, Turkey)**  
Tel: 90-212-806-1252 E-Mail: turkey@ls-electric.com

■ **Overseas Branches**

- **LS ELECTRIC Tokyo Office (Japan)**  
Tel: 81-3-6268-8241 E-Mail: tokyo@ls-electric.com
- **LS ELECTRIC Beijing Office (China)**  
Tel: 86-10-5095-1631 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Shanghai Office (China)**  
Tel: 86-21-5237-9977 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Guangzhou Office (China)**  
Tel: 86-20-3818-2883 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Chengdu Office (China)**  
Tel: 86-28-8670-3201 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Qingdao Office (China)**  
Tel: 86-532-8501-2065 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Nanjing Office (China)**  
Tel: 86-25-8467-0005 E-Mail: china@lselectric.com.cn
- **LS ELECTRIC Bangkok Office (Thailand)**  
Tel: 66-90-950-9683 E-Mail: thailand@ls-electric.com
- **LS ELECTRIC Jakarta Office (Indonesia)**  
Tel: 62-21-2933-7614 E-Mail: indonesia@ls-electric.com
- **LS ELECTRIC Moscow Office (Russia)**  
Tel: 7-499-682-6130 E-Mail: info@lselectric-ru.com
- **LS ELECTRIC America Western Office (Irvine, USA)**  
Tel: 1-949-333-3140 E-Mail: america@ls-electric.com
- **LS ELECTRIC India Office (India)**  
Tel: 91-80-6142-9108 E-Mail: info\_india@ls-electric.com
- **LS ELECTRIC Singapore Office (Singapore)**  
Tel: 65-6958-8162 E-Mail: singapore@ls-electric.com



**Technical Question or After-sales Service**

Customer Center-Quick Responsive Service, Excellent technical support | **82-1644-5481**